


# PGM-FI Control System

## Troubleshooting Flow Chart — IMA Sensor

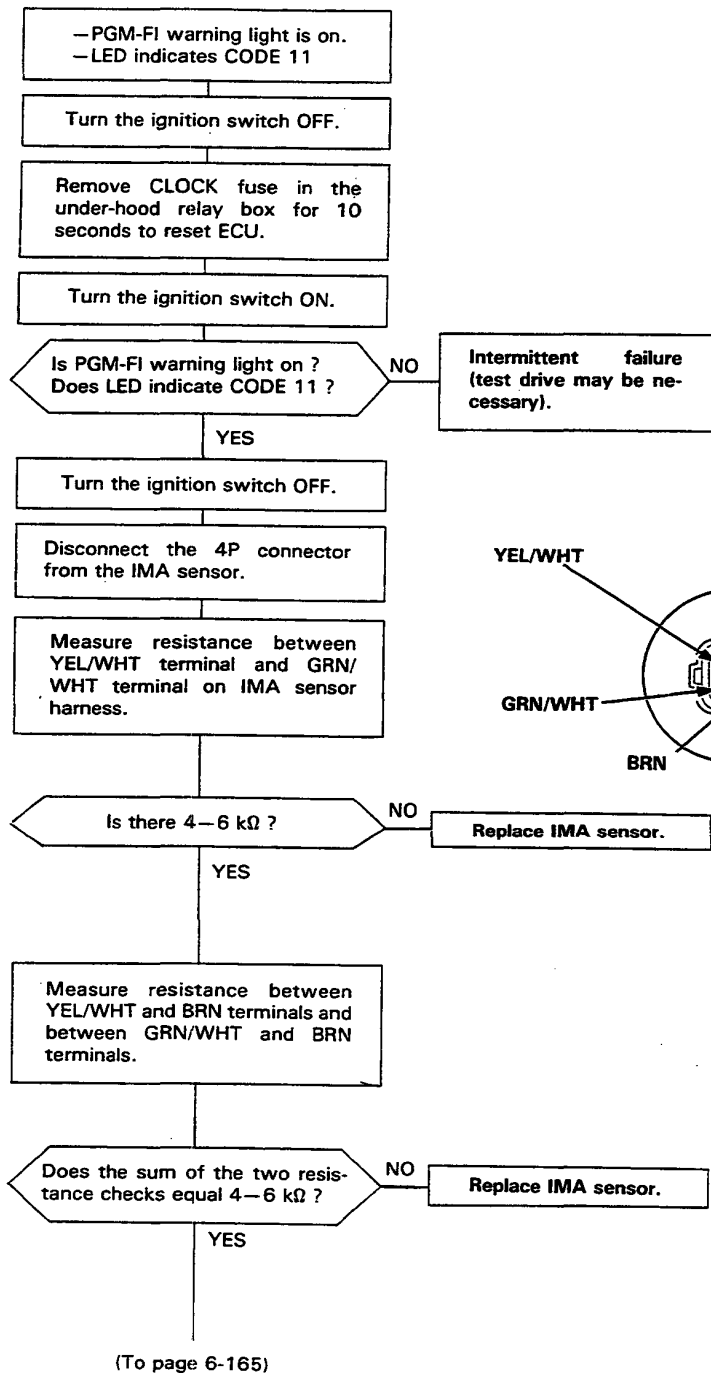


Self-diagnosis LED indicator blinks eleven times: Most likely a problem in the IMA Sensor circuit.



YEL/WHT

GRN/WHT

BRN

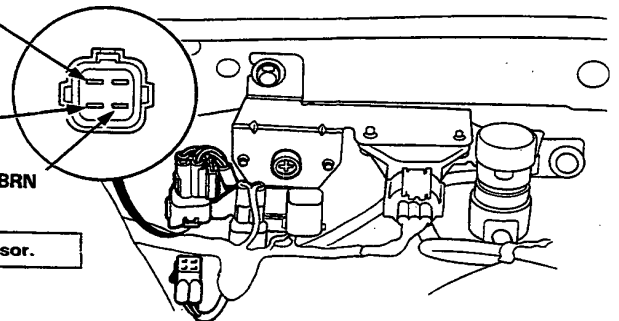



(From page 6-164)

