

Stereo Sound System


Power Antenna Motor Test

1. Remove the trunk side trim panel.
2. Disconnect the 4-P connector from the motor and remove the connector from its clamp.
3. First check power to the motor at the harness pins: There should be battery voltage between the WHT/YEL (+) and BLK (-) terminals all the time. There should be battery voltage between the YEL/WHT (+) and BLK (-) terminals only with the ignition and radio switched ON.


4. Test motor operation:

FULL EXTEND: Connect battery positive to the No.3 and No.1 terminals and negative to the No.2 terminal.

RETRACTED: Then disconnect battery positive from the No.1 terminal.

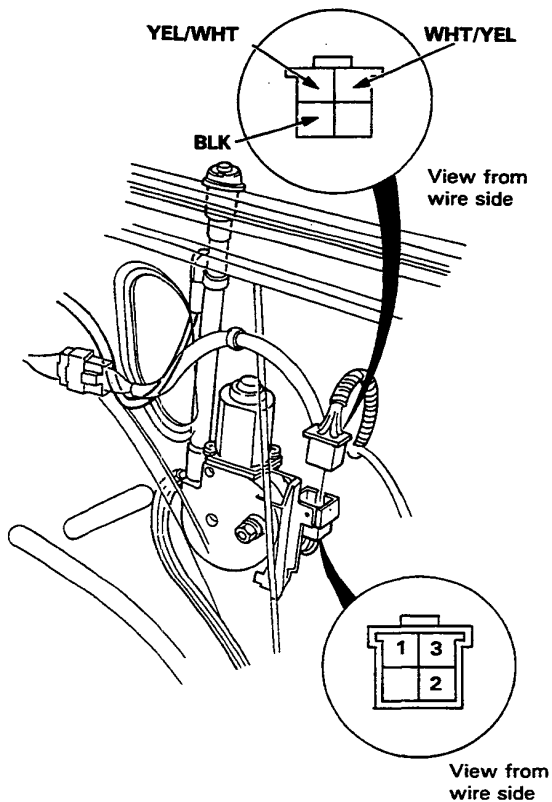


5. If the motor fails to operate properly, replace it.

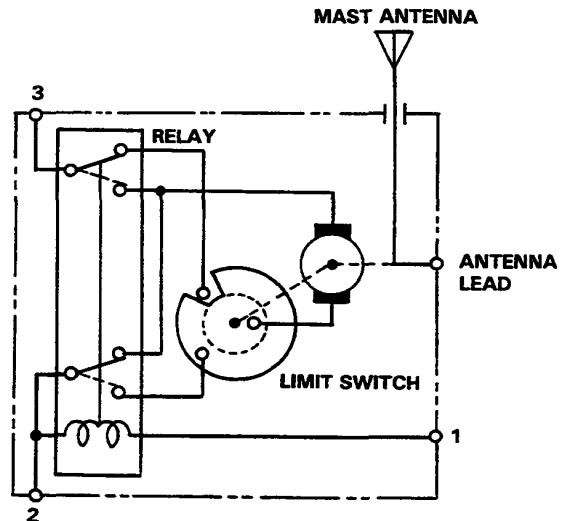



Power Antenna Motor Replacement


1. Remove the trunk side trim panel.
2. Disconnect the 4-P connector and antenna lead from the motor, then remove the special nut and mount nut to take out the motor with the mast antenna.

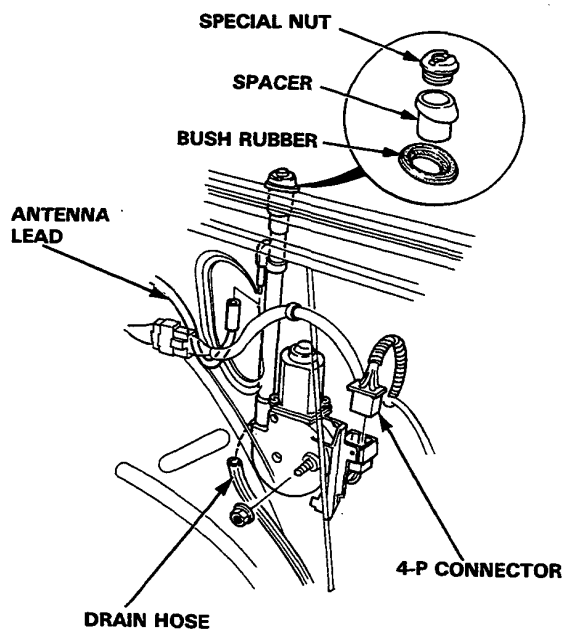

Speaker Replacement

Front Speakers:

1. Remove the door trim panel.
2. Remove the 4 screws, then disconnect the wires from the speaker.

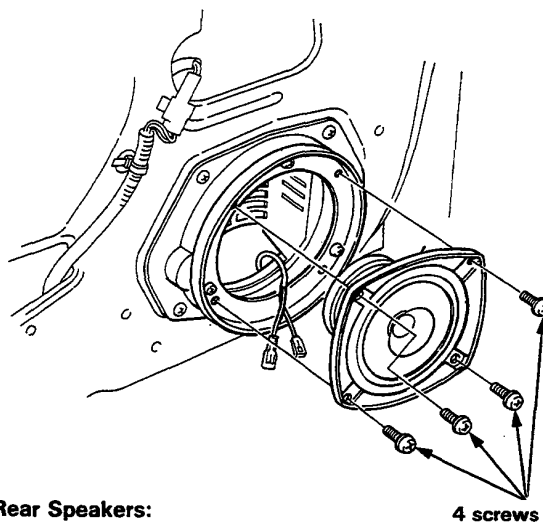

Rear Speakers:

1. Remove the speaker cover.
2. Remove the 4 screws, then disconnect the wires from the speaker.

