


# Clock


## Removal

Pull out the clock from the dashboad, then disconnect the 4-P connector from the clock.

**CAUTION:** Be careful not to damage the clock and dashboard.

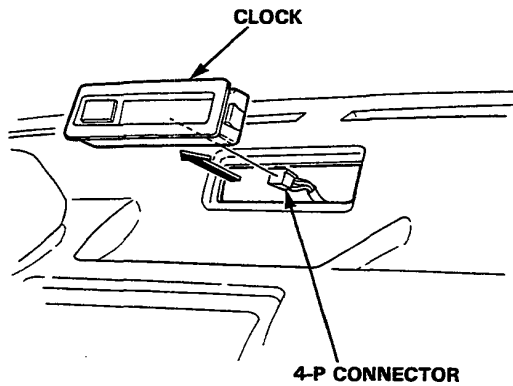

## Terminals

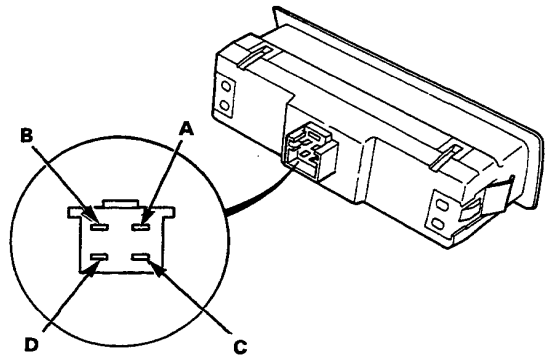

Terminal	Wire	Destination
A	WHT/YEL	Constant power (Time memory)
B	YEL	IG1 (Main clock power supply)
C	RED/BLK	Light-on signal
D	BLK	Ground