


Steering Pump

Pulley Replacement


1. Hold the pulley using a vice with soft jaws as shown.
2. Remove the pulley bolt and pulley.

CAUTION: Pulley bolt has left hand threads.

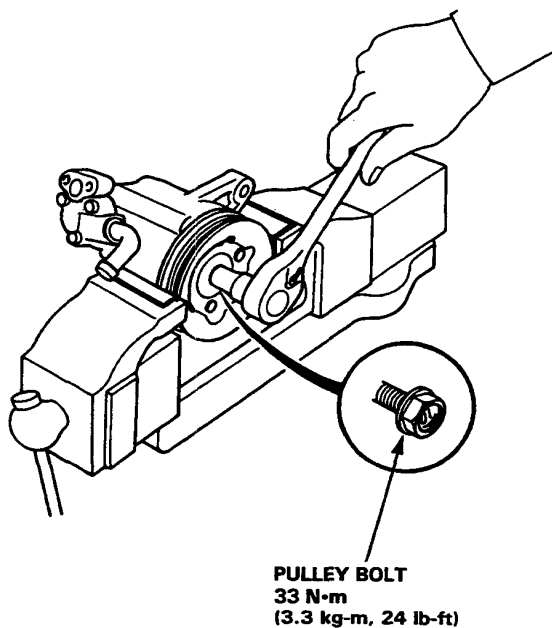

Control Valve Inspection and Replacement

1. Remove the three 6 mm bolts, then remove the port fitting.
2. Remove the valve spring and O-rings.

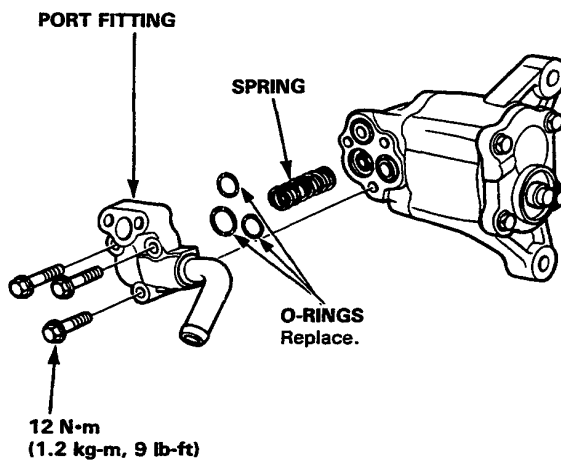

3. Remove the control valve from the pump housing.

