


Headlights

Adjustment

NOTE: Adjust the headlights to local requirements.

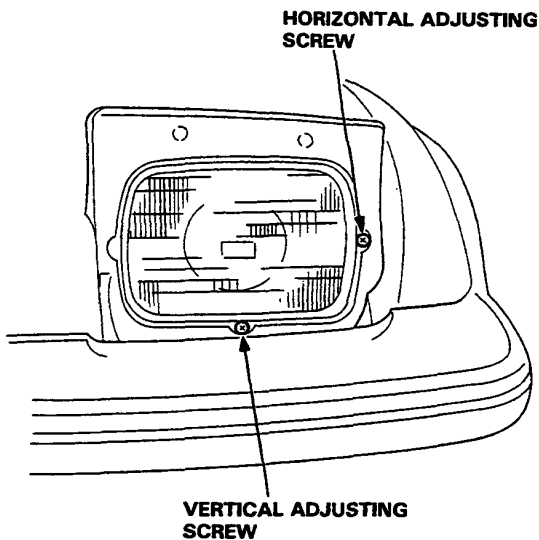


Replacement


CAUTION:

- Halogen headlights can become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.
- Do not try to replace or clean the headlights with the lights on.

1. Disconnect the ground wire from the battery negative (-) terminal, then turn the knob clockwise to raise the headlight.

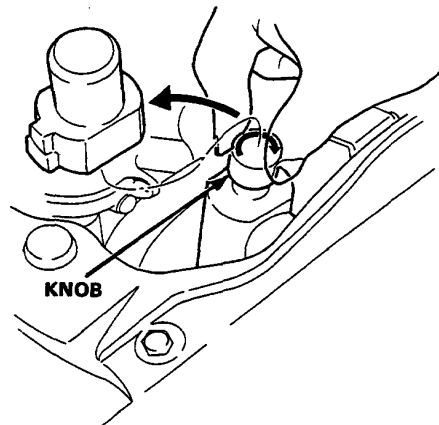

2. Remove the 4 screws and slide the headlight garnish upward to remove it.

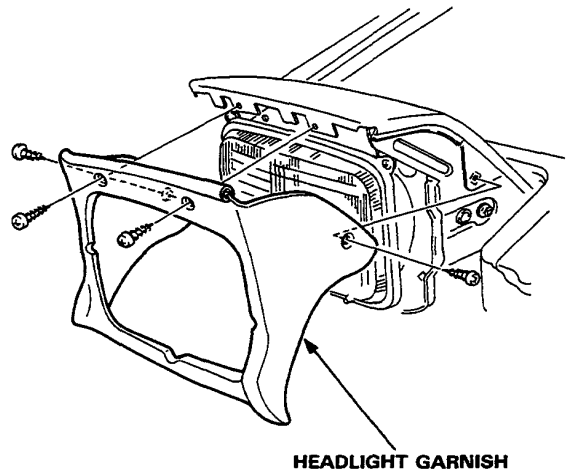




Front Fog Lights


Replacement

3. Push the headlight to the inside, slide it upwards, and remove it from the adjusting screw.

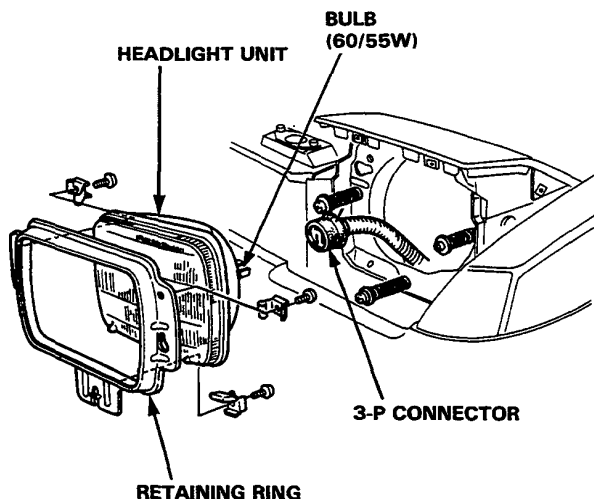


4. Disconnect the 3-P connector and remove the retaining ring.
5. After installing the unit, adjust the headlights to local requirements.

1. Remove the front turn signal/side maker light.
2. Remove the mounting bolt, then remove the fog light and disconnect the 2-P connector from the fog light assembly.

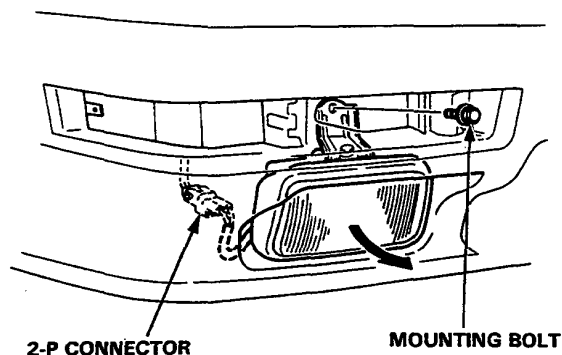

3. Remove the 2 screws behind the fog light assembly.
4. Pull out the fog light from the case, then disconnect the wires from behind the fog light.
5. Remove the retaining spring and the bulb.

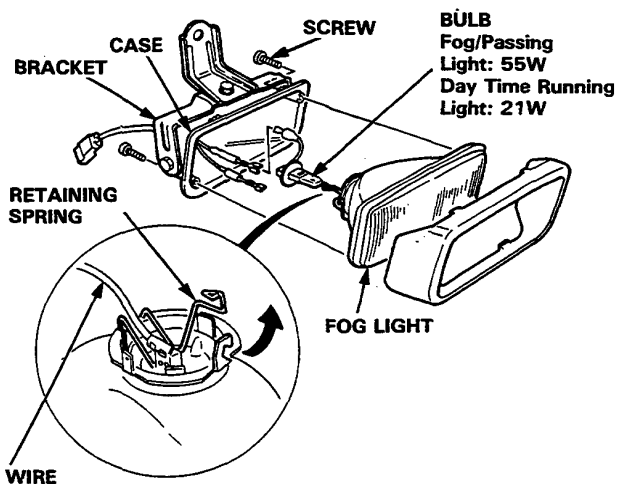

NOTE:

The case should not be removed from the bracket. If the case is removed from the bracket, the beam setting is required.

6. Install the fog light in the reverse order of removal.