


Rear Suspension

Torque Specification



CAUTION:

- Replace self-locking nuts after disassembly.
- Replace self-locking bolts if you can easily thread a nut past their nylon locking inserts.

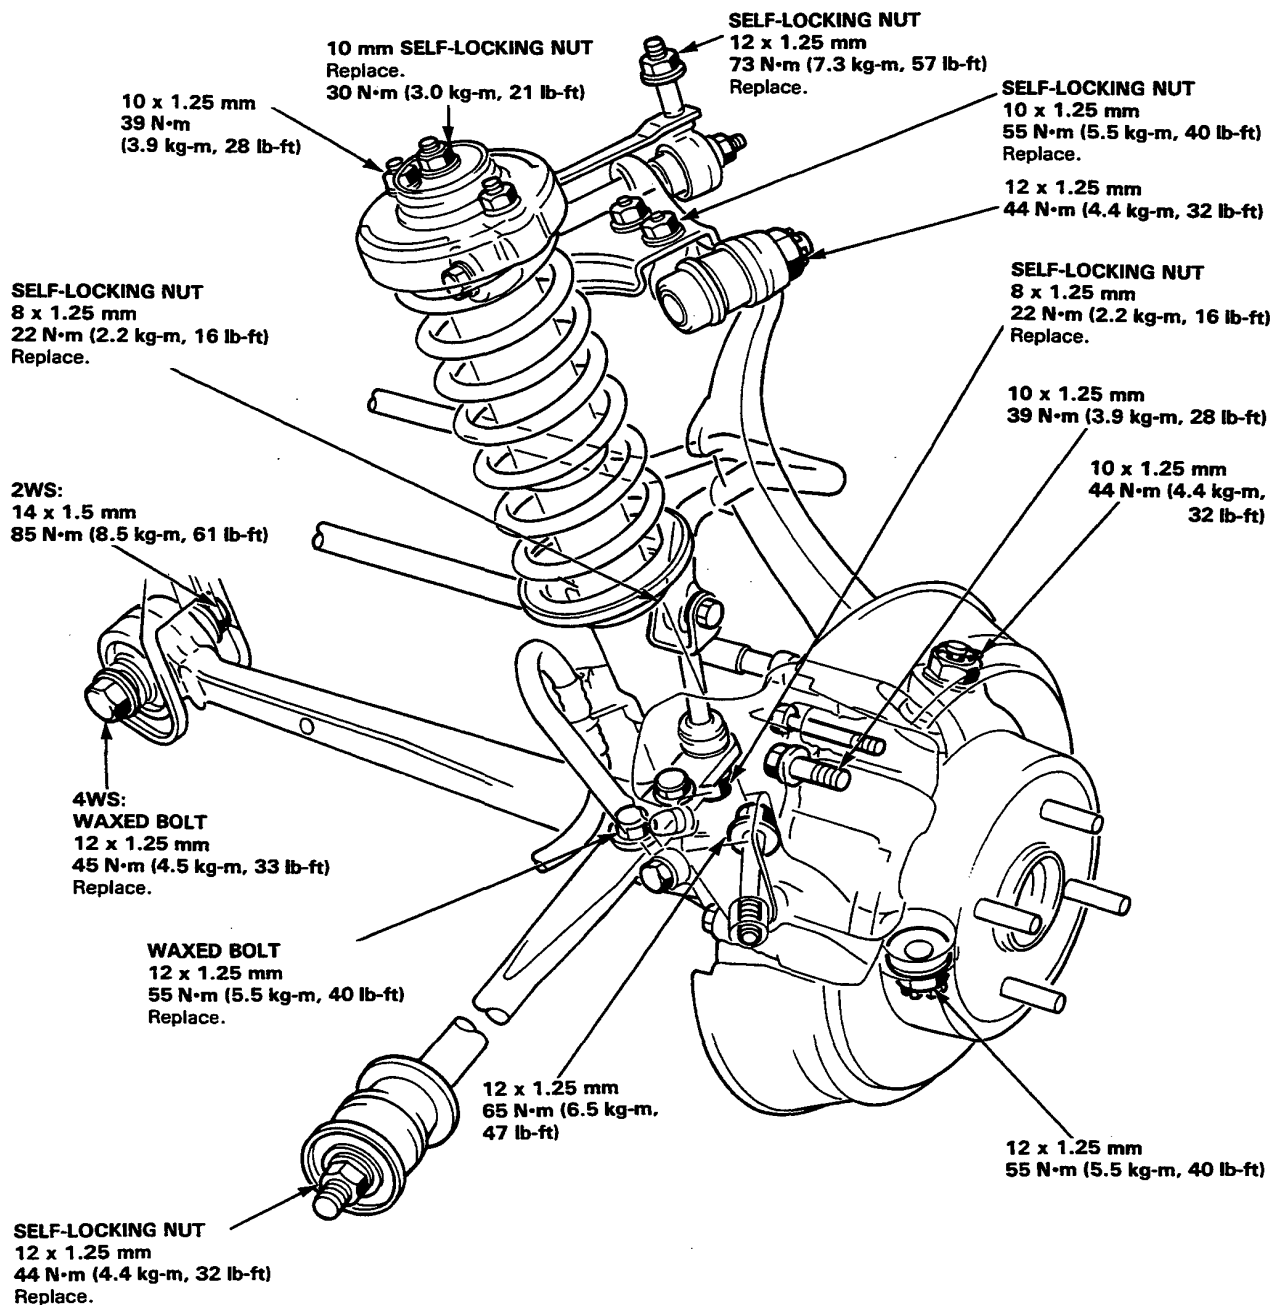

CAUTION: The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.