


# Heater Control Cables


## Air Mix Cable Adjustment

1. Slide the temperature control lever to HOT.  
LH Drive: to HOT  
RH Drive: to COLD
2. Turn the air mix door shaft arm to the left: LH Drive, or right: RH Drive and connect the end of the cable to the arm.
3. Gently slide the cable outer housing back from end—enough to take up any slack in the cable, but not enough to make temperature control lever move—then snap the cable housing into the clamp.

LH Drive:

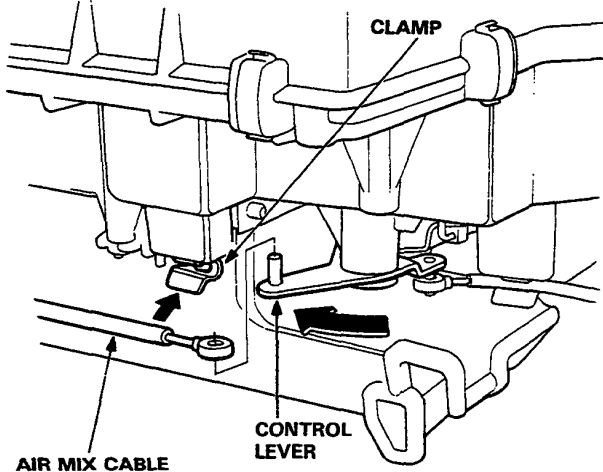


RH Drive:

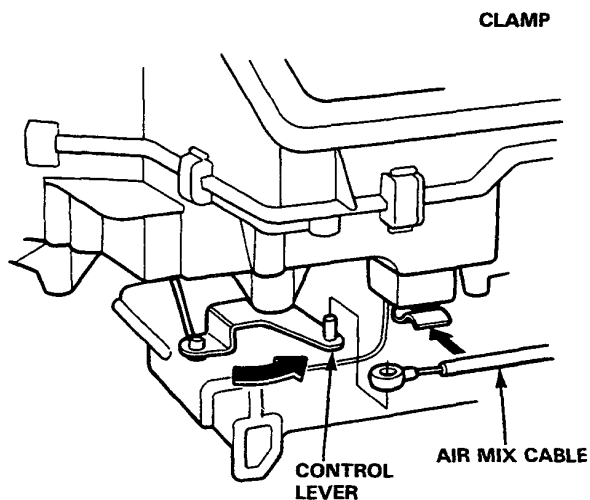

NOTE: Heater valve cable should be adjusted if the air mix cable has been disconnected.

## Heater Valve Cable Adjustment

1. Slide the temperature control lever to HOT.
2. Connect the heater valve cable end to the arm and snap the cable housing into the clamp making sure that the arm turns full stroke smoothly.

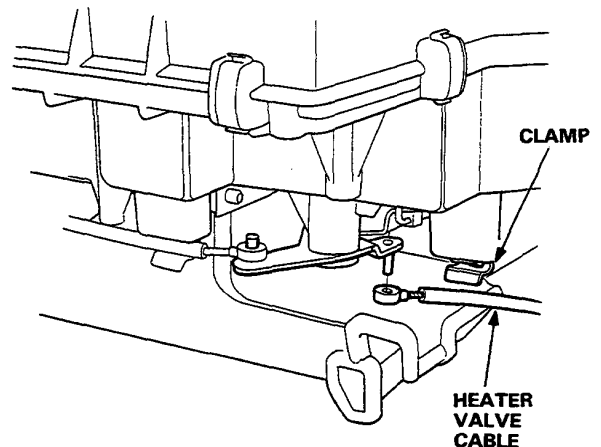

3. Slide the temperature control lever back to COLD.
4. Turn the heater valve arm to close and connect the cable end to the arm.
5. Gently slide the cable housing back from end—enough to take up any slack in the cable, but not enough to make the temperature control lever move—then hold the cable housing to snap the clamp.

