

Computer Vision with Raspberry Pi and OpenCV

A. Giavaras

Contents

1	Robot Vision Using a Pi Camera and OpenCV	2
1.1	Set up the Raspberry Pi Camera	2
1.2	Wire the Camera	2
1.3	Activate the Camera	3
1.3.1	Get a Picture from the Pi	3
1.4	Setting up OpenCV	4
1.5	Install OpenCV	4

1 Robot Vision Using a Pi Camera and OpenCV

Giving a robot the ability to see things allows it to behave in ways to which humans relate well. Computer vision is an area that much research is currently devoted to, but some of the basics are already available for use in our own code, with the Pi Camera and a little bit of work. In this section, we will use the robot and camera to drive to objects.

- Setting up a Raspberry Pi Camera on your robot, in terms of both software and hardware
- Use Flask to create a web server to see what the robot sees on our laptop
- Revisiting color models and learning how to mask images with them.
- Using contours to detect the largest blob of color in an image and pointing the robot at it
- Using Haar cascades to detect faces, and pointing the pan-and-tilt mechanism at them

1.1 Set up the Raspberry Pi Camera

We will first attach the camera to the pan-and-tilt assembly. We can then use a longer cable to wire the camera into the Pi.

1.2 Wire the Camera

The Raspberry Pi has a slot specifically for the camera, the camera cable fits into this, see Figure 1. We will be wiring our camera into this slot.

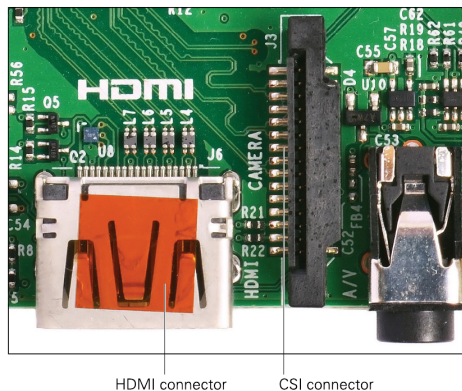


Fig. 1: CSI and HDMI connectors.

Remark 1.1. Troubleshoot

See

<https://www.techcoil.com/blog/connect-raspberry-pi-camera-module-raspberry-pi-2-raspberry>
on how to connect the raspberry pi camera module using the long 300 mm cable.

1.3 Activate the Camera

In this section, we will set up the camera, activating it in Raspbian and getting a test picture.

Power up the Pi on external power (that is, plugged into a USB wall adapter) for this operation, and log in via PuTTY. At the Terminal, type the following:

```
sudo raspi-config
```

In `raspi-config`, select the **5 Interfacing Options** option, and then select P1 Camera. You will then be asked if you would like the camera interface to be enabled. Select Yes and Ok, then Finish. If you are asked to reboot at this point, answer Yes.

1.3.1 Get a Picture from the Pi

Now that we enabled the camera, the first thing we need to do, is to confirm that our setup was successful. Thus, we will use the Pi camera to take a picture for us. This will check whether all the connections are good or not. If there are problems detecting the camera, please go back and check that the cable connection is correct, that you have installed picamera, and that you have enabled the Raspberry Pi camera in `raspi-config`.

Reconnect to the Raspberry Pi with PuTTY, and type the following to get a picture:

```
raspistill -o test.jpg
```

`raspistill` takes a still image, and the `-o` parameter tells it to store that image in `test.jpg`.

We can use the FileZilla client (see appendix) to download this image and verify it on our computer.

1.4 Setting up OpenCV

1.5 Install OpenCV

Remark 1.2. Have a look at the following links should you have problems in setting up OpenCV in Raspberry Pi <https://blog.piwheels.org/how-to-work-out-the-missing-dependencies-for-a-python-package/>