
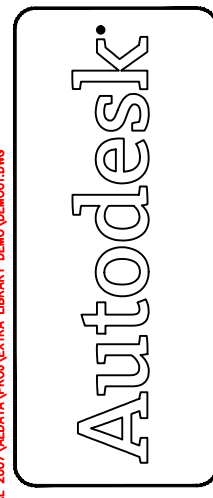
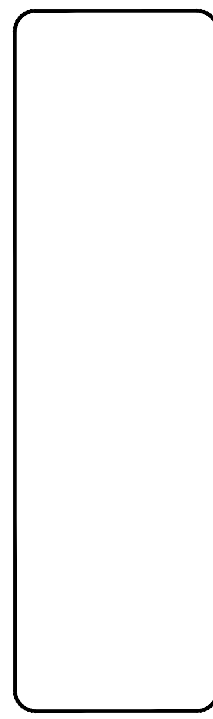


NOTE: DHT11 ELEGOO PIN WIRING IS DIFFERENT FROM OTHER DHT11

5V and GND1 BUS IS BREADBOARD

STEPPER DRIVER HAS WIRING FOR 12V IF MORE TORQUE IS NEEDED. IF USING 12V TURN OFF INPUTS (MOTOR WILL GET HOT)

PINOUT LIST	
Pump Relay IN	-> D52
Fan Relay IN	-> D53
Str/Rst	-> D3
STPRR	-> D12
STPRL	-> D13
LED G	-> D10
LED YL	-> D9
LED R	-> D8
STPR IN1	-> D43
STPR IN2	-> D45
STPR IN3	-> D47
STPR IN4	-> D49
DS SCL	-> P21
DS SDA	-> P20
LCD D7	-> D39
LCD D6	-> D37
LCD D5	-> D35
LCD D4	-> D33
LCD RS	-> D29
LCD E	-> D27
WTR S	-> A0
DH I/O	-> D25

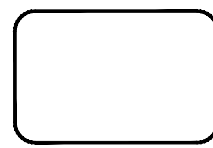

</			