

Adjusting Liftgate Opening Height


You can adjust the opening height of the liftgate to make it easier to reach or to avoid low-hanging ceilings or objects (for example, a garage door or light):

1. Open the trunk, then manually lower or raise the liftgate to the desired opening height.
2. Press and hold the button on the underside of the liftgate for three seconds until you hear a confirmation chime.



3. Confirm that you have set it to the desired height by closing the liftgate, then reopening it.

CAUTION
Depending on configuration (such as suspension height or wheel selection), your vehicle's liftgate can open up to approximately 7.5 feet (2.3 meters) high. Adjust the liftgate height to prevent it from coming into contact with low ceilings or other objects.

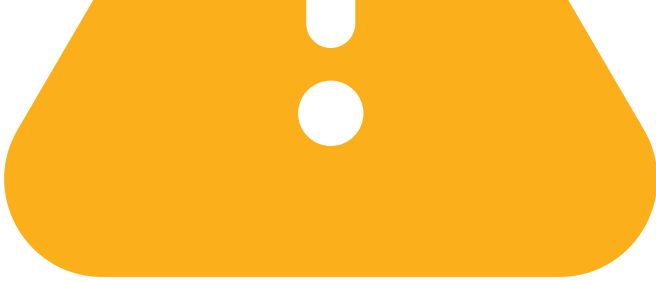

- Do It Yourself
 - General Information
 - Restarting and Powercycling
 - Connecting and Pairing
 - Wheels, Tires, and Brakes
 - Wipers and Washers
 - Climate Components
 - Front and Rear Trunk
 - Adjusting Liftgate Opening Height**
 - Opening Hood with No Power
 - Replacing Hood Struts
 - Calibrate Cameras
 - Low Voltage Battery
 - Charging

