


Last modified: 04/04/2024 01:24:41

Wheels – Set (Remove and Replace)

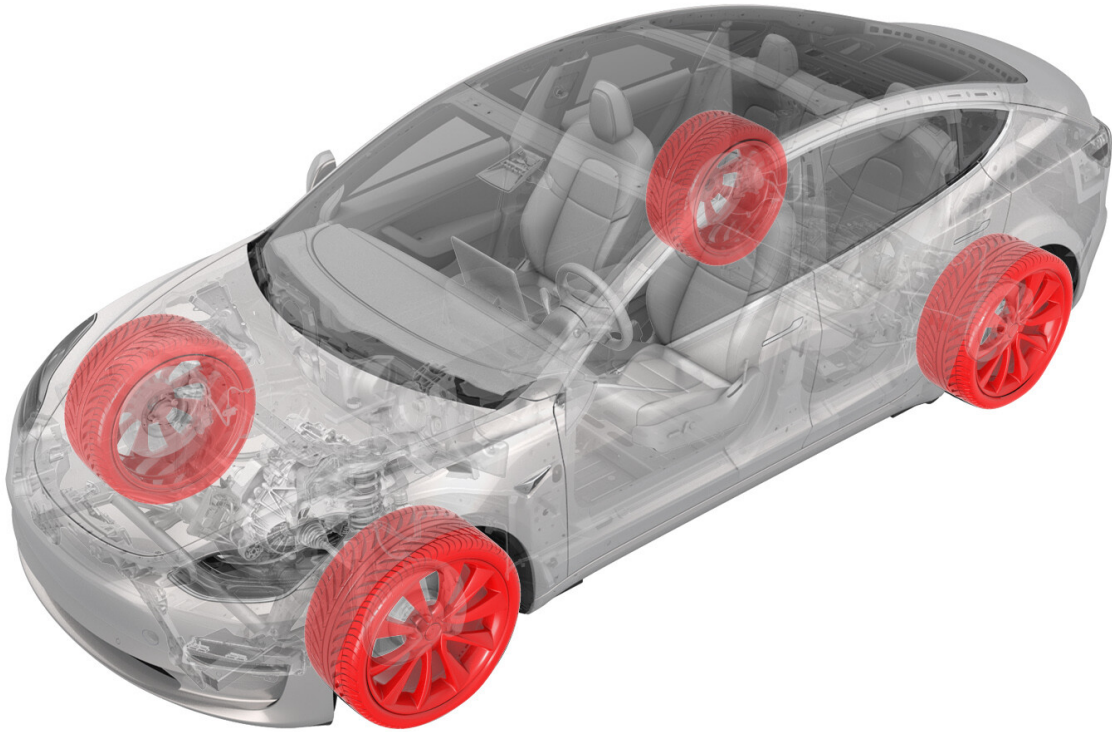

Correction Code 34012902

FRT 0.95

NOTE: Unless otherwise explicitly stated in the procedure, the above correction code and FRT reflect all of the work required to perform this procedure, including the linked procedures. **Do not stack correction codes unless explicitly told to do so.**

NOTE: See [Flat Rate Times](#) to learn more about FRTs and how they are created. To provide feedback on FRT values, email LaborTimeFeedback@tesla.com.

NOTE: See [Personal Protection](#) to make sure wearing proper PPE when performing the below procedure.

Warning

Always read and understand the tire equipment operator's manual and on-screen instructions before operating the wheel balancer or tire changer.

Warning

Always make sure to properly secure the wheel and exercise caution around all moving parts and pinch points, including the indent rollers. Additionally, secure all loose items such as hair, jewelry, and clothing, so that they will not catch on moving parts.

**Warning**

Wear appropriate personal protective equipment (PPE) including cut-resistant gloves and safety glasses when performing this procedure.

**Warning**

The machine must be operated by no more than one person at a time. Other persons must maintain a safe distance of at least three feet from equipment while in use.

**Warning**

Never use equipment that is defective or not working as expected based on the equipment operator's manual.

Remove

1. Remove the wheel. See [Wheel \(Remove and Replace\)](#) + .

Install

1. Install the wheel. See [Wheel \(Remove and Replace\)](#) + .