

Reset


The **Reset** menu contains links to the following options:

- [Device Reboot](#) on page 220
- [Factory Default](#) on page 221

Device Reboot

Use the Device Reboot page to reboot the GS108T or GS110TP.

To access the Device Reboot page, click **Maintenance** > **Reset** > **Device Reboot**.

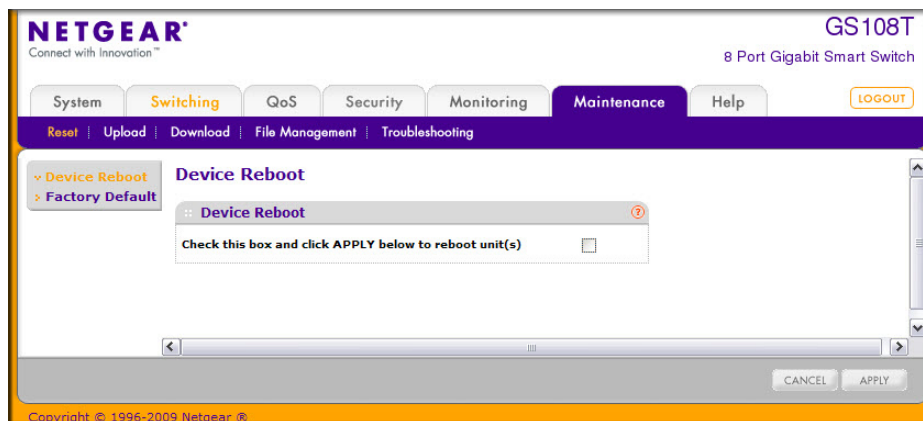

To reboot the switch:


1. Select the check box on the page.
2. Click **Apply**. The switch resets immediately. The management interface is not available until the switch completes the boot cycle. After the switch resets, the login screen appears.

Factory Default

Use the Factory Default page to reset the system configuration to the factory default values.

Note: If you reset the switch to the default configuration, the IP address is reset to 192.168.0.239, and the DHCP client is enabled. If you lose network connectivity after you reset the switch to the factory defaults, see [Connecting the Switch to the Network](#) on page 11 .

To access the Factory Defaults page, click **Maintenance** > **Reset** > **Factory Default**.

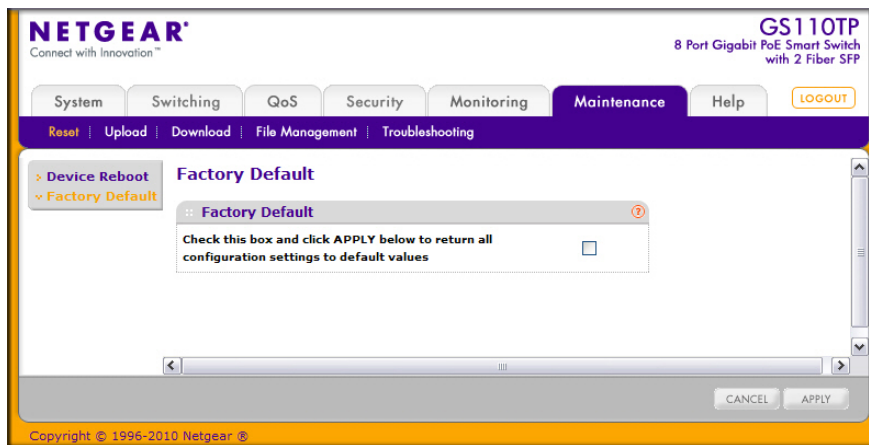

To reset the switch to the factory default settings:

1. Select the check box on the page.
2. Click **Apply**. The switch resets immediately.