



DELTA CONNECTION

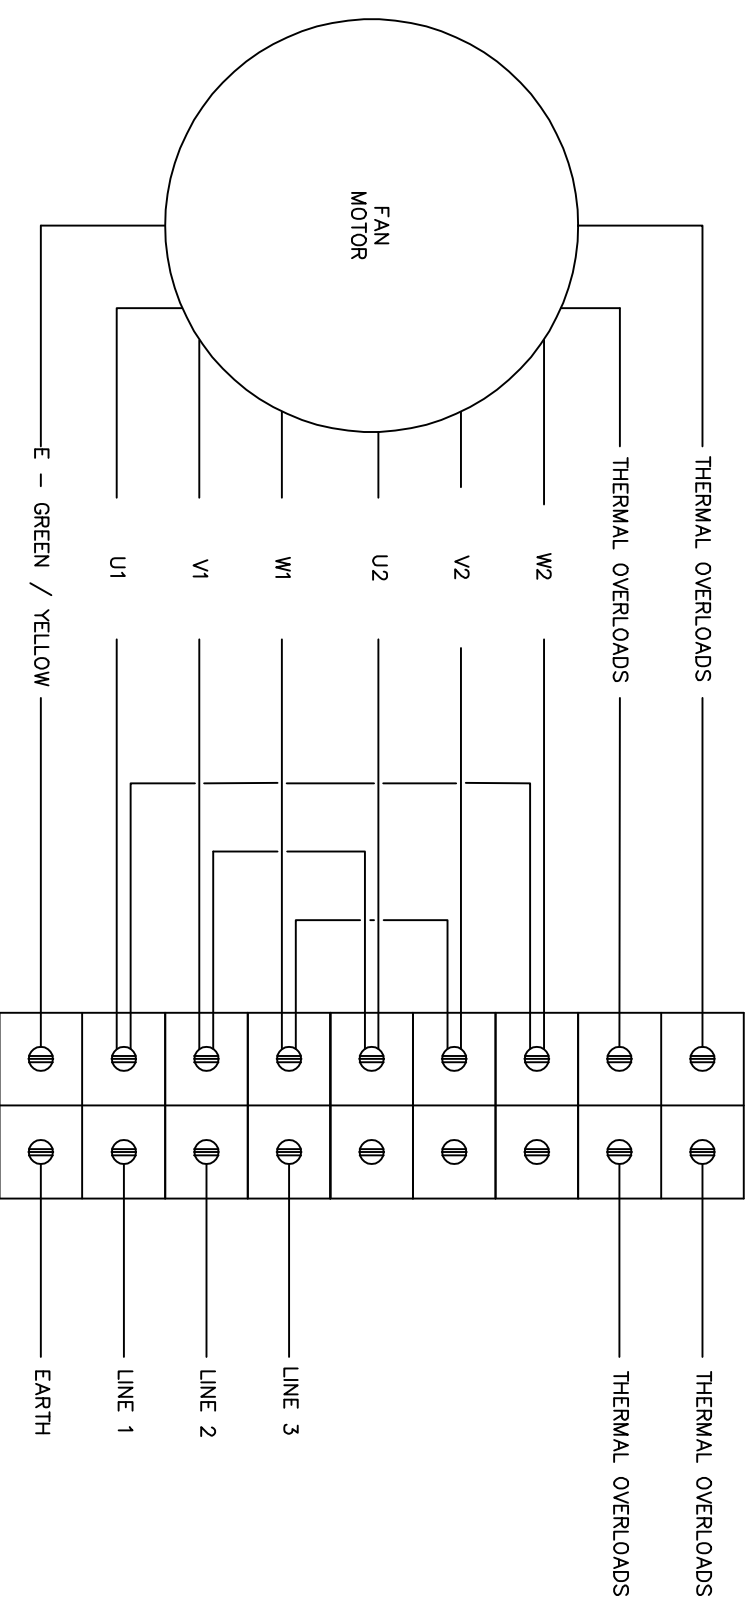

NOTE:

1. WIRE IN EITHER DELTA OR STAR CONNECTIONS. NOT BOTH
3. CHECK ROTATION OF UNIT IS AS PER LABEL ON FAN (OR WARRANTY IS VOID)
4. CHANGE ROTATION OF DIRECTION BY INTERCHANGING 2 PHASES
5. PLEASE ENSURE THAT THERMAL OVERLOAD IS CONNECTED (OR WARRANTY IS VOID)

STAR CONNECTION

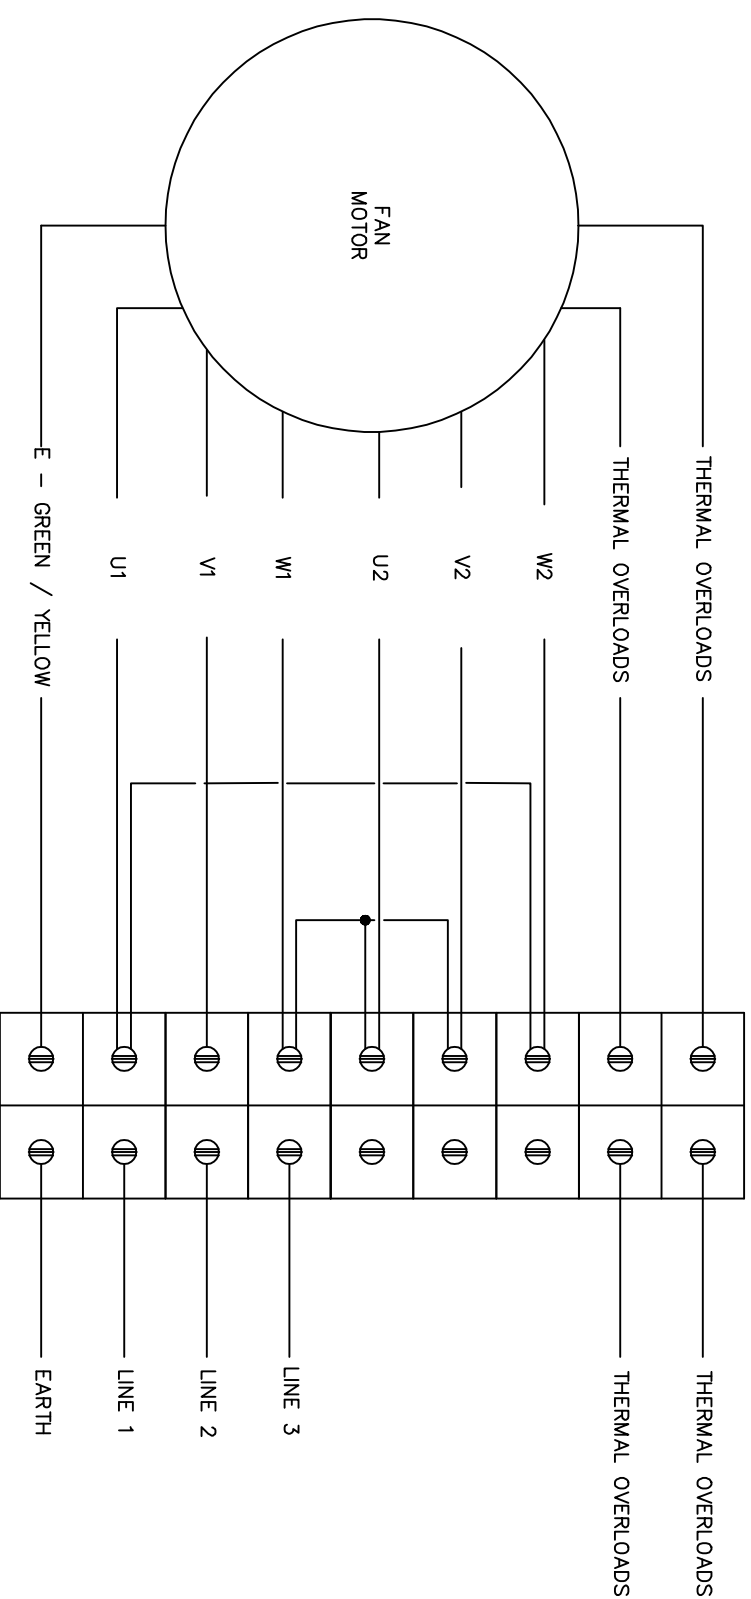

MODELS
* AR350-400MM, 3 PHASE
* WP630, 3 PHASE

[illegible]