


myMotionLED

Firmware Update Guide


- 1) Open a browser to the Github repository and download the latest firmware release.

<https://github.com/Crusher-Glockman34/myMotionLED>


[Click Me](#)

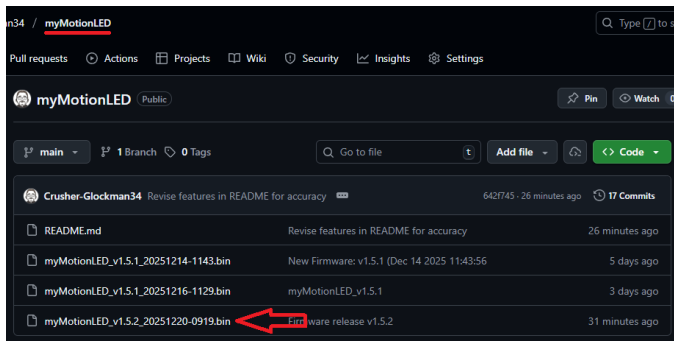


- 2) After you've downloaded the latest firmware and saved it to your device, open the browser tab to the main page of the myMotionLED device. Select the Hamburger on the top right of the page, then select "Update Firmware" from the menu.

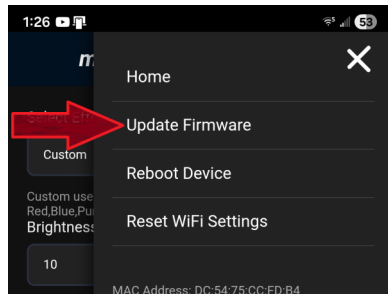


- 3) When prompted for a username and password enter admin & admin1234 and select "Sign in".

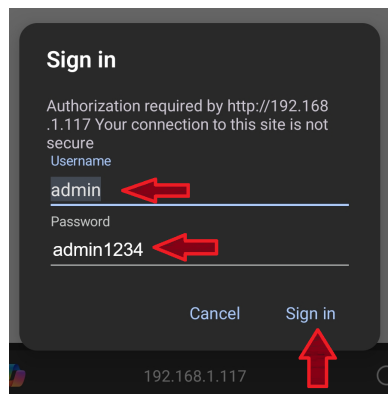

- 4) Browse to the file you downloaded in step 1 and select it. The file will upload and flash the new firmware onto your device.

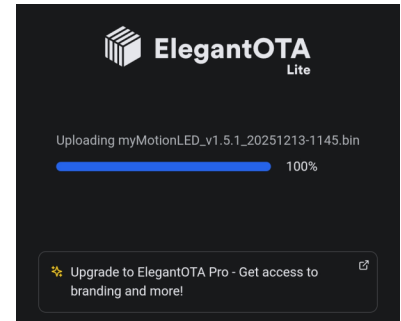

- 5) When the file has been uploaded 100% select the back button in your browser and select Reboot Device from the Hamburger menu.

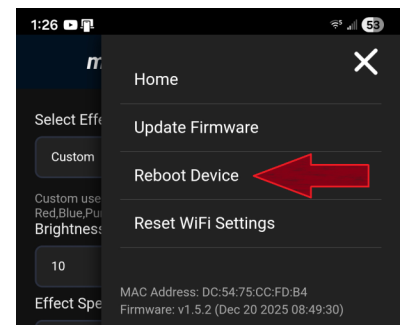

- 6) Click the X on the upper right to close the menu. Give the device about 20-30 seconds to reboot then refresh your browser. To confirm the firmware update you can open the Hamburger menu and compare the firmware version there to the file you downloaded.

