


DTC	RrACSW, FACE	Rear Room Temperature Sensor Circuit
-----	--------------	--------------------------------------

CIRCUIT DESCRIPTION

This sensor detects the temperature inside the cabin and sends the appropriate signals to the A/C amplifier.


Blinking light	Detection Item	Trouble Area
RrACSW FACE	Open or short in rear room temperature sensor circuit.	<ul style="list-style-type: none"><li>• Rear room temperature sensor.</li><li>• Harness or connector between rear room temperature sensor and A/C amplifier.</li><li>• Rear A/C amplifier.</li></ul>

WIRING DIAGRAM

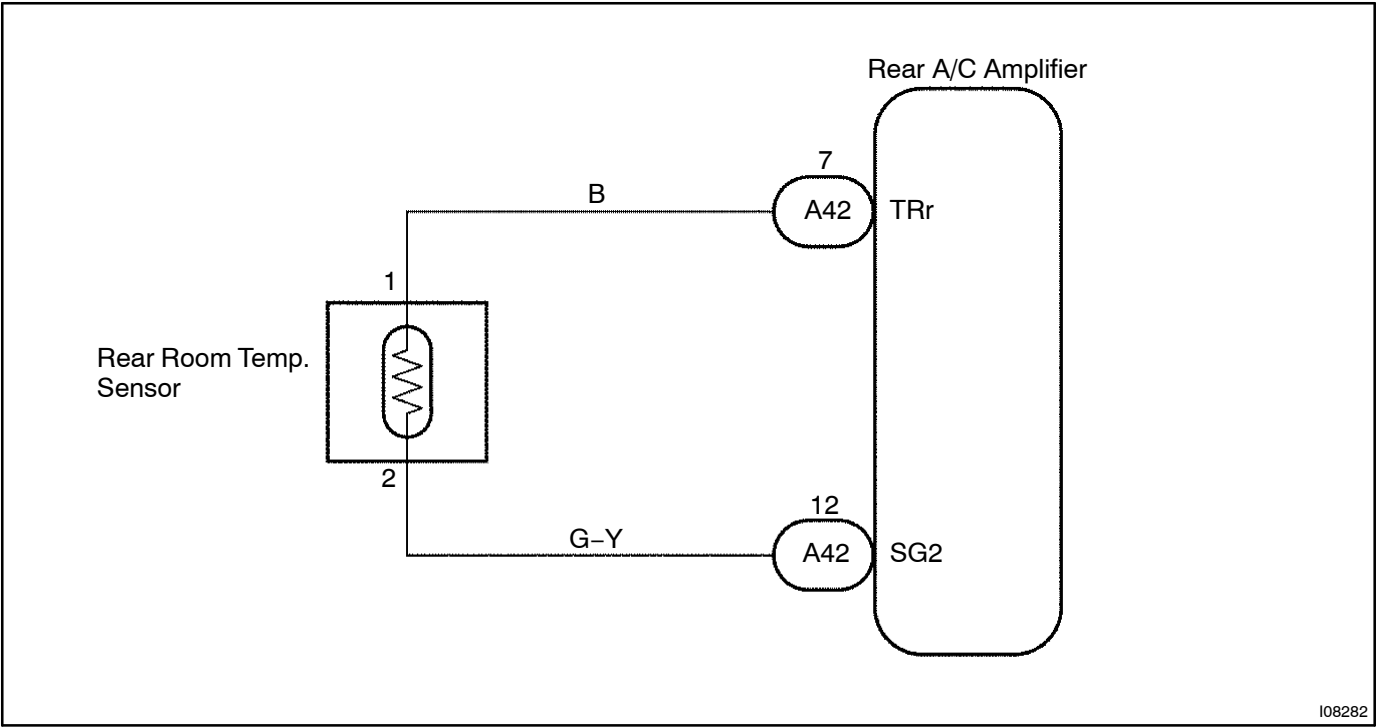

# INSPECTION PROCEDURE

1	Check voltage between terminals TRr and SG2 of A/C amplifier connector.
---	---

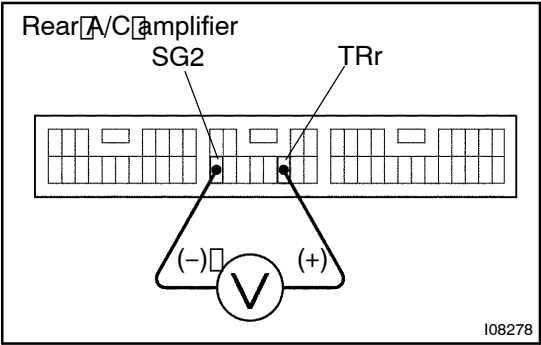

## PREPARATION:

Remove rear A/C amplifier with connectors still connected.

## CHECK:

- Turn ignition switch ON.
- Measure voltage between terminals TRr and SG2 of rear A/C amplifier connector at each temperature.

## OK:

### Voltage

at 25°C (77°F) 1.8 - 2.2V

at 40°C (104°F) 1.2 - 1.6V


## HINT:

As the temperature increases, the voltage decreases.

NG	Go to step 3.
----	---------------

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-859). However, if RrACSW and FACE indicator light is light up, check and replace A/C amplifier.
---

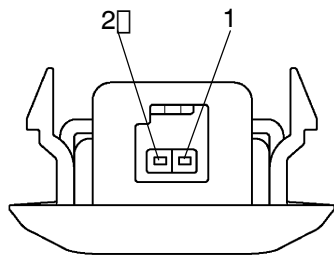**2 Check rear room temperature sensor.**

108309

**PREPARATION:**

Disconnect rear room temperature sensor connector.

**CHECK:**

Measure resistance between terminals 1 and 2 of room temperature sensor connector at each temperature.

**OK:****Resistance**

at 25°C (77°F) 1.65 – 1.75 kΩ

at 50°C (122°F) 0.55 – 0.65 kΩ

**HINT:**

As the temperature increases, the resistance decreases.

**NG****Replace rear room temperature sensor.****OK****3 Check harness and connector between rear A/C amplifier and rear room temperature sensor (See page IN-35).****NG****Repair or replace harness or connector.****OK****Check and replace A/C amplifier.**