


E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD : Swing Type]

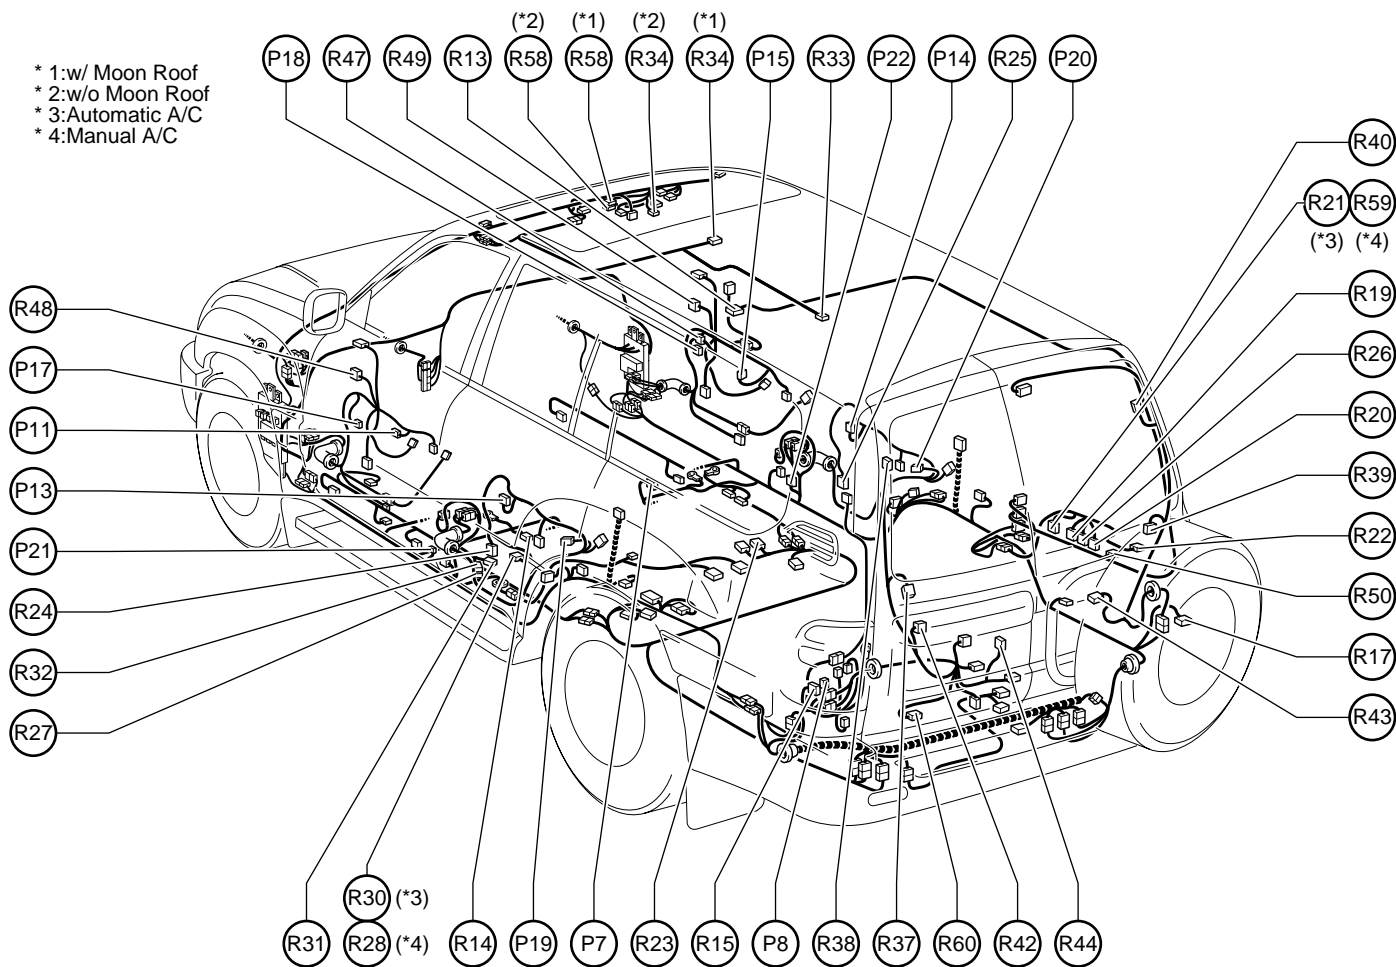

- P 7 Parking Brake SW
- P 8 Power Outlet (Luggage Compartment)
- P 11 Power Window Control SW Front LH
- P 13 Power Window Control SW Rear LH
- P 14 Power Window Control SW Rear RH
- P 15 Power Window Master SW
- P 17 Power Window Motor Front LH
- P 18 Power Window Motor Front RH
- P 19 Power Window Motor Rear LH
- P 20 Power Window Motor Rear RH
- P 21 Pretensioner LH
- P 22 Pretensioner RH

- R13 Rear A/C Control SW
- R14 Rear Air Mix Control Servo Motor
- R15 Rear Combination Light LH
- R17 Rear Combination Light RH
- R19 Rear Cooler Blower Motor
- R20 Rear Cooler Magnetic Valve
- R21 Rear Cooler Power Transistor
- R22 Rear Cooler Relay
- R23 Rear Diff. Lock Motor
- R24 Rear Door Speaker LH

- R25 Rear Door Speaker RH
- R26 Rear Evaporator Temp. Sensor
- R27 Rear Heater Blower Motor
- R28 Rear Heater Blower Resistor
- R30 Rear Heater Power Transistor
- R31 Rear Heater Relay
- R32 Rear Inlet Air Temp. Sensor
- R33 Rear Interior Light
- R34 Rear Personal Light
- R37 Rear Window Defogger LH
- R38 Rear Window Defogger LH
- R39 Rear Window Defogger RH
- R40 Rear Window Defogger RH
- R42 Rear Wiper Motor LH
- R43 Rear Wiper Motor RH
- R44 Rear Wiper Relay
- R47 Remote Control Mirror ECU
- R48 Remote Control Mirror LH
- R49 Remote Control Mirror RH
- R50 Room Temp. Sensor (Rear)
- R58 Rain Sensor
- R59 Rear Cooler Blower Resistor
- R60 Rear Fog Light