



## INSTALLATION

### 1. INSTALL OIL COOLER

- (a) Clean the oil cooler contact surface on the oil cooler mounting.

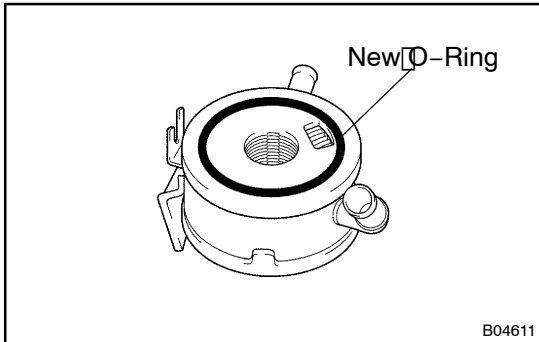

- (b) Install a new O-ring to the oil cooler.
- (c) Apply a light coat of engine oil on the threads and under the head of the union bolt.

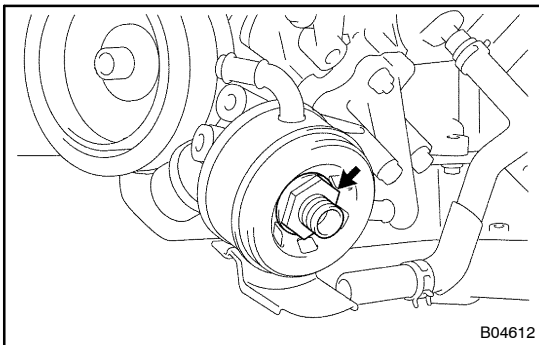

- (d) Install the plate washer and union bolt.
- Torque: 78.5 N·m (800 kgf·cm, 58 ft·lbf)**
- (e) Connect the 2 oil cooler hoses to the oil cooler.

### 2. INSTALL OIL FILTER (See page LU-2)

### 3. FILL WITH ENGINE COOLANT

### 4. START ENGINE AND CHECK FOR ENGINE COOLANT AND ENGINE OIL LEAKS.

### 5. CHECK ENGINE OIL LEVEL