


Stop Light Switch Signal Malfunction

CIRCUIT DESCRIPTION

The purpose of this circuit is to prevent the engine from stalling, while driving in lock-up condition, when brakes are suddenly applied.

When the brake pedal is operated, this switch sends a signal to Engine and ECT ECU. Then the Engine and ECT ECU cancels operation of the lock-up clutch while braking is in progress.

WIRING DIAGRAM

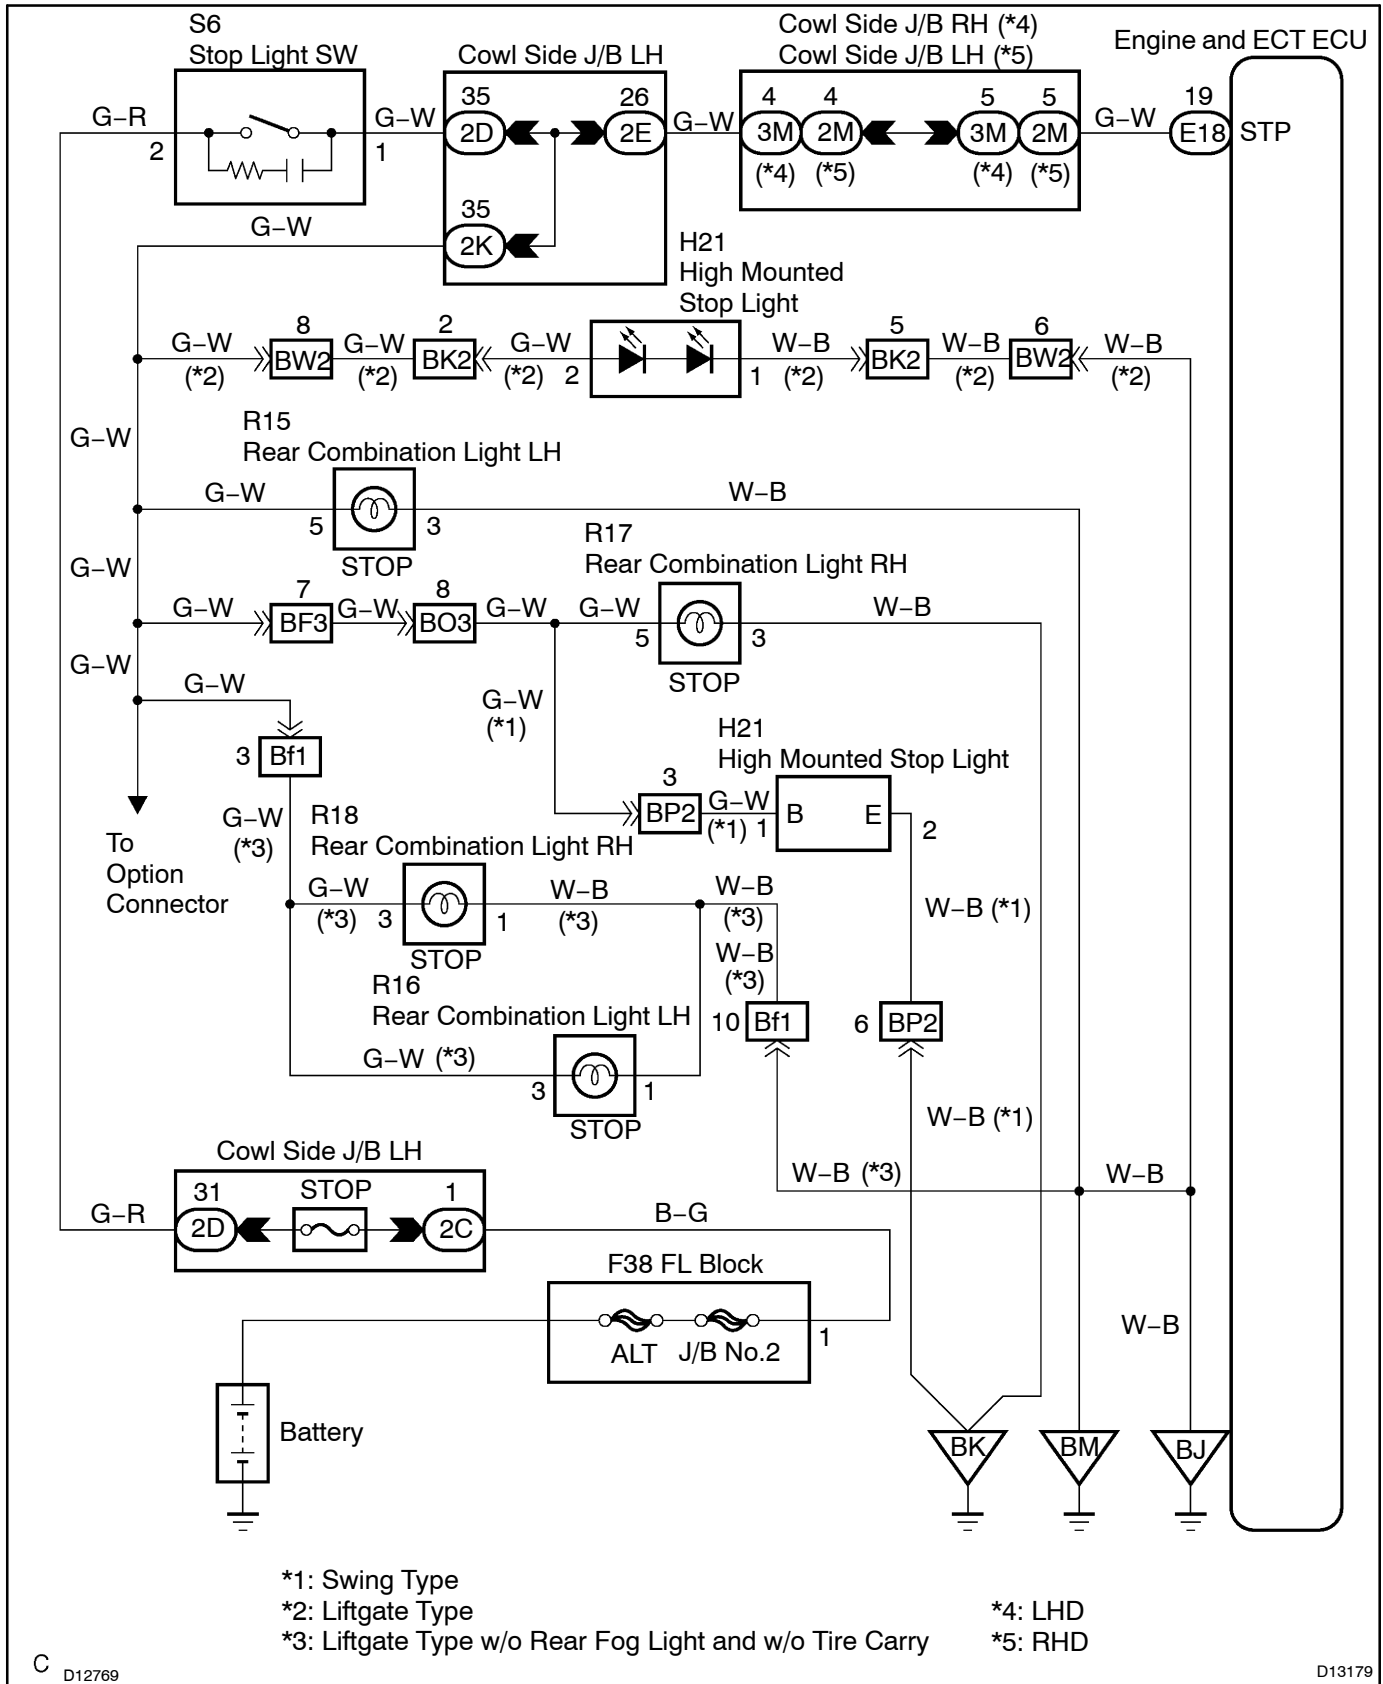

INSPECTION PROCEDURE

1 Check stop light switch (See Pub. No. RM616E, page BE-58).

NG

Replace stop light switch.

OK

2 Check harness and connector between Engine and ECT ECU and stop light switch (See page IN-38).

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-119).