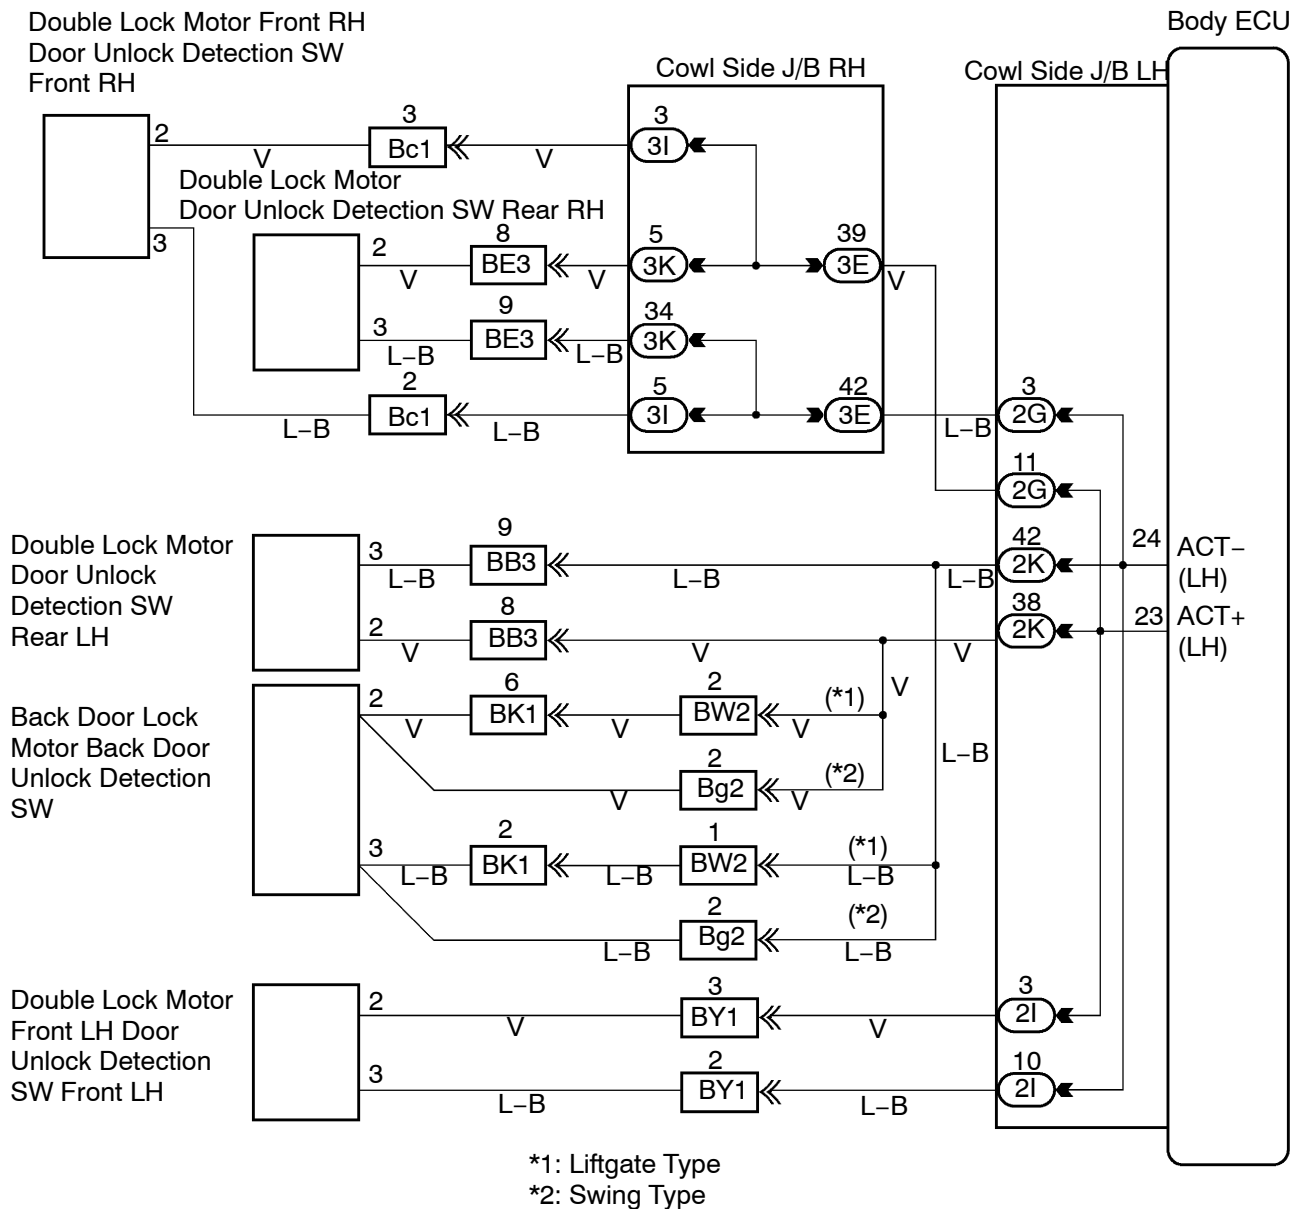


## Door lock motor circuit

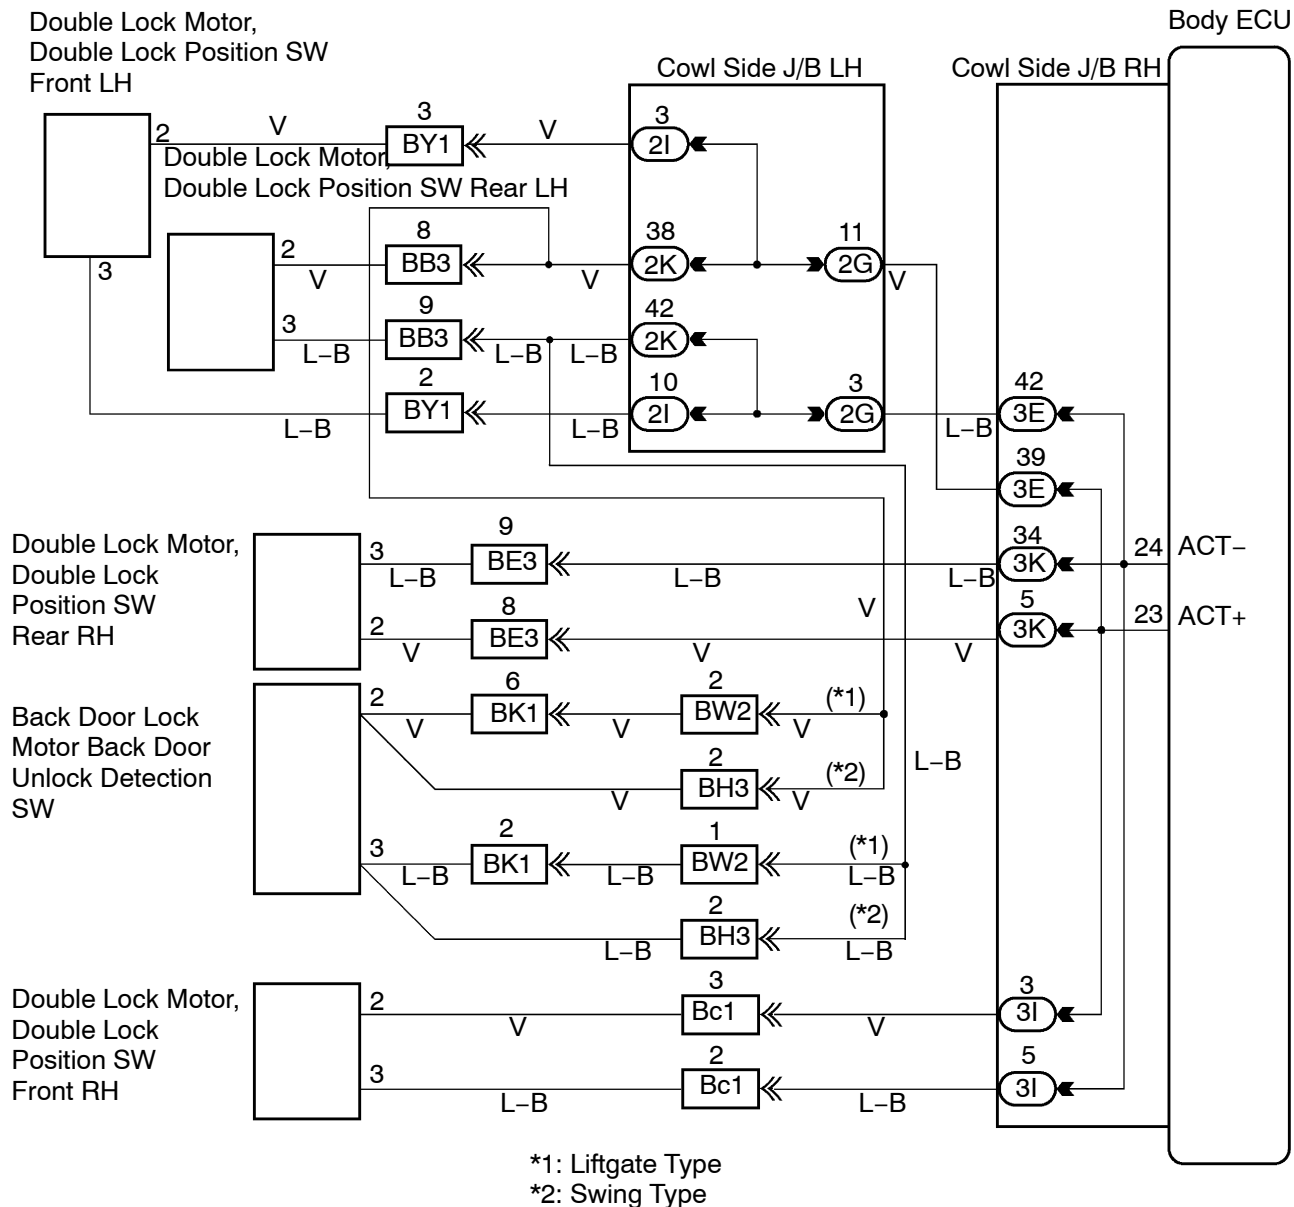
### WIRING DIAGRAM

#### LHD Models (w/o Double Lock):



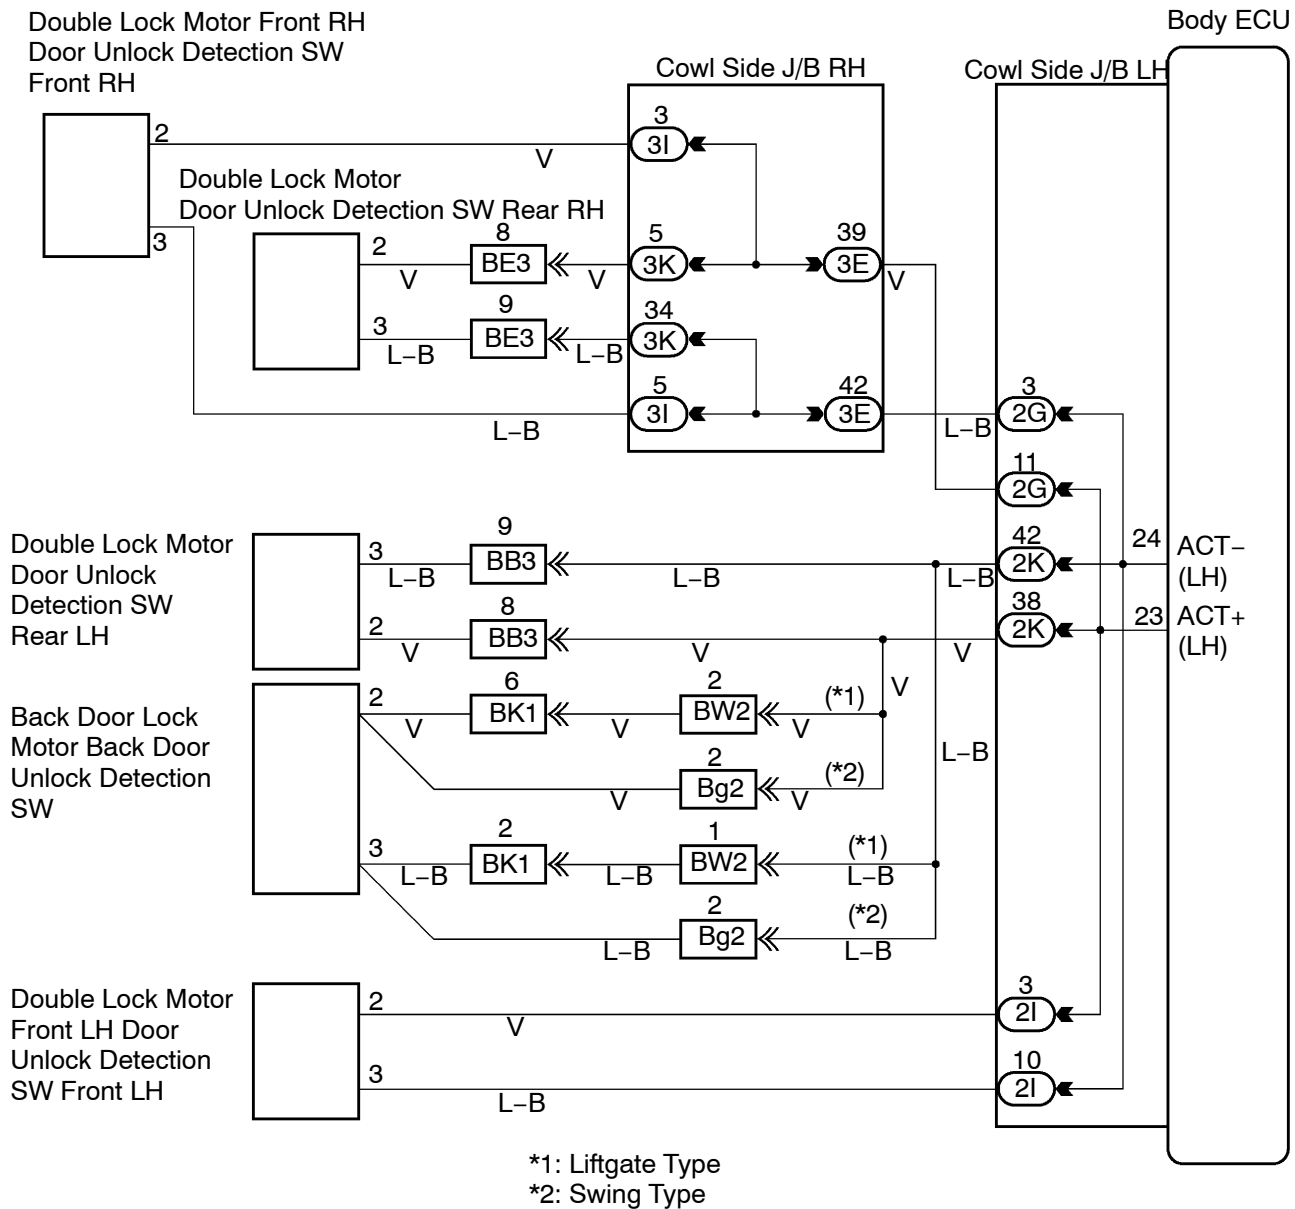
H

I26323

**RHD Models (w/o Double Lock):**

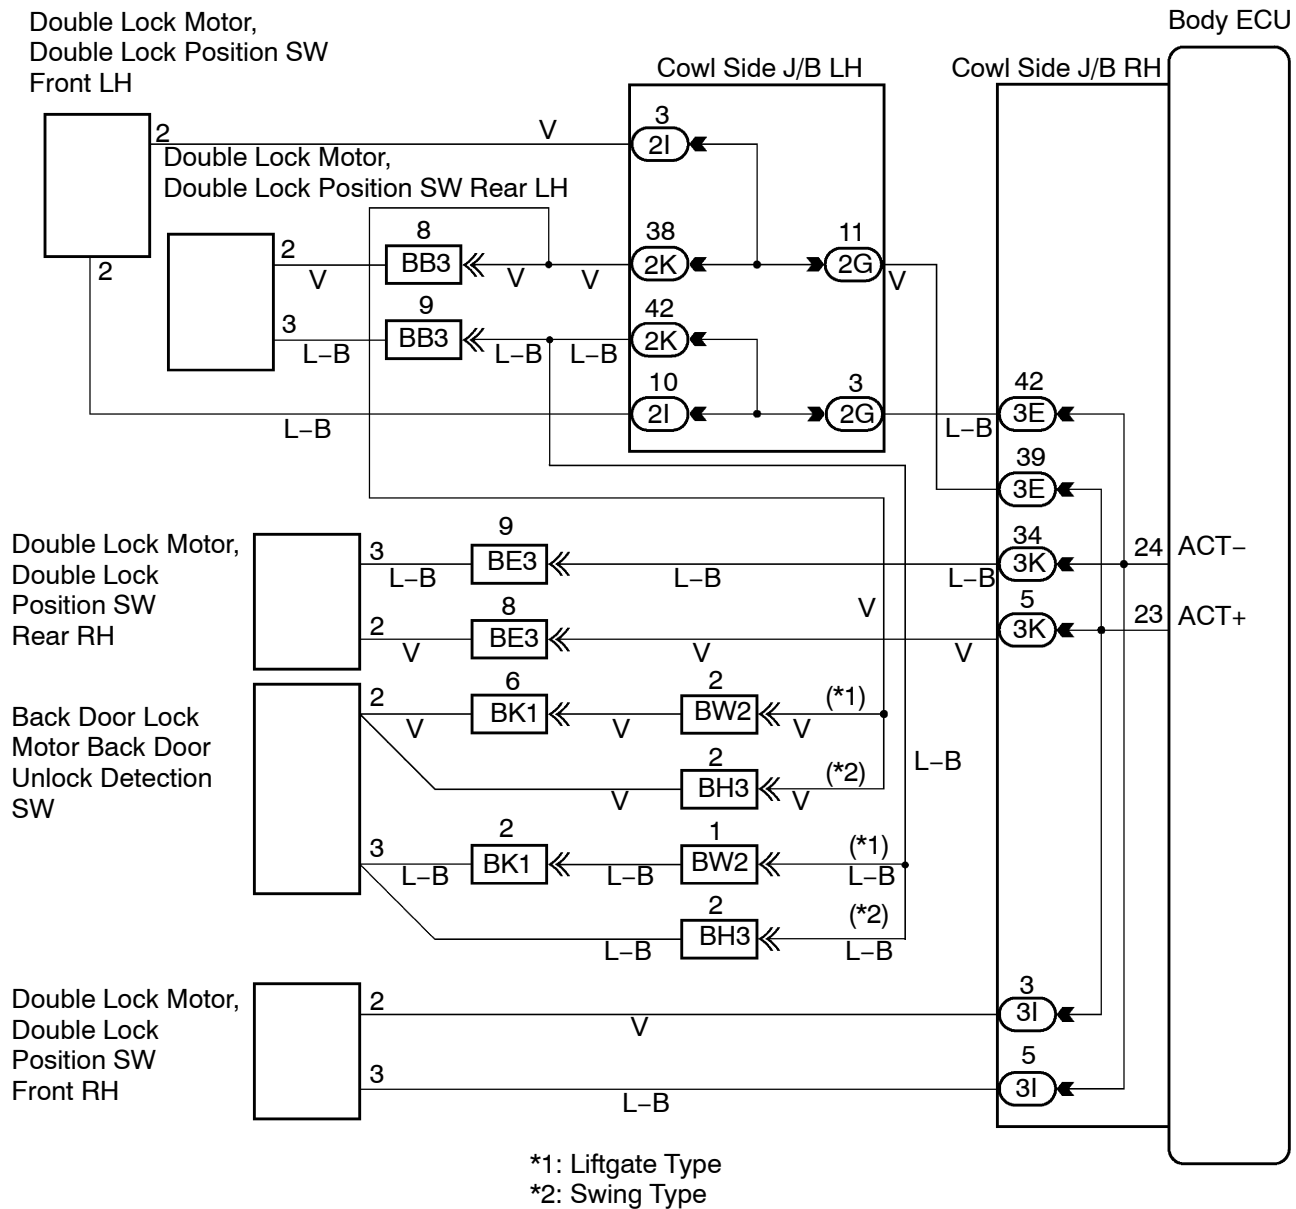
H

I26322

**LHD Models (w/ Double Lock):**

H

I26030

**RHD Models (w/ Double Lock):**

H

I26053

## INSPECTION PROCEDURE

### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

**1** Check door lock motor using hand-held tester.

### PREPARATION:

Connect the hand-held tester to DLC3.

### CHECK:

Check that the door lock motor operate in ACTIVE TEST (See page DI-1057).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).

NG

**2** Check the door lock motor (See page BE-53).

NG

Replace the door lock motor.

OK

**3** Check wireharness and connector between door lock motor and Body ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).