


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Instrument Panel

[LHD]

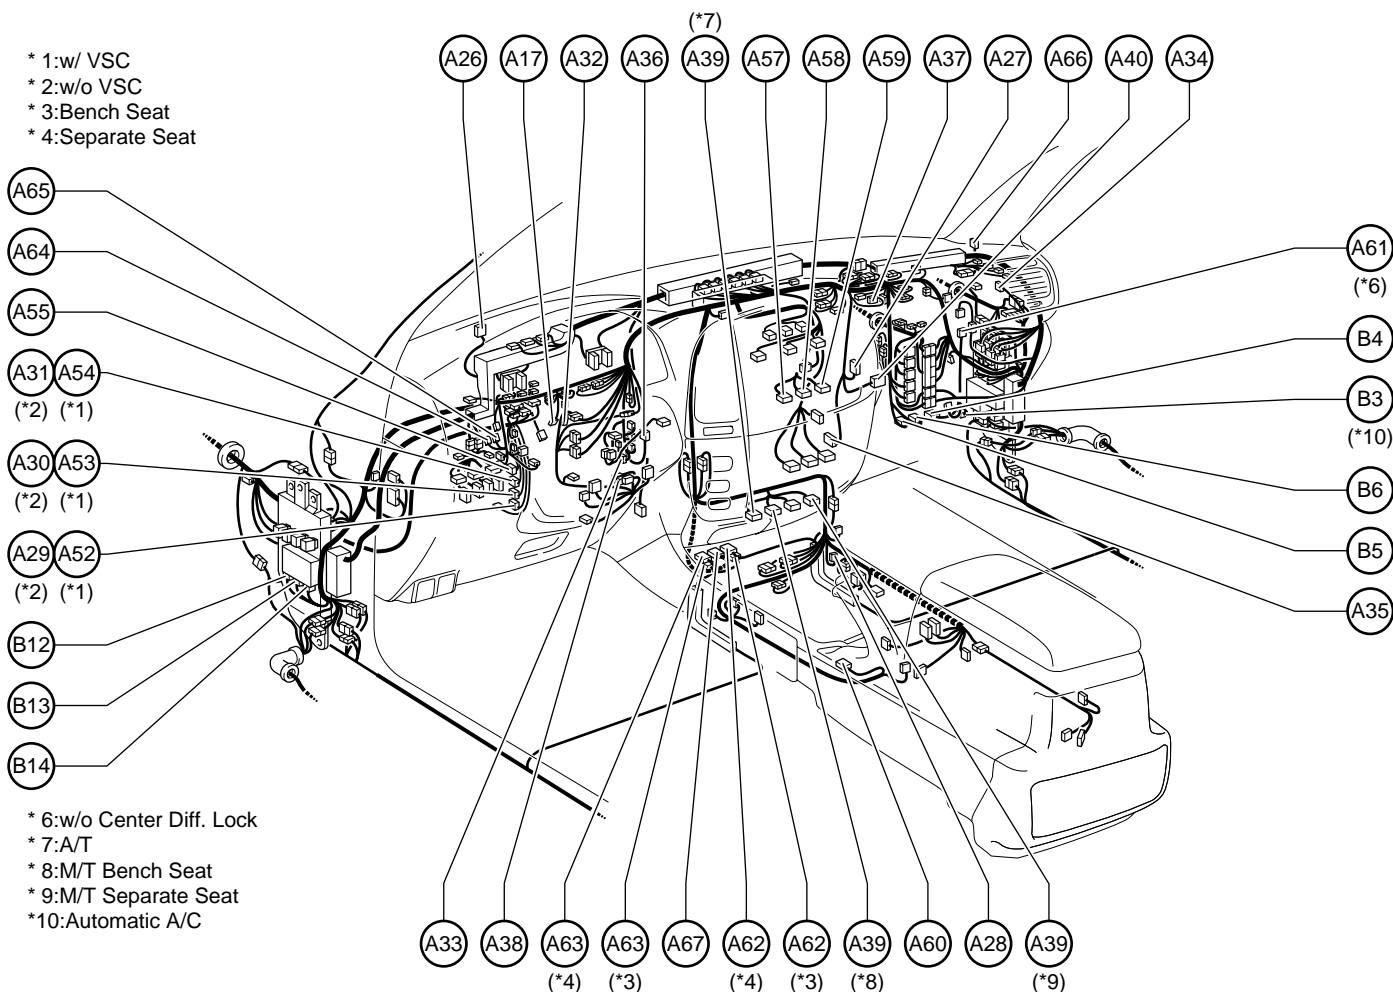

A 17 Accel Position Sensor  
 A 26 A/C Solar Sensor  
 A 27 A/C Thermistor  
 A 28 ABS Deceleration Sensor  
 A 29 ABS ECU  
 A 30 ABS ECU  
 A 31 ABS ECU  
 A 32 Accelerator Pedal SW  
 A 33 AHC Main Relay  
 A 34 Air Inlet Control Servo Motor  
 A 35 Air Mix Control Servo Motor  
 A 36 Air Vent Mode Control Servo Motor  
 A 37 Airbag Squib (Front Passenger Airbag Assembly)  
 A 38 Airbag Squib (Steering Wheel Pad)  
 A 39 Ashtray Illumination  
 A 40 Auto Antenna Control Relay  
 A 52 ABS & BA & TRC & VSC ECU  
 A 53 ABS & BA & TRC & VSC ECU  
 A 54 ABS & BA & TRC & VSC ECU  
 A 55 ABS & BA & TRC & VSC ECU  
 A 57 A/C Control Assembly

A 58 A/C Control Assembly  
 A 59 A/C Control Assembly  
 A 60 A/T Shift Lever Illumination  
 Shift Lock Control ECU  
 A 61 ADD Control Relay  
 A 62 Airbag Sensor Assembly  
 A 63 Airbag Sensor Assembly  
 A 64 Auto Wiper ECU  
 Short Connector  
 A 65 Auto Wiper ECU  
 A 66 Automatic Light Control Sensor  
 A 67 Airbag Sensor Assembly

B 3 Blower Motor Controller  
 B 4 Blower HI Relay  
 B 5 Blower LO Relay  
 B 6 Blower ME Relay  
 B 12 Body ECU  
 B 13 Body ECU  
 B 14 Body ECU