


Power source circuit


CIRCUIT DESCRIPTION

This circuit supplies power to operate the power window master switch.

WIRING DIAGRAM

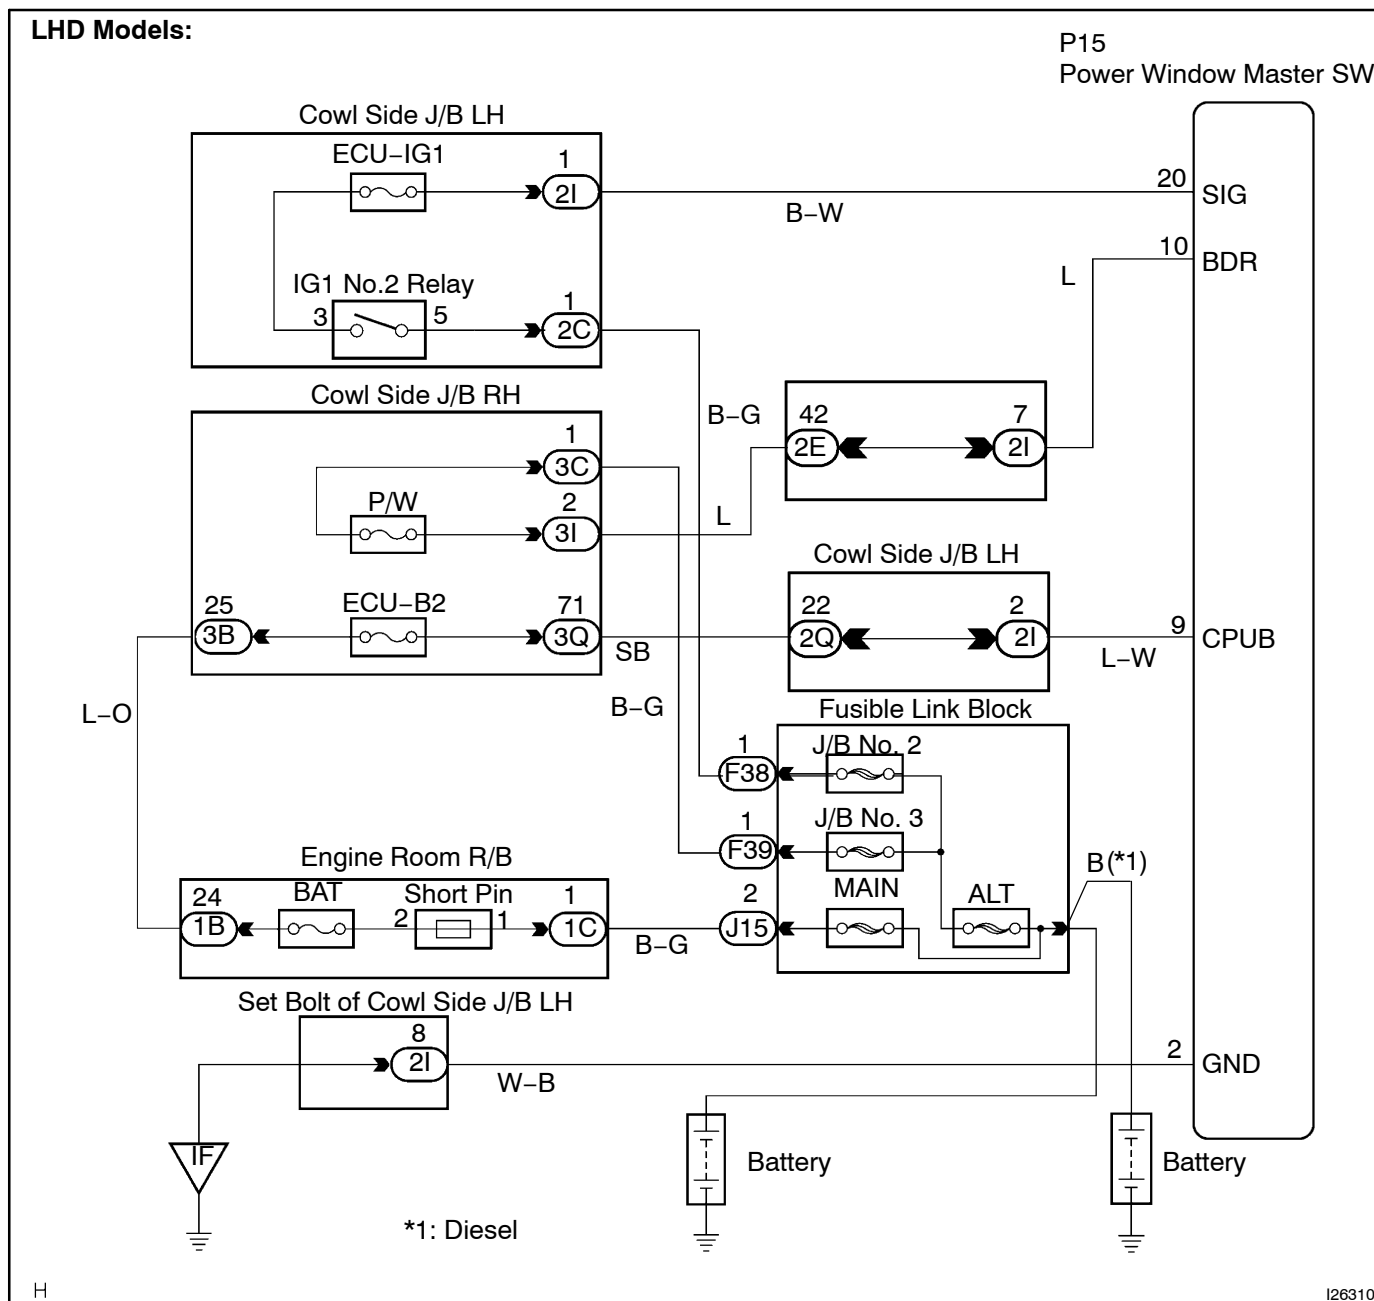

RHD Models:

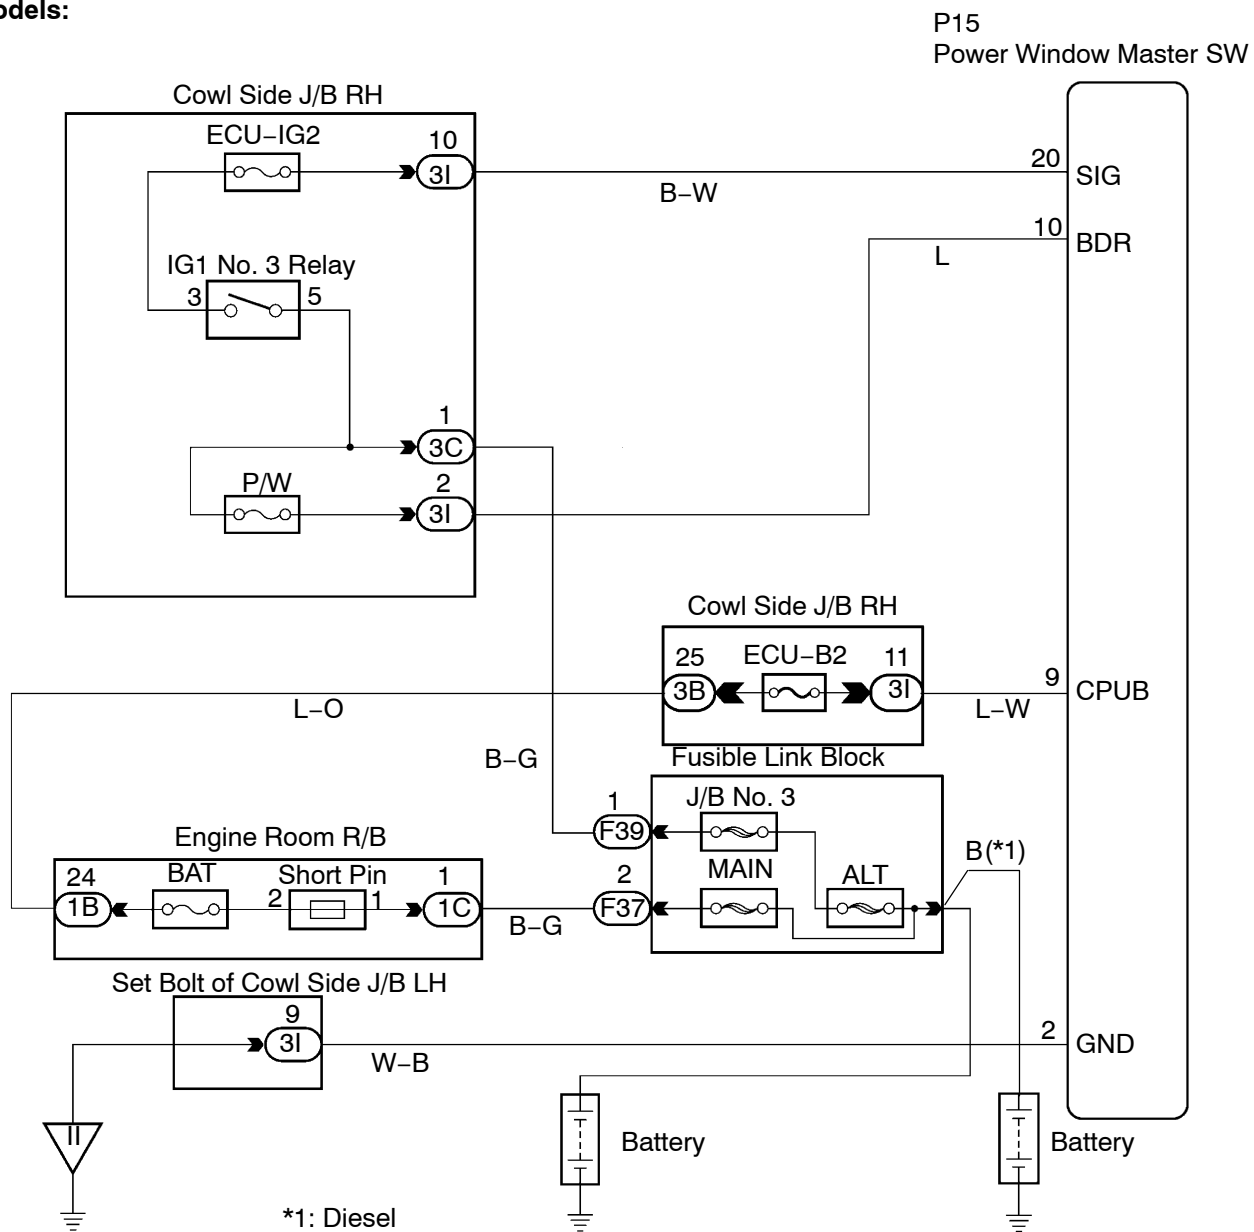

H

I26311

INSPECTION PROCEDURE**1 Check ECU-IG1 and AM1 fuse.****CHECK:**

Check continuity of ECU-IG1 and AM1 fuse.

OK:

Continuity

NG

Replace faulty fuse.

OK

2 Check voltage between terminals CPUB, SIG, BDR and GND of power window master switch connector.**PREPARATION:**

Turn the Ignition switch OFF.

CHECK:

Measure the voltage between terminals CPUB, SIG, BDR and GND.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).

NG

3 Check wire harness and connector between power window master switch and body ground (See page IN-38).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).