



CIRCUIT DESCRIPTION

WIRING DIAGRAM

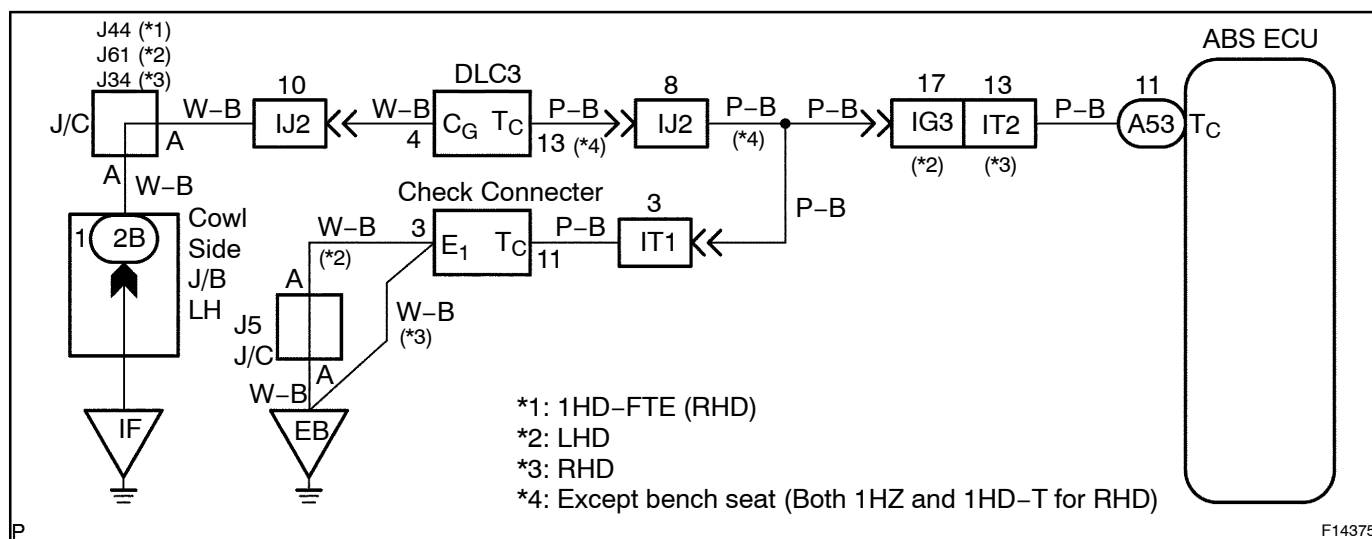

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and E₁ of check connector or Tc and CG of DLC3.

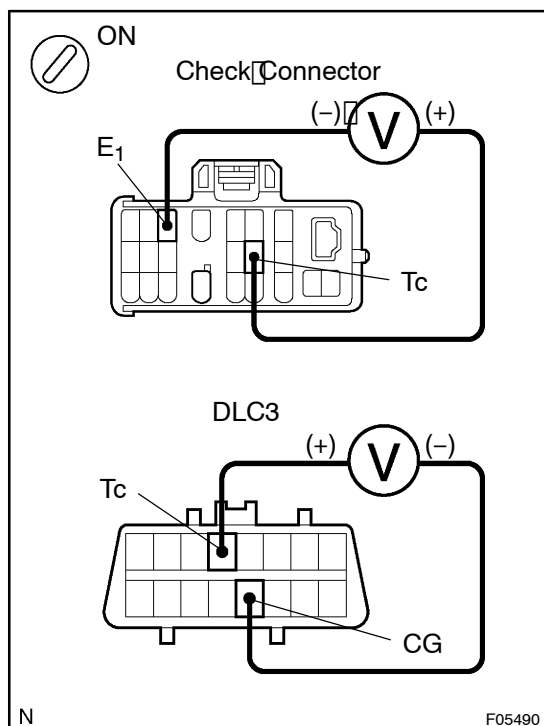**CHECK:**

- (a) Turn ignition switch ON.
 (b) Measure voltage between terminals Tc and E₁ of check connector or Tc and CG of DLC3.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and E₁ or Tc and CG have been connected, the ECU may be defective.

NG

- 2 IG switch OFF, and check for open and short circuit in harness and connector between ABS & BA & TRC & VSC ECU and check connector or DLC3, check connector or DLC3 and body ground (See page IN-35).

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRC & VSC ECU.