


DISASSEMBLY

1. MOUNTING[PUMP]ASSEMBLY[TO]SST[STAND] (See[page]FU-53)


SST 09241-76022, 09245-68010

2. REMOVE SET KEY OF DRIVE PULLEY FROM DRIVE SHAFT

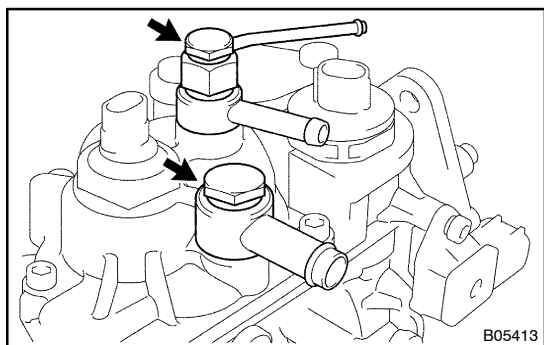


3. REMOVE FUEL PIPES

- Remove the over flow screw, fuel outlet pipe and 2 gaskets.
- Remove the union bolt, fuel inlet pipe and 2 gaskets.

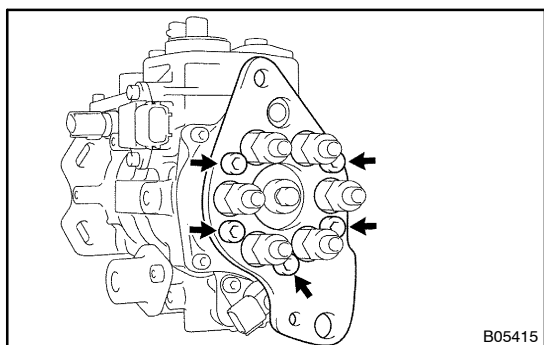

4. REMOVE INJECTION PUMP STAY

Using a 6 mm hexagon wrench, remove the 5 bolts and injection pump stay.

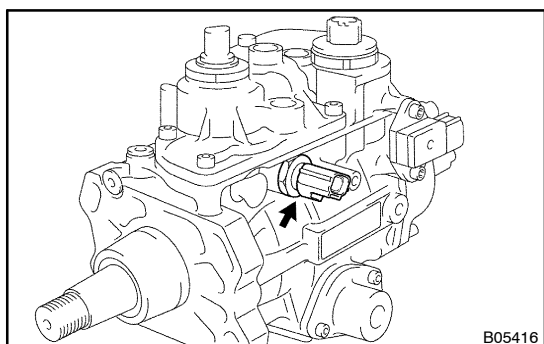

5. REMOVE FUEL TEMPERATURE SENSOR