


Connector Joining Wire Harness and Wire Harness

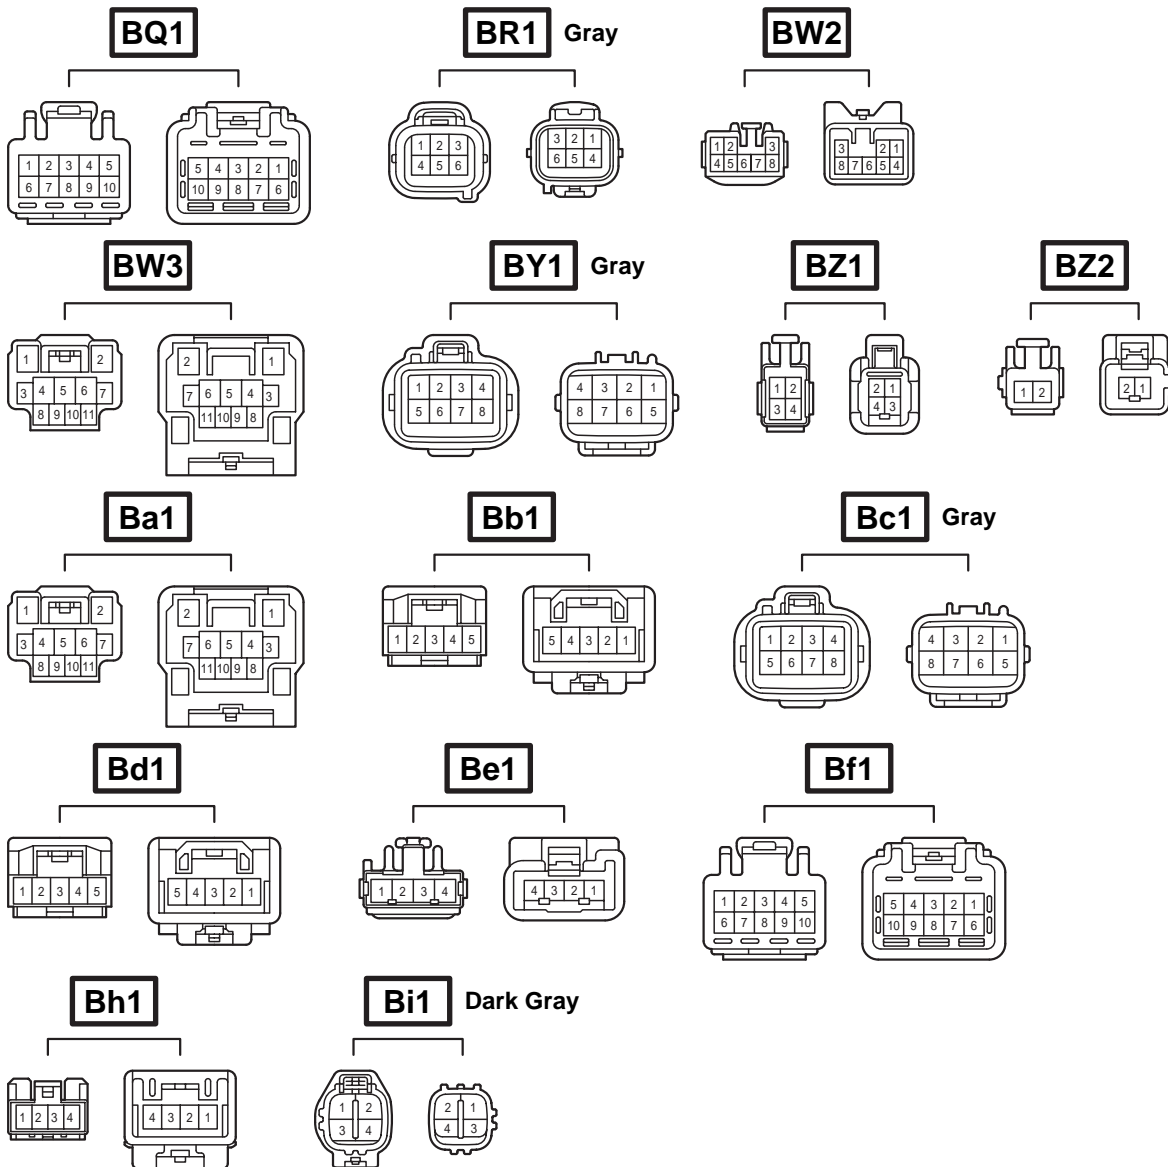

Code	Joining Wire Harness and Wire Harness (Connector Location)
BQ1	Floor No.2 Wire and Roof No.2 Wire (Right Rear Side Quarter Panel)
BR1	Fuel Tank No.2 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BW2	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BW3	
BY1	Front Door LH Sub Wire and Front Door LH Wire (Front Door LH)
BZ1	
BZ2	Roof No.3 Wire and Roof No.1 Wire (Front Side of Roof)
Ba1	
Bb1	Floor No.1 Wire and Floor No.1 Wire (Near the Left Rear Suspension Support)
Bc1	Front Door RH Sub Wire and Front Door RH Wire (Front Door RH)
Bd1	Floor No.2 Wire and Floor No.2 Wire (Near the Right Rear Suspension Support)
Be1	Front Door RH Wire and Front Door RH No.2 Sub Wire (Front Door RH)
Bf1	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
Bh1	Pillar No.1 Wire and Floor No.3 Wire (Left Rear Side Quarter Panel)
Bi1	Floor No.3 Wire and Floor No.2 Wire (Right Side of Rear Floor Crossmember)