


Position of Parts in Engine Compartment <LHD 1HZ>

* 1:w/ Center Diff. Lock

* 2:Except *1

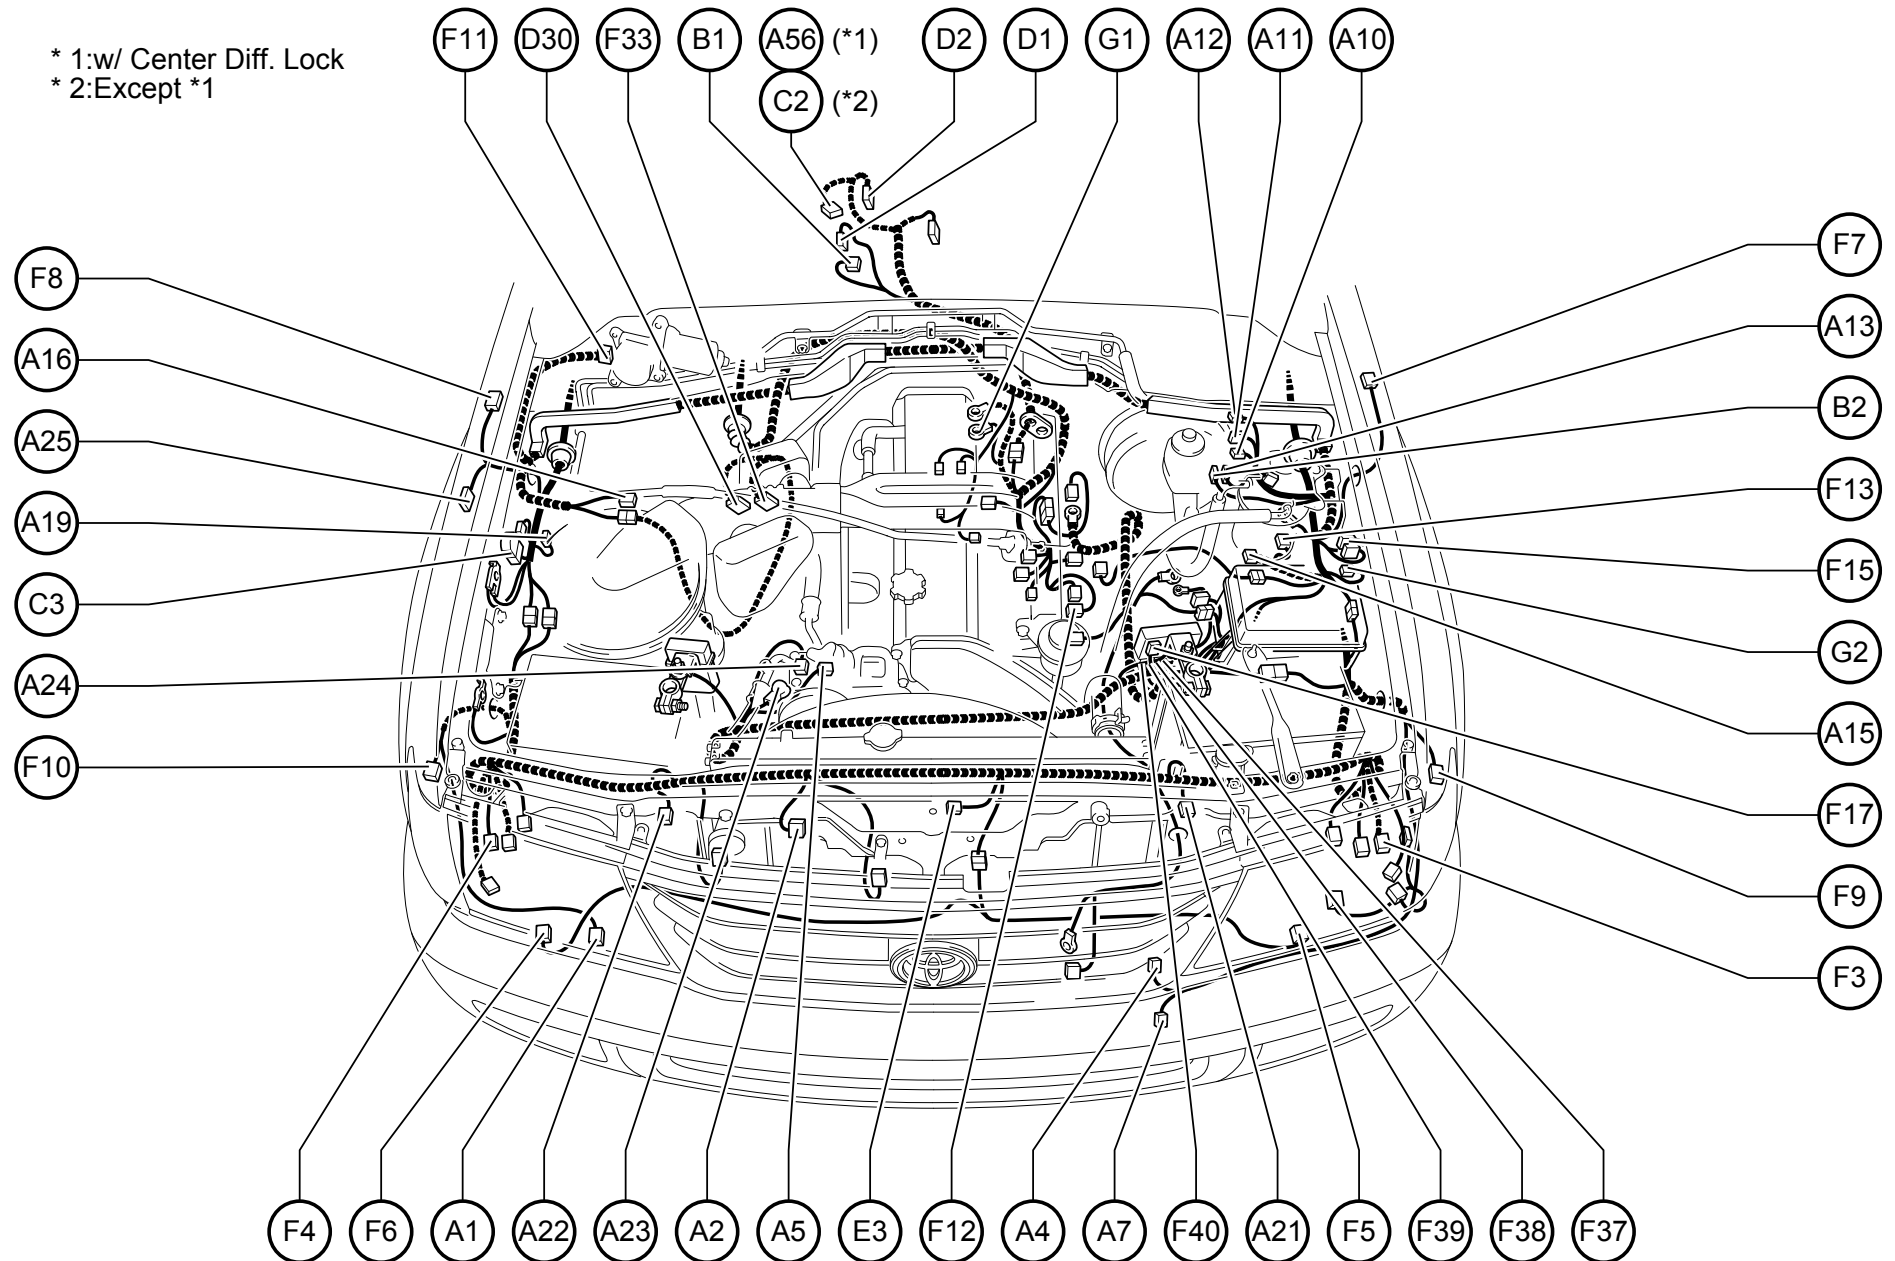

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 4 Pressure SW
- A 5 A/C Magnetic Clutch
- A 7 A/C Magnetic Valve
- A 10 ABS Actuator
- A 11 ABS Actuator
- A 12 ABS Actuator
- A 13 ABS Actuator
- A 15 ABS Speed Sensor Front LH
- A 16 ABS Speed Sensor Front RH
- A 19 Air Cleaner Warning Sensor
- A 21 Airbag Sensor Front LH
- A 22 Airbag Sensor Front RH
- A 23 Alternator
- A 24 Alternator
- A 25 Auto Antenna Motor
- A 56 ADD Control Motor

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW

- C 2 Center Diff. Lock Control Motor
- C 3 Check Connector































- D 1 Detection SW (Center Diff. Lock)
- D 2 Detection SW (Transfer L Position)
- D 30 Detection SW (Front Diff. Lock)

- E 3 Engine Hood Courtesy SW

- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Fog Light LH
- F 6 Front Fog Light RH
- F 7 Front Side Turn Signal Light LH
- F 8 Front Side Turn Signal Light RH
- F 9 Front Turn Signal Light LH
- F 10 Front Turn Signal Light RH
- F 11 Front Wiper Motor
- F 12 Fuel Cut Valve Controller
- F 13 Fuel Heater SW
- F 15 Fuel Sediment SW
- F 17 Fusible Link Block
- F 33 Front Diff. Lock Motor
- F 37 Fusible Link Block
- F 38 Fusible Link Block
- F 39 Fusible Link Block
- F 40 Fusible Link Block

- G 1 Glow Plug
- G 2 Glow Plug Relay

Position of Parts in Engine Compartment <LHD 1HZ>

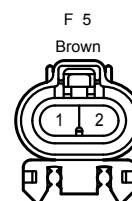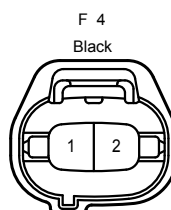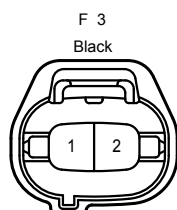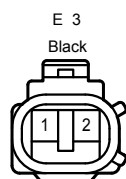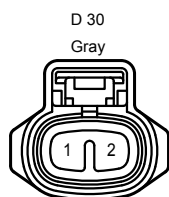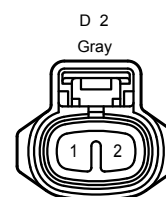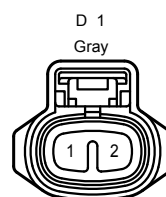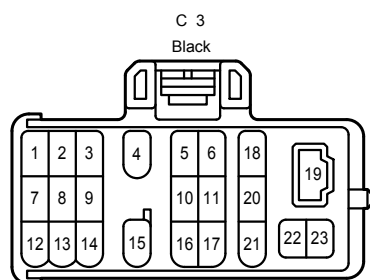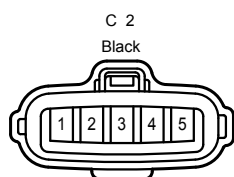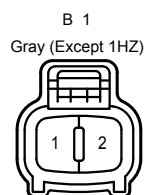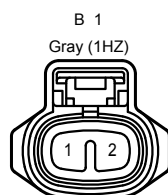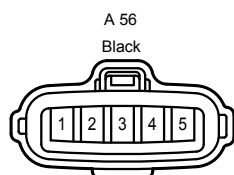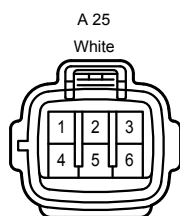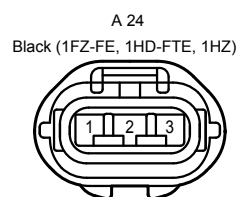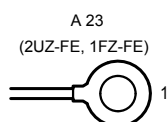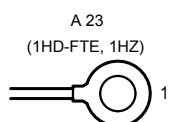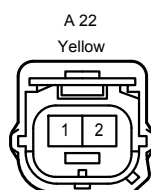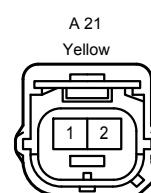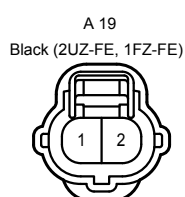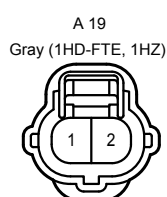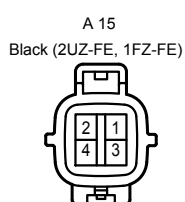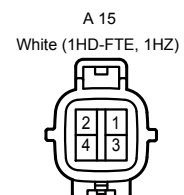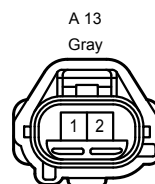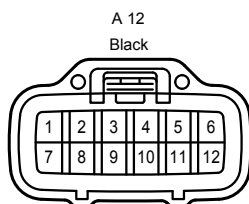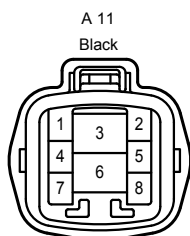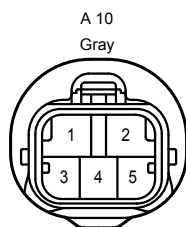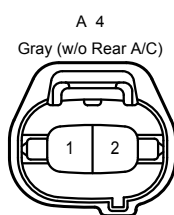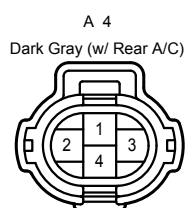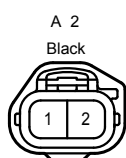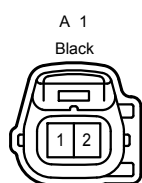

Position of Parts in Engine Compartment <LHD 1HZ>

