

## INSPECTION


### 1. w/o Navigation system:

#### INSPECT ILLUMINATION OPERATION

- (a) Connect the positive (+) lead from the battery to terminal C10 and negative (-) lead to terminal C19 then check that the illuminations light up.

If operation is not as specified, check the faulty bulb.


- (b) Remove the bulb.

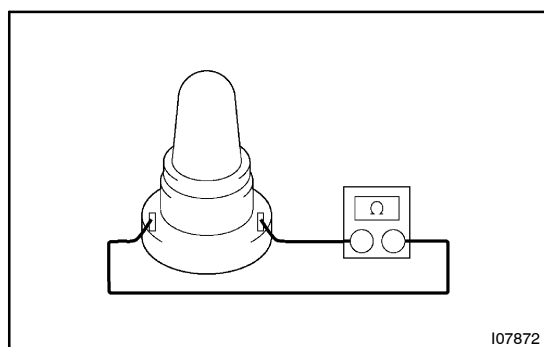

- (c) Apply the tester as shown in the illustration to the test for continuity.

If continuity exists, replace the heater control.

If no continuity exists, replace the bulb.

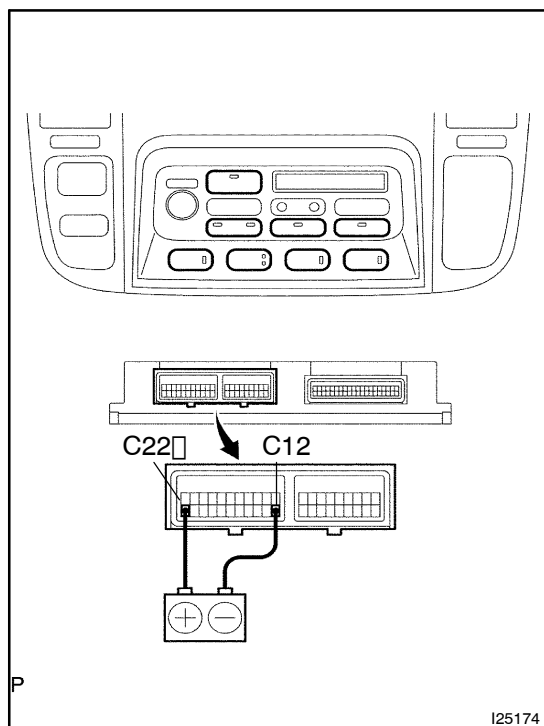

### 2. w/o Navigation system:


#### INSPECT INDICATORS OPERATION

- (a) Connect the positive (+) lead from the battery to terminal C22 and negative (-) lead to terminal C12.
- (b) Check that the indicators light up while operating the switches.

If operation is not as specified, replace the heater control.

### 3. INSPECT A/C CONTROL ASSEMBLY CIRCUIT

(See page DI-1233)

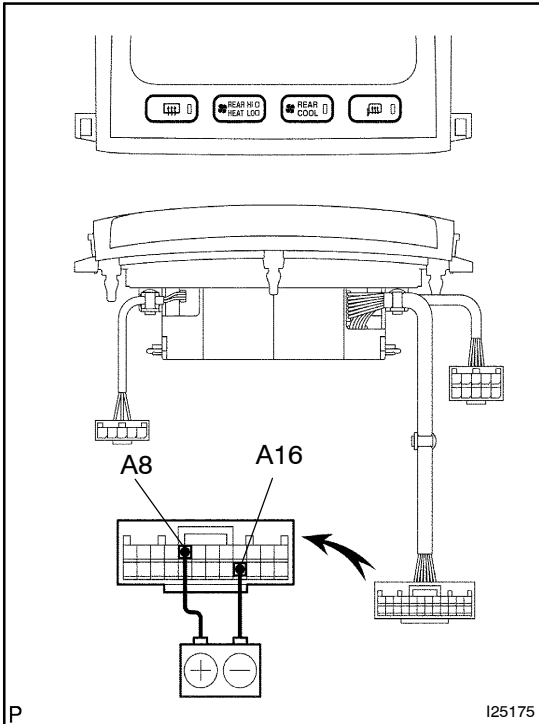**4. w/ Navigation system:****INSPECT INDICATORS OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal A8 and negative (-) lead to terminal A16.
- (b) Check that the indicators light up while operate the switches.

If operation is not as specified, replace the heater control.

**5. INSPECT A/C CONTROL ASSEMBLY CIRCUIT**  
(See [page DI-1233](#))