


Power window motor circuit on rear left door

CIRCUIT DESCRIPTION

The rear LH power window switch receives the power window switch signal from the switch to operate the power window motor.

WIRING DIAGRAM

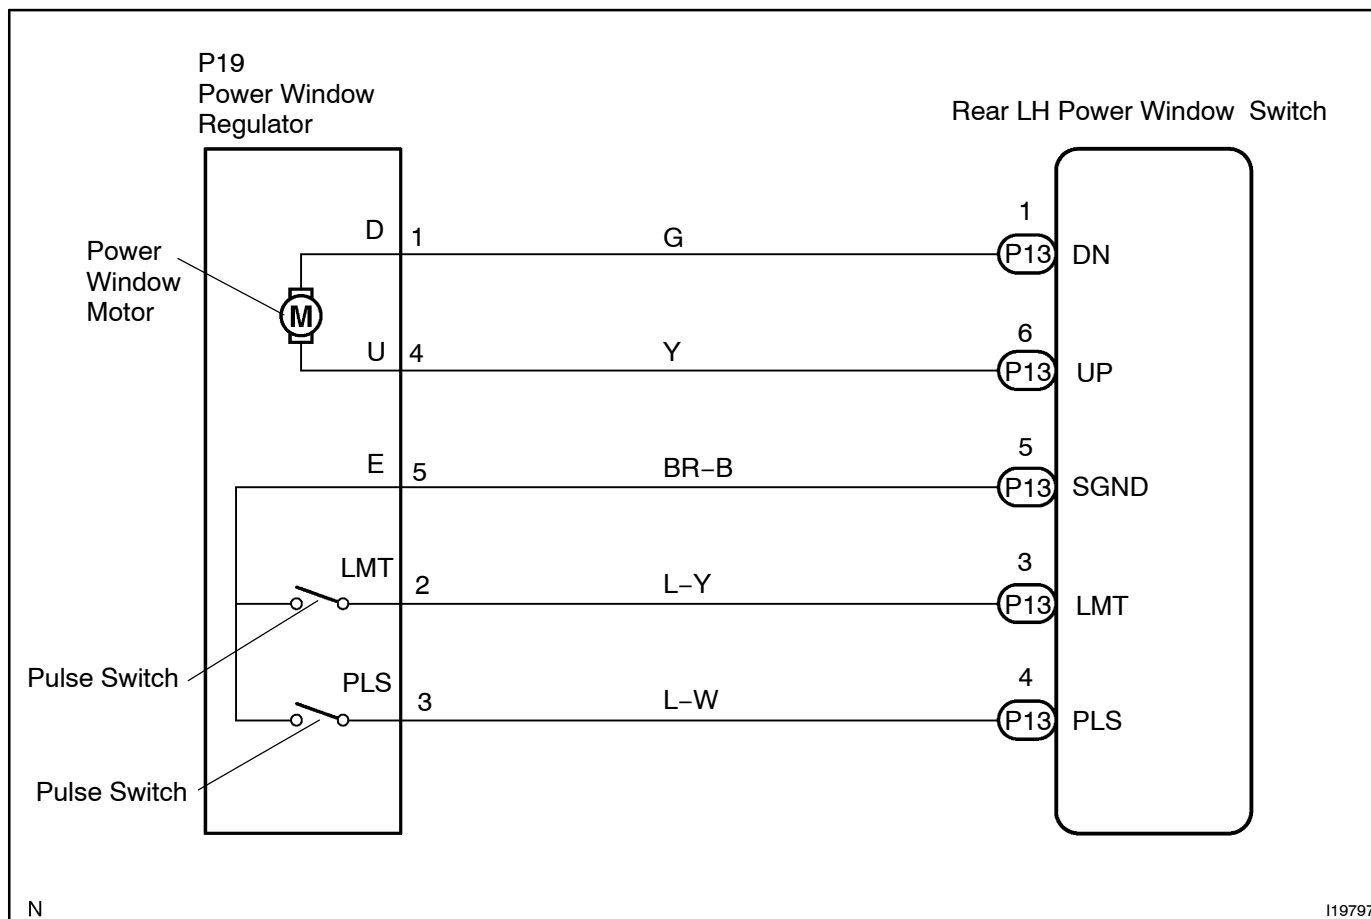

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Check power window motor using hand-held tester.

PREPARATION:

Connect the hand-held tester to DLC3.

CHECK:

Check that the power window motor can operate in ACTIVE TEST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).

NG

2 Check power window motor (See page BE-51).

NG

Replace power window motor.

OK

3 Check wire harness and connector between power window motor and rear LH power window switch (See page IN-38).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).