
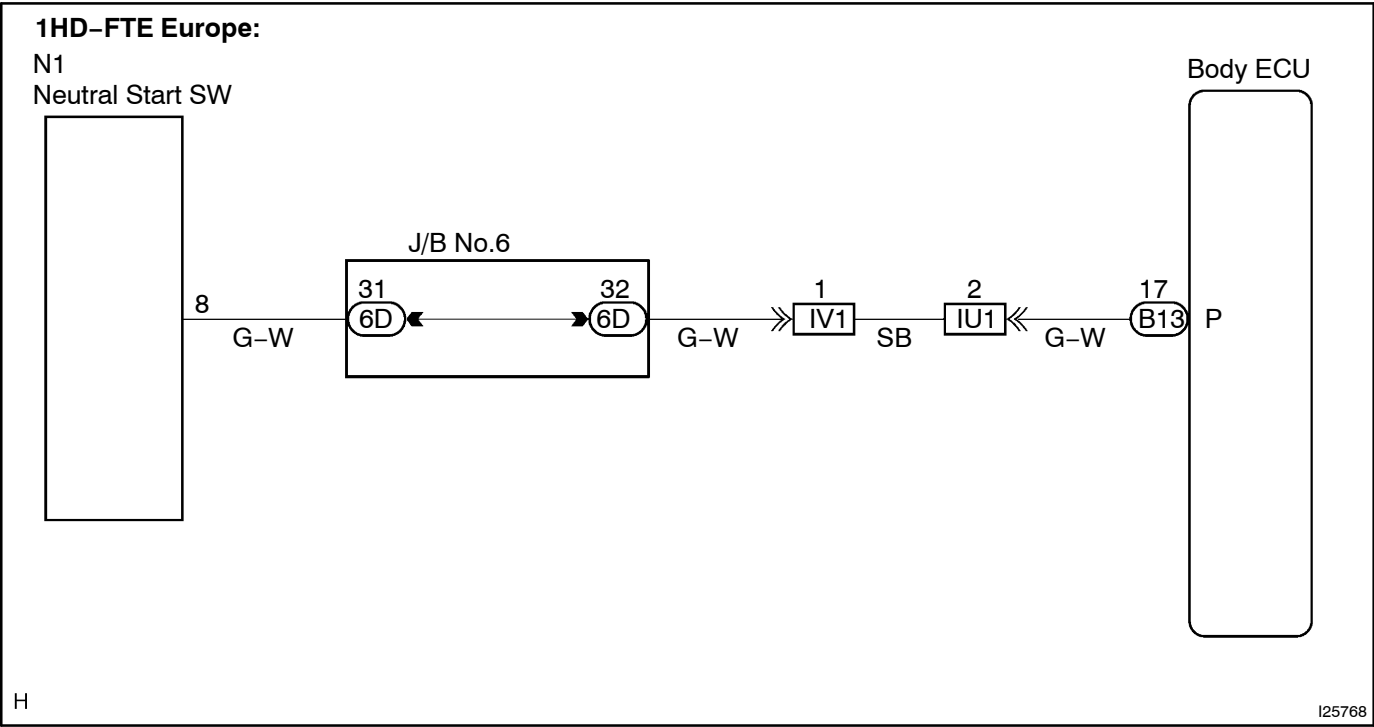


Neutral start switch circuit


WIRING DIAGRAM

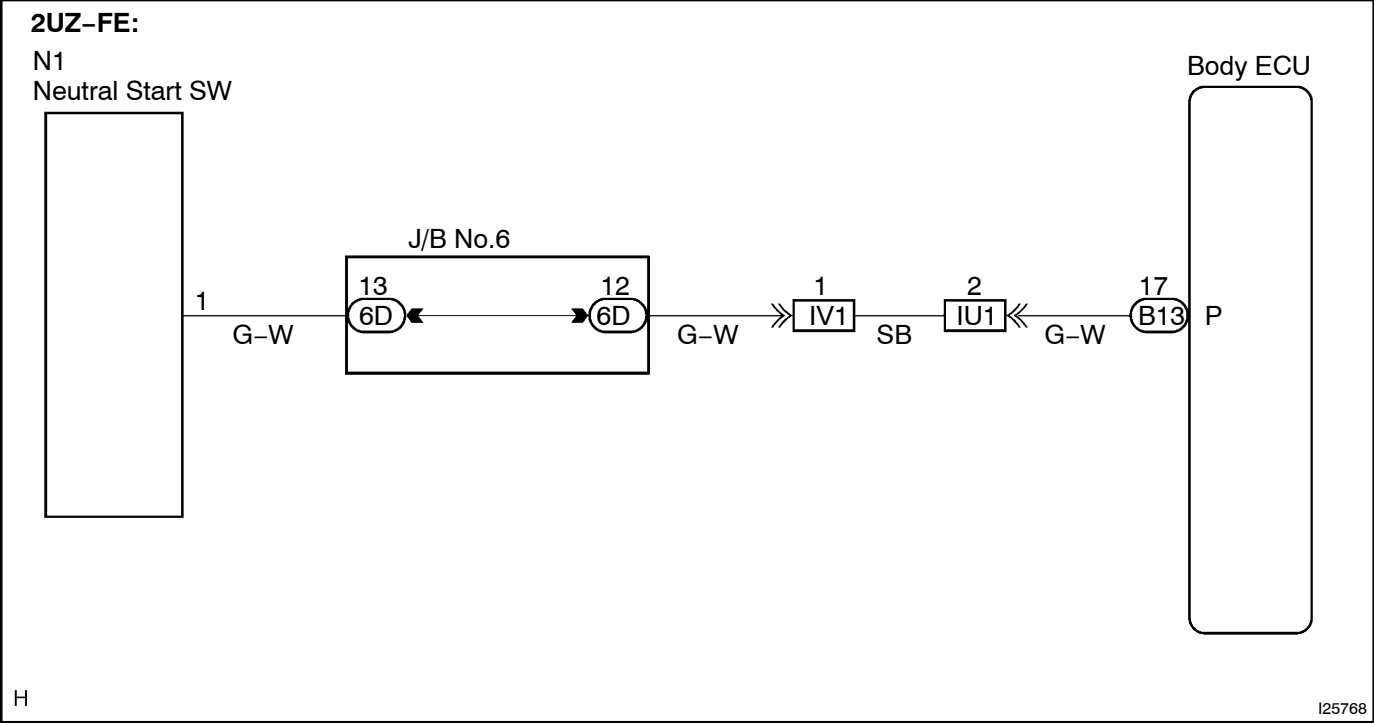

**1HD-FTE Except Europe:**

N1  
Neutral Start SW

Body ECU

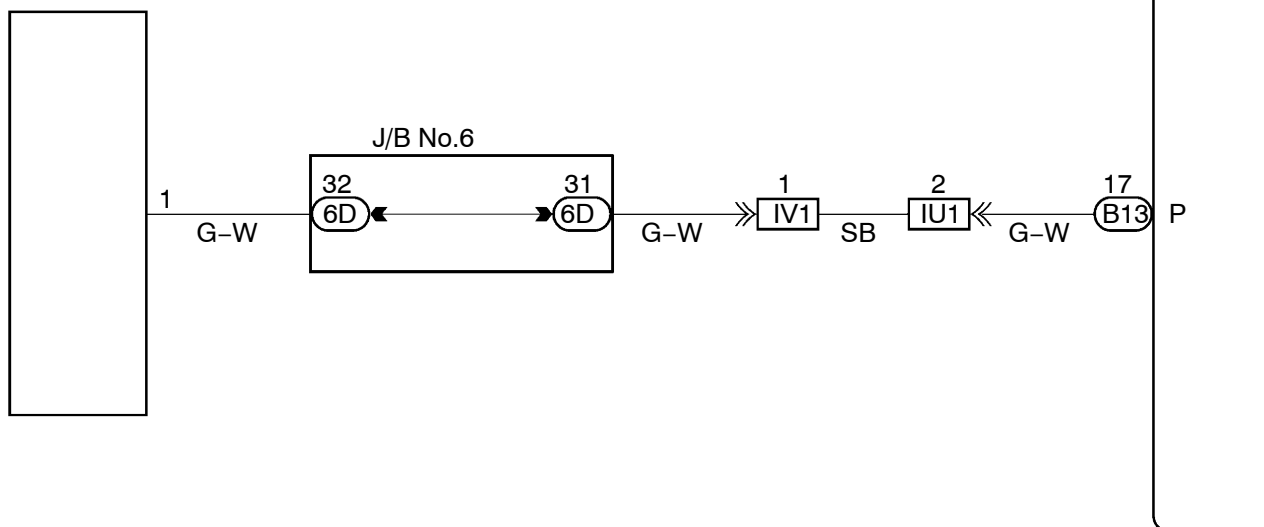


H

I25768

**1FZ-FE:**

N1  
Neutral Start SW

Body ECU

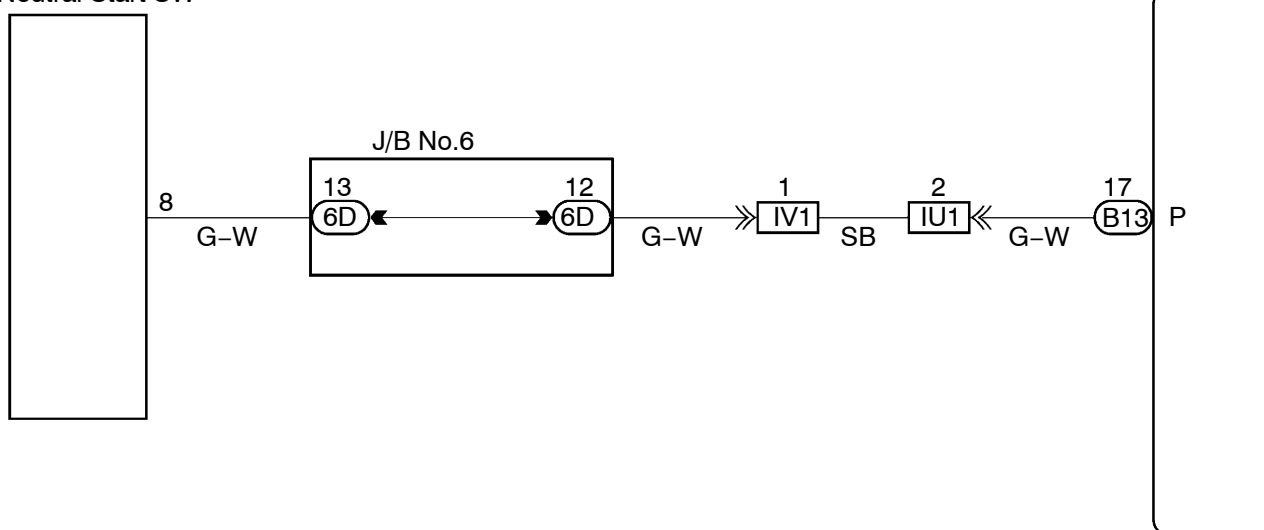

H

I25768

## INSPECTION PROCEDURE

### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

**1 Check neutral start switch using hand-held tester.**

### PREPARATION:

Connect the hand-held tester to DLC3.

### CHECK:

Check that the neutral start switch operate in DATA LIST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

**2 Check neutral start switch.**

NG

Replace the neutral start switch.

OK

**3 Check wire harness and connector between neutral start switch and Body ECU ([See page IN-38](#)).**

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).