


Light control switch circuit

WIRING DIAGRAM

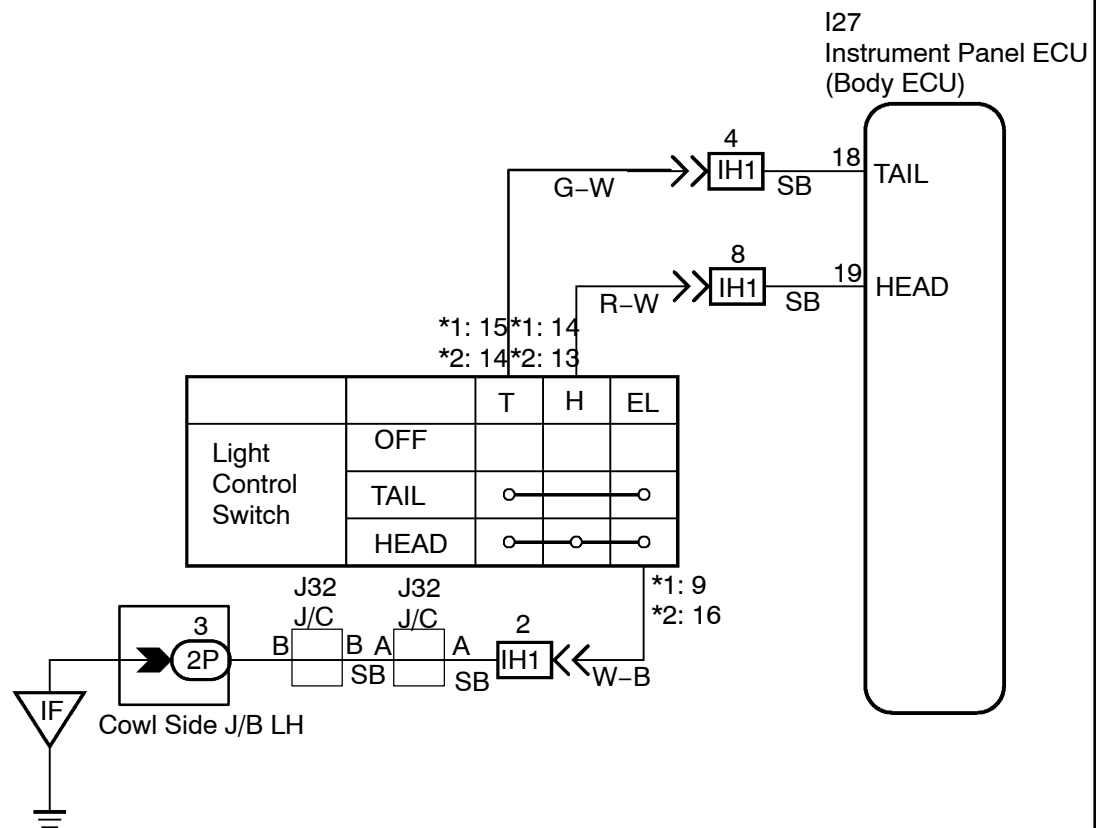

*1: RHD models Except Europe

*2: Except *1

I07481

INSPECTION PROCEDURE

1

Check headlight control switch (See page BE-26).

NG

Replace the headlight control switch.

OK

2

Check wireharness and connector between headlight control switch and Body ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-773)