

| | | |
|------------|-----------|--|
| DTC | 14 | Actuator Mechanical Malfunction |
|------------|-----------|--|

CIRCUIT DESCRIPTION

The circuit detects the rotation position of the actuator control plate and sends a signal to the ECU.


| DTC No. | Detection Item | Trouble Area |
|---------|---|---|
| 14 | Cruise control actuator mechanical malfunction. | <ul style="list-style-type: none"> • Actuator lock: (motor, arm) • Actuator motor • Cruise control ECU |

WIRING DIAGRAM

See page DI-683.

INSPECTION PROCEDURE

| | |
|----------|--|
| 1 | Check cruise control actuator arm locking operation |
|----------|--|

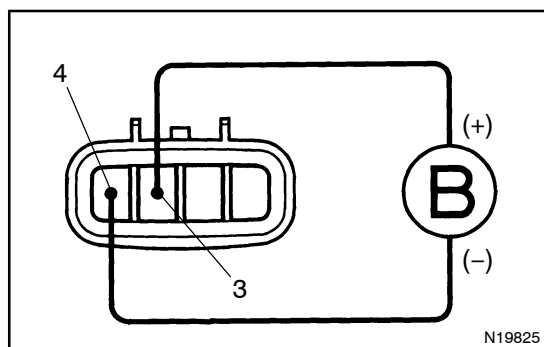

PREPARATION:

- Turn ignition switch OFF.
- Disconnect the actuator connector.

CHECK:

Connect the positive (+) lead from the battery to the terminal 3 of actuator and the negative (-) lead to terminal 4.

NOTICE:

Do not connect the high tension cables to the wrong battery terminal. You will damage the cruise control actuator.

- Move the control plate by hand.

OK:


Control plate doesn't move.

NG

Replace cruise control actuator.

OK

2 Check cruise control actuator operation.

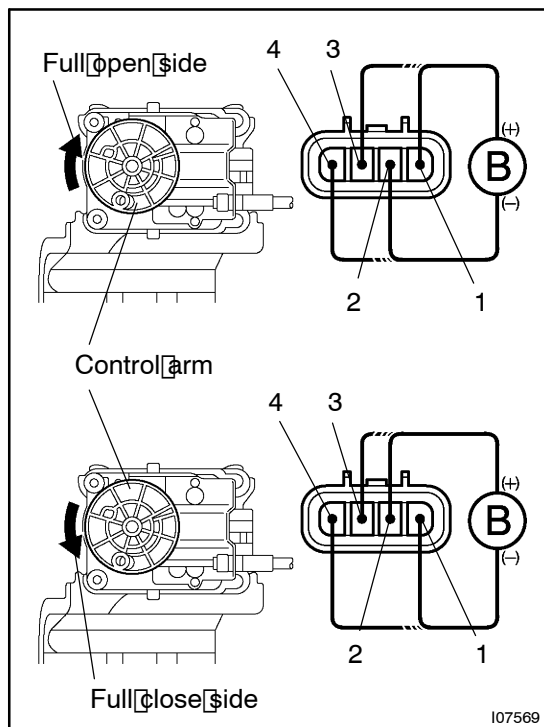

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the actuator connector.

CHECK:

Connect the positive (+) lead from the battery to terminals 1 and 3 of actuator, connect the negative (-) lead to terminals 2 and 4 of actuator.

OK:

Control arm moves to full open side

CHECK:

Connect the positive (+) lead from the battery to terminals 2 and 3 of actuator, connect the negative (-) lead to terminals 1 and 4 of actuator.

OK:

Control arm moves to full close side

NG

Replace cruise control actuator.

OK

3 Check harness and connector between cruise control ECU and cruise control actuator (See page IN-35).

NG

Repair or replace harness or connector.

OK

Check and replace cruise control ECU (See page IN-35).