


## Position of Parts in Engine Compartment

[LHD : 1HZ]

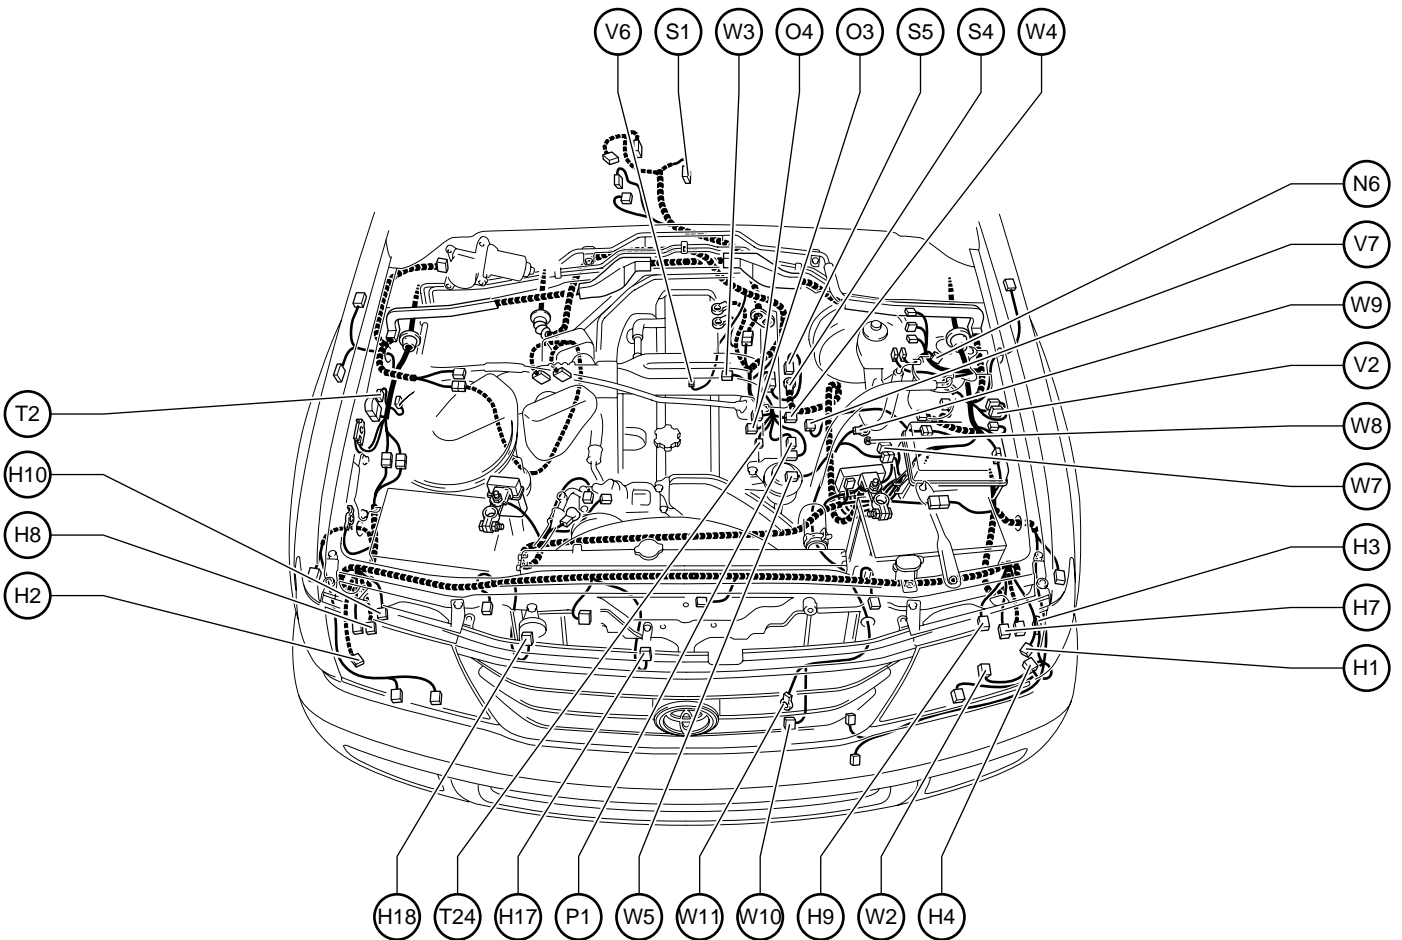

H 1 Headlight Beam Level Control Actuator LH  
 H 2 Headlight Beam Level Control Actuator RH  
 H 3 Headlight Cleaner Control Relay  
 H 4 Headlight Cleaner Motor  
 H 7 Headlight LH (High)  
 H 8 Headlight RH (High)  
 H 9 Headlight LH (Low)  
 H10 Headlight RH (Low)  
 H17 Horn LH  
 H18 Horn RH

N 6 Noise Filter (ABS)

O 3 Oil Level Sensor  
 O 4 Oil Pressure Sender

P 1 Pick-Up Sensor

S 1 Speed Sensor (Combination Meter)  
 S 4 Starter  
 S 5 Starter

T 2 Theft Deterrent Horn  
 T 24 Throttle Position Sensor and Timing Control Valve

V 2 Vacuum SW  
 V 6 VRV (EGR)  
 V 7 VSV (A/C Idle-Up)

W 2 Washer Motor  
 W 3 Water Temp. Sender  
 W 4 Water Temp. Sensor (Glow Plug)  
 W 5 Water Temp. SW (A/C)  
 W 7 Winch Main Relay  
 W 8 Winch Main Relay  
 W 9 Winch Main Relay  
 W10 Winch Motor and Magnetic SW  
 W11 Winch Motor and Magnetic SW