


## ADJUSTMENT

### 1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.


**Torque: 28 N·m (286 kgf·cm, 21 ft·lbf)**

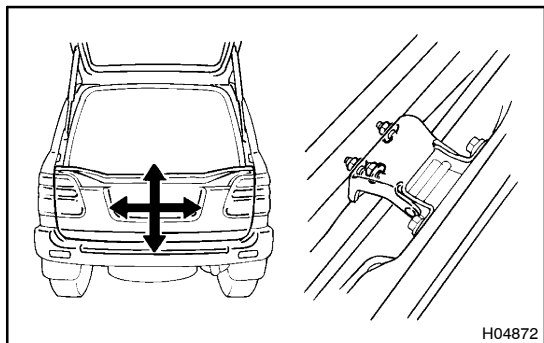

### 2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the body side hinge bolts and nut to adjust.

**Torque: 31 N·m (316 kgf·cm, 23 ft·lbf)**

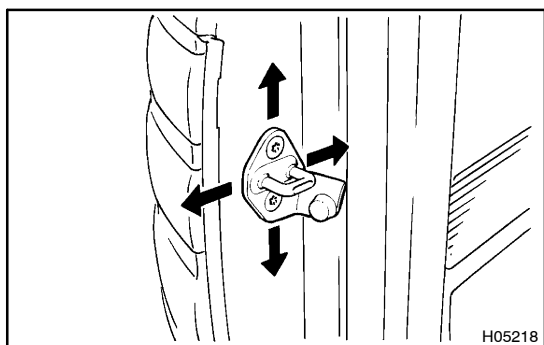

### 3. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door linkages are adjusted correctly.

(b) Using a torx wrench, loosen the door lock striker mounting screws.

**Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)**

**Torque: 11.5 N·m (117 kgf·cm, 8 ft·lbf)**

(c) Using a plastic hammer, tap the striker to adjust it.