


Connector Joining Wire Harness and Wire Harness

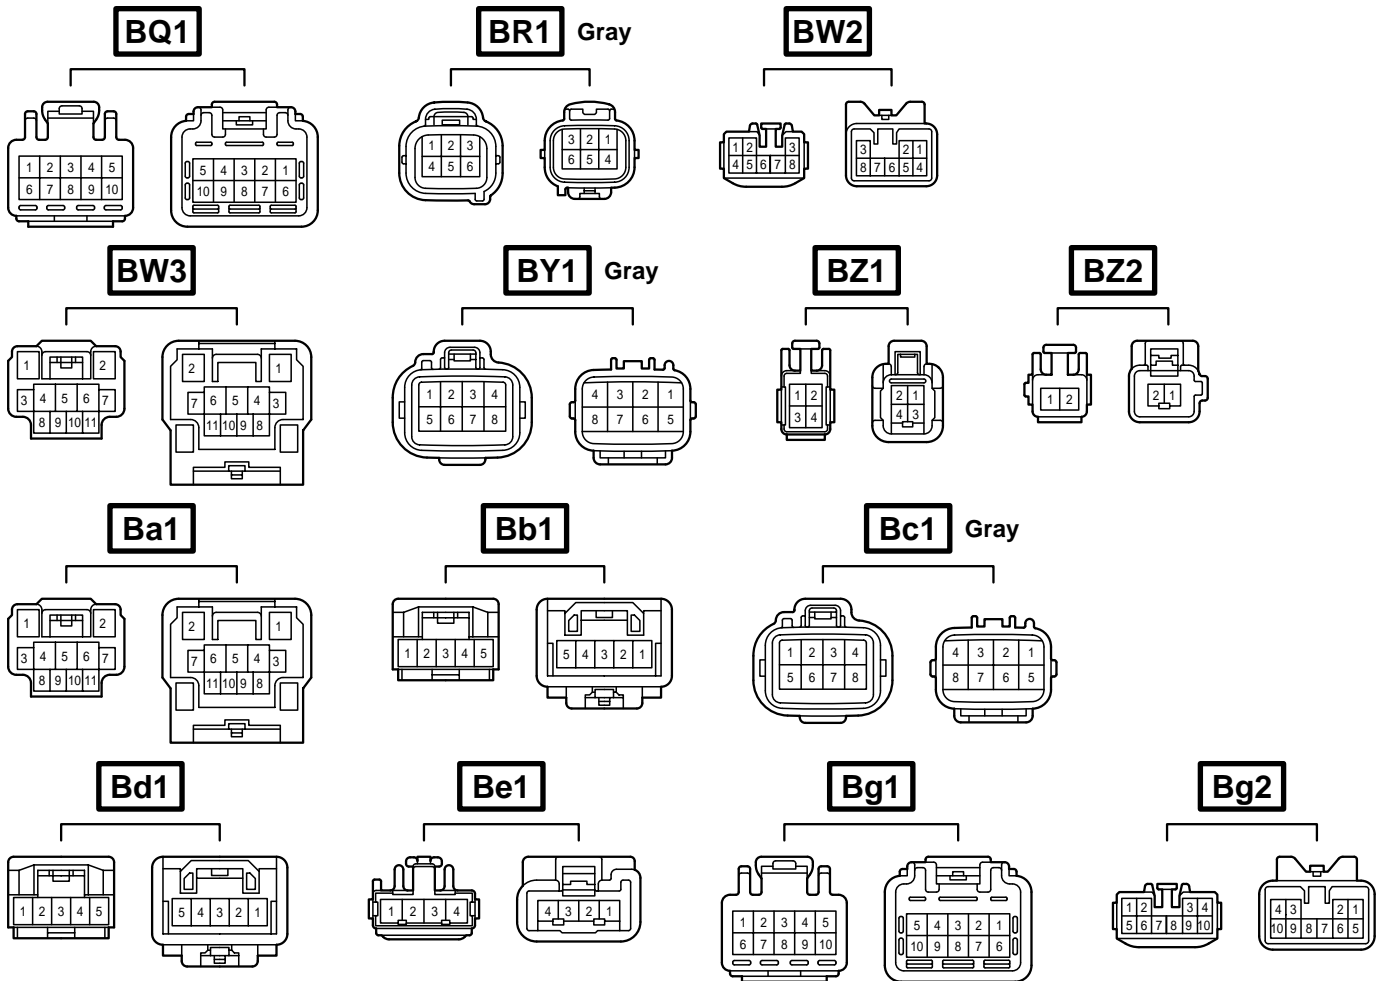

| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|------|---|
| BQ1 | Floor No.2 Wire and Roof No.2 Wire (Right Rear Side Quarter Panel) |
| BR1 | Fuel Tank No.2 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember) |
| BW2 | Pillar No.1 Wire and Floor Wire (Left Rear Side Quarter Panel) |
| BW3 | |
| BY1 | Front Door LH Sub Wire and Front Door LH Wire (Front Door LH) |
| BZ1 | Roof No.3 Wire and Roof Wire (Front Side of Roof) |
| BZ2 | |
| Ba1 | Floor Wire and Floor Wire (Near the Left Rear Suspension Support) |
| Bb1 | |
| Bc1 | Front Door RH Sub Wire and Front Door RH Wire (Front Door RH) |
| Bd1 | Floor No.2 Wire and Floor No.2 Wire (Near the Right Rear Suspension Support) |
| Be1 | Front Door RH Wire and Front Door RH No.2 Sub Wire (Front Door RH) |
| Bg1 | Back Door LH Wire and Floor Wire (Left Rear Side Quarter Panel) |
| Bg2 | |