


## E ELECTRICAL WIRING ROUTING

  : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

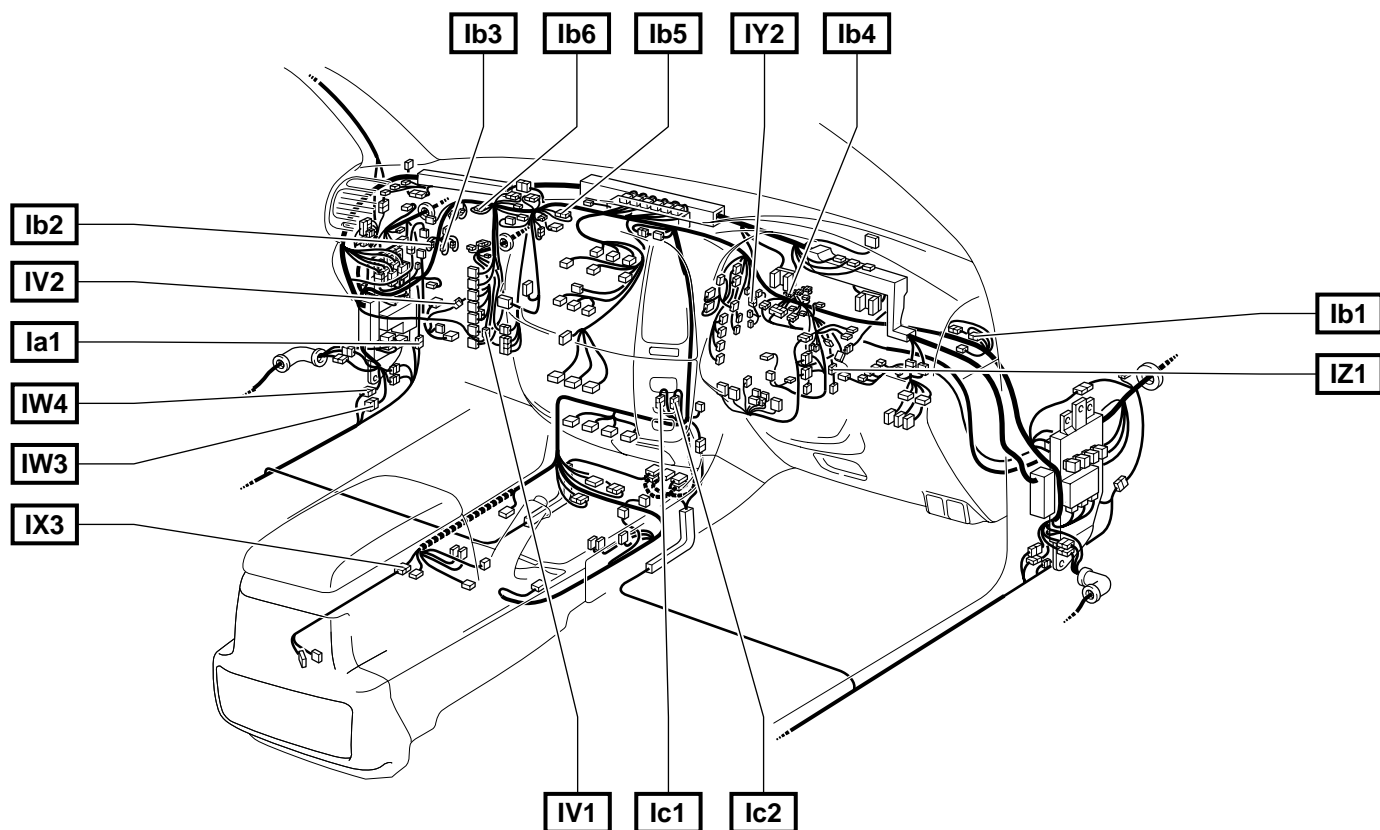

| Code | Joining Wire Harness and Wire Harness (Connector Location)                                 |
|------|--|
| IV1  | Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)                   |
| IV2  |  |
| IW3  | Front Door LH Wire and Dash Wire (Left Kick Panel)   |
| IW4  |  |
| IX3  | Rear Console Box Wire and Dash Wire (Left Side of Rear Console)                            |
| IY2  | Instrument Panel Integration Wire and Instrument Panel No.2 Wire (Instrument Panel Center) |
| IZ1  | Dash Wire and Sensor Wire (Near the Steering Column)                                       |
| Ia1  | Engine Room No.2 Wire and Floor Wire (Left Kick Panel)                                     |
| Ib1  | Dash Wire and Dash Wire (Right Side of Instrument Panel)                                   |
| Ib2  | Dash Wire and Dash Wire (Behind the Glove Box)   |
| Ib3  |  |
| Ib4  | Dash Wire and Dash Wire (Behind the Combination Meter)                                     |
| Ib5  | Dash Wire and Dash Wire (Instrument Panel Center)  |
| Ib6  | Dash Wire and Dash Wire (Behind the Glove Box)   |
| Ic1  | Dash Wire and Dash Wire (Behind the Center Panel)  |
| Ic2  |  |