


Position of Parts in Engine Compartment <RHD 2UZ-FE>

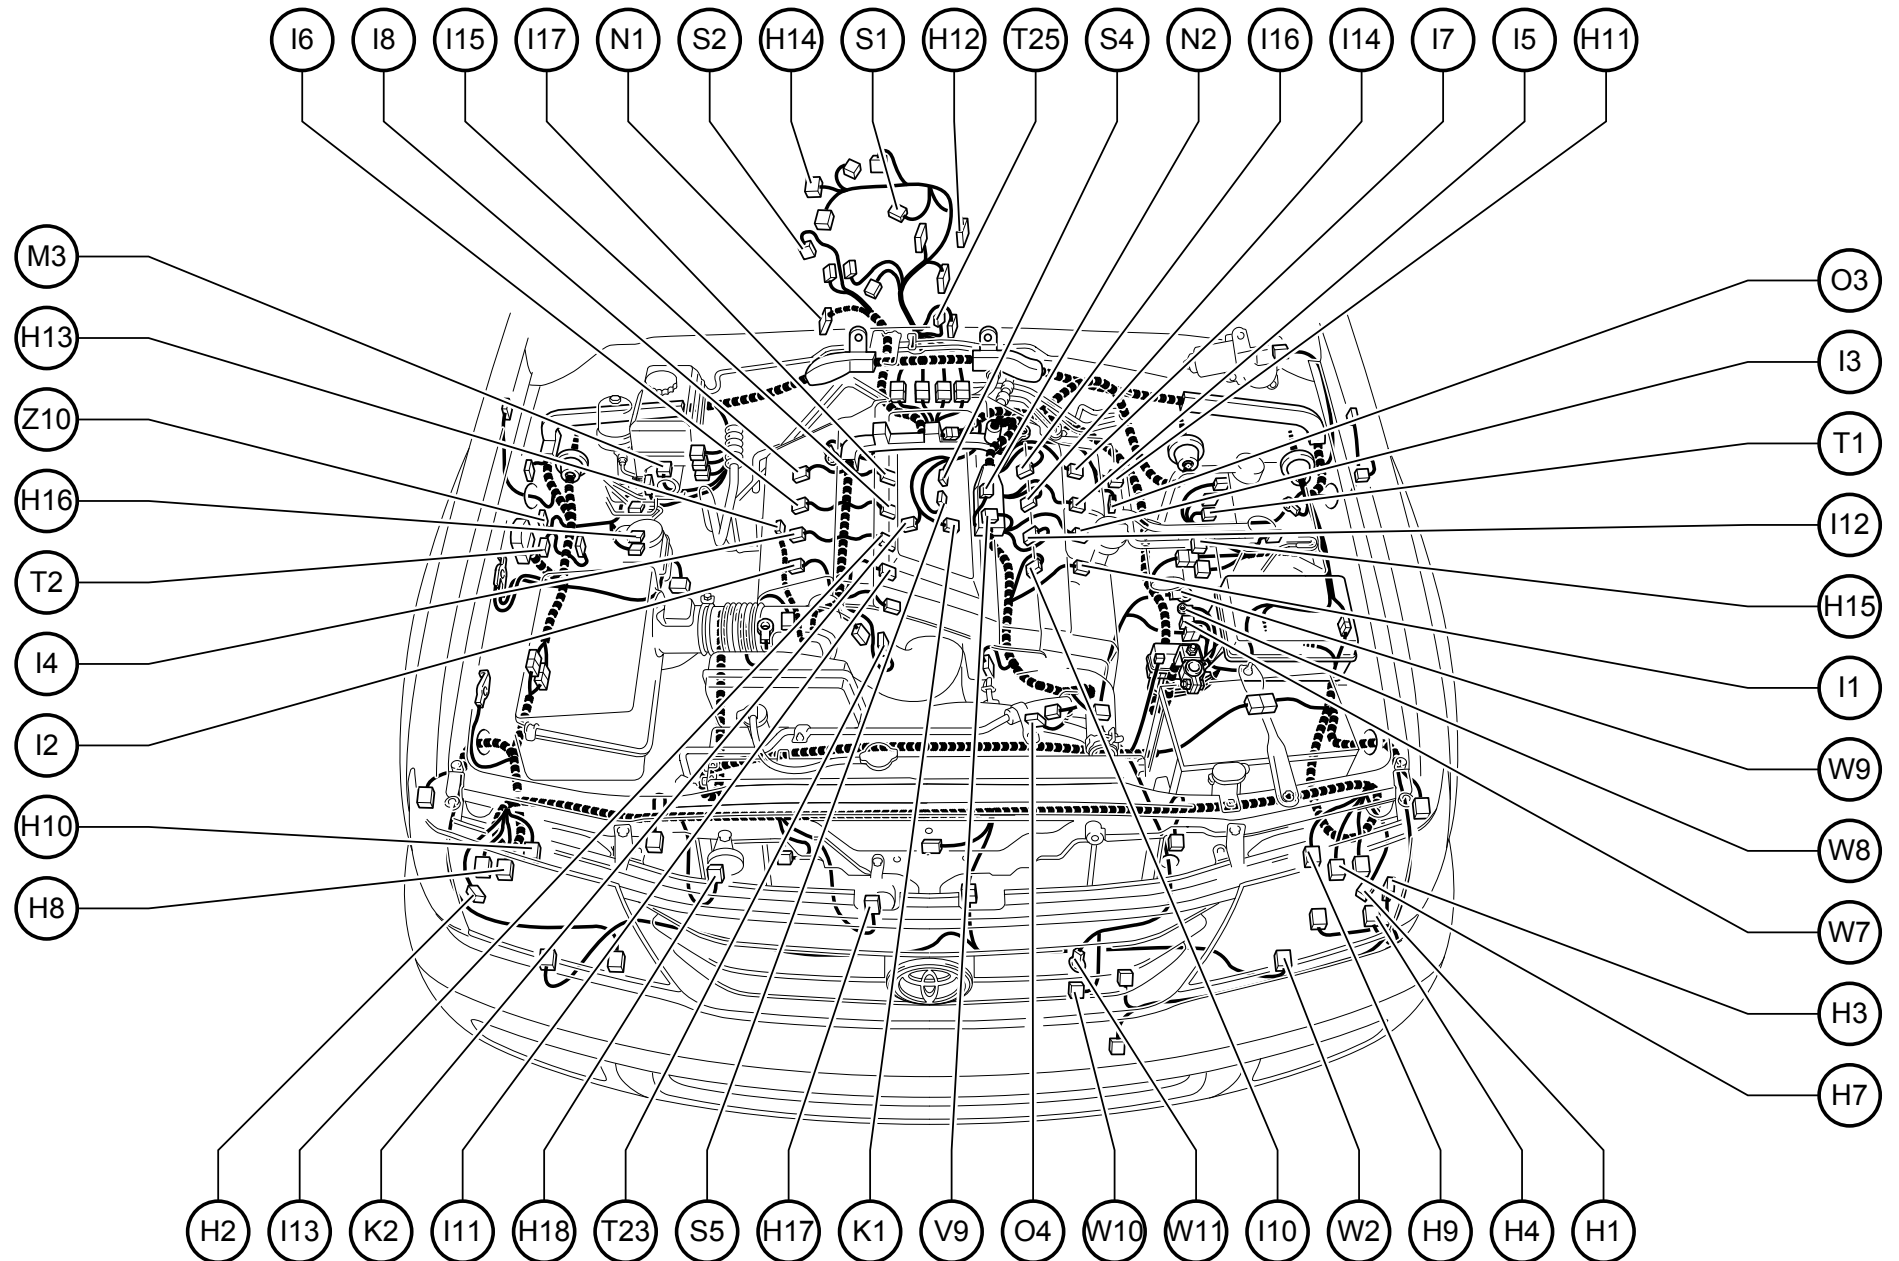

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Cleaner Control Relay
H 4 Headlight Cleaner Motor
H 7 Headlight LH (High)
H 8 Headlight RH (High)
H 9 Headlight LH (Low)
H 10 Headlight RH (Low)
H 11 Heated Oxygen Sensor (Bank 1 Sensor 1)
H 12 Heated Oxygen Sensor (Bank 1 Sensor 2)
H 13 Heated Oxygen Sensor (Bank 2 Sensor 1)
H 14 Heated Oxygen Sensor (Bank 2 Sensor 2)
H 15 Height Control Sensor Front LH
H 16 Height Control Sensor Front RH
H 17 Horn LH
H 18 Horn RH

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 5 Ignition Coil and Igniter No.5
I 6 Ignition Coil and Igniter No.6
I 7 Ignition Coil and Igniter No.7
I 8 Ignition Coil and Igniter No.8
I 10 Injector No.1
I 11 Injector No.2
I 12 Injector No.3
I 13 Injector No.4
I 14 Injector No.5
I 15 Injector No.6
I 16 Injector No.7
I 17 Injector No.8

K 1 Knock Sensor (Bank 1)
K 2 Knock Sensor (Bank 2)

M 3 Master Cylinder Pressure Sensor

N 1 A/T Indicator Light SW , Neutral Start SW
N 2 Noise Filter (Ignition)

O 3 Oil Level Sensor
O 4 Oil Pressure Sender

S 1 Speed Sensor (Combination Meter)
S 2 Speed Sensor (ECT)
S 4 Starter
S 5 Starter

T 1 Temp. Sensor (AHC)
T 2 Theft Deterrent Horn
T 23 Throttle Control Motor and Sensor
T 25 Turbine Speed Sensor

V 9 VSV (EVAP)

W 2 Washer Motor
W 7 Winch Main Relay

- W 8 Winch Main Relay
- W 9 Winch Main Relay
- W 10 Winch Motor and Magnetic SW
- W 11 Winch Motor and Magnetic SW

- Z 10 Option Connector (Wireless Door Lock Buzzer)

Position of Parts in Engine Compartment <RHD 2UZ-FE>

