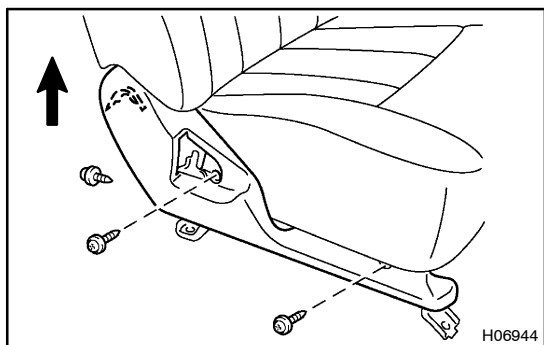


## DISASSEMBLY

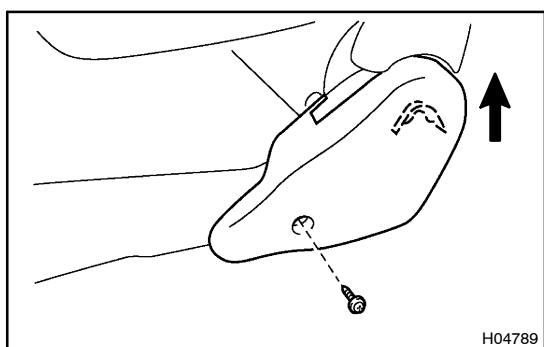
1. REMOVE HEADREST
2. REMOVE RECLINING ADJUSTER RELEASE HANDLE

Remove the screw and reclining adjuster release handle.



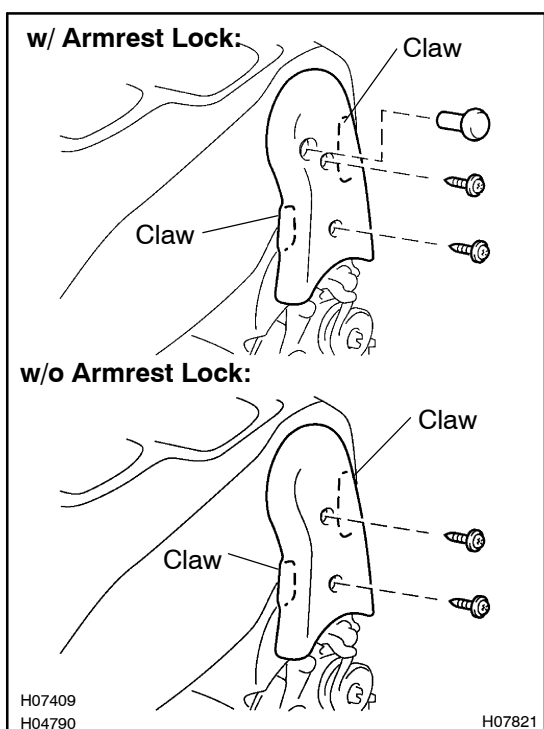
### 3. REMOVE SEAT CUSHION OUTER SHIELD

- (a) Remove the 3 screws.
- (b) Remove the seat cushion outer shield as shown in the illustration.



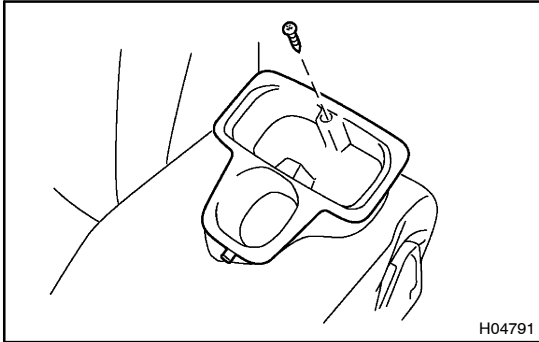
### 4. REMOVE SEAT CUSHION INNER SHIELD

- (a) Remove the screws.
- (b) Remove the seat cushion inner shield as shown in the illustration.



### 5. REMOVE CENTER ARMREST HINGE COVER

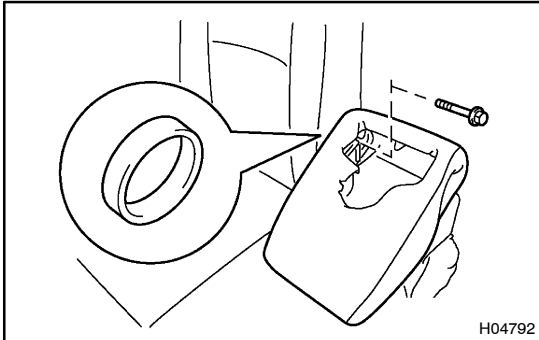
- (a) w/ Armrest Lock:  
Remove the armrest lock release knob.
- (b) Remove the 2 screws and center armrest hinge cover.

**6. REMOVE CUP HOLDER**

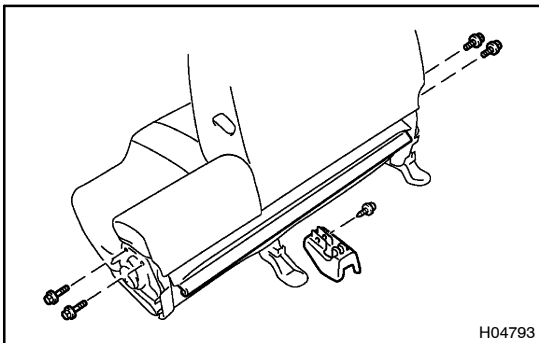
Remove the screw and cup holder as shown in the illustration.

**7. REMOVE CENTER ARMREST HINGE**

Remove the 4 bolts and center armrest hinge.

**8. REMOVE CENTER ARMREST**

Remove the bolt, spacer and center armrest.

**9. REMOVE SEATBACK ASSEMBLY**

- (a) Disengage the hook.
- (b) Remove the 4 bolts and seatback assembly.
- (c) Remove the screw and seat track upper rear cover.

**10. REMOVE SEATBACK FRAME**

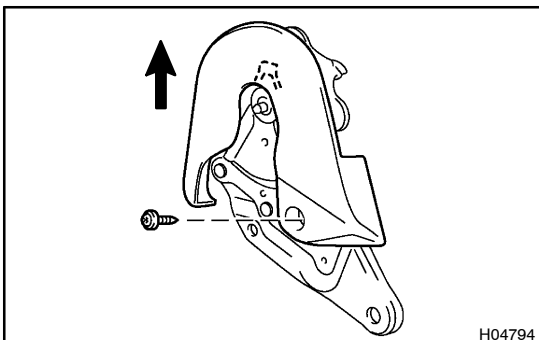
- (a) Remove the 2 hog rings.
- (b) Remove the headrest support.
- (c) Remove the seatback frame.

**11. REMOVE SEATBACK COVER**

Remove the 3 hog rings and seatback cover.

**12. REMOVE LH RECLINING ADJUSTER**

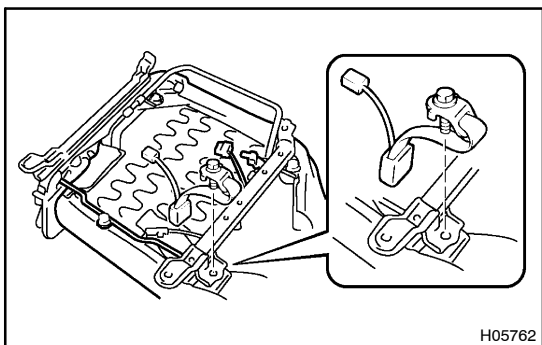
Remove the 2 bolts and LH reclining adjuster.

**13. REMOVE LH RECLINING ADJUSTER INNER COVER**

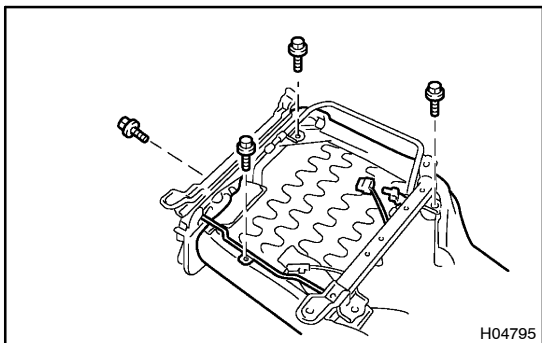
Remove the screw and LH reclining adjuster inner cover.

**14. REMOVE RECLINING CONNECTING PIPE**

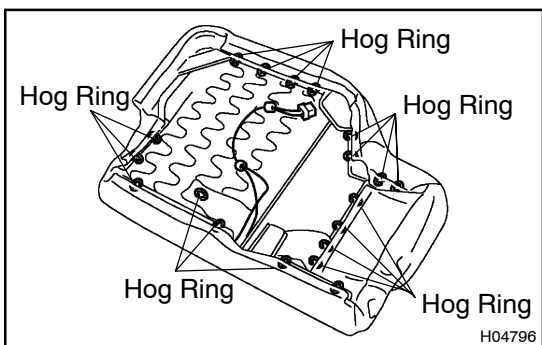
Remove the reclining connecting pipe.

**15. REMOVE FRONT SEAT CENTER BELT**

Unfasten the bolt and remove the front seat center belt.

**16. REMOVE SEAT CUSHION ASSEMBLY**

- (a) Remove the connector from the bracket.
- (b) Remove the 4 bolts and seat cushion assembly.
- (c) Remove the front seat inner belt.

**17. REMOVE SEAT CUSHION FRAME**

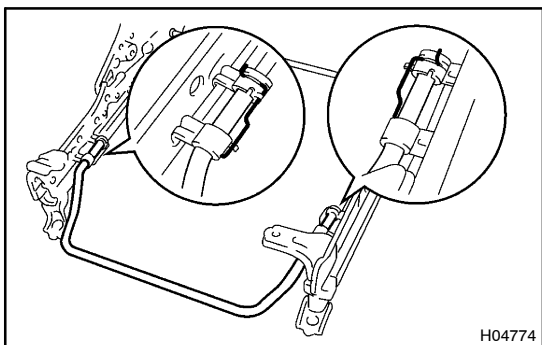
- (a) Remove the 2 clamps.
- (b) Remove the 19 hog rings and seat cushion frame.

**18. REMOVE SEAT CUSHION COVER**

Remove the 11 hog rings and seat cushion cover.

**19. REMOVE RH RECLINING ADJUSTER INNER COVER**

Remove the screw and RH reclining adjuster inner cover.

**20. REMOVE SEAT TRACK ADJUSTER HANDLE**

- (a) Using a screwdriver, remove the 2 springs.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the seat track adjuster handle.

**21. REMOVE REAR SEAT TRACK RETAINER**

Remove the 4 bolts and rear seat track retainer.