


## Position of Parts in Body

[LHD : Swing Type]

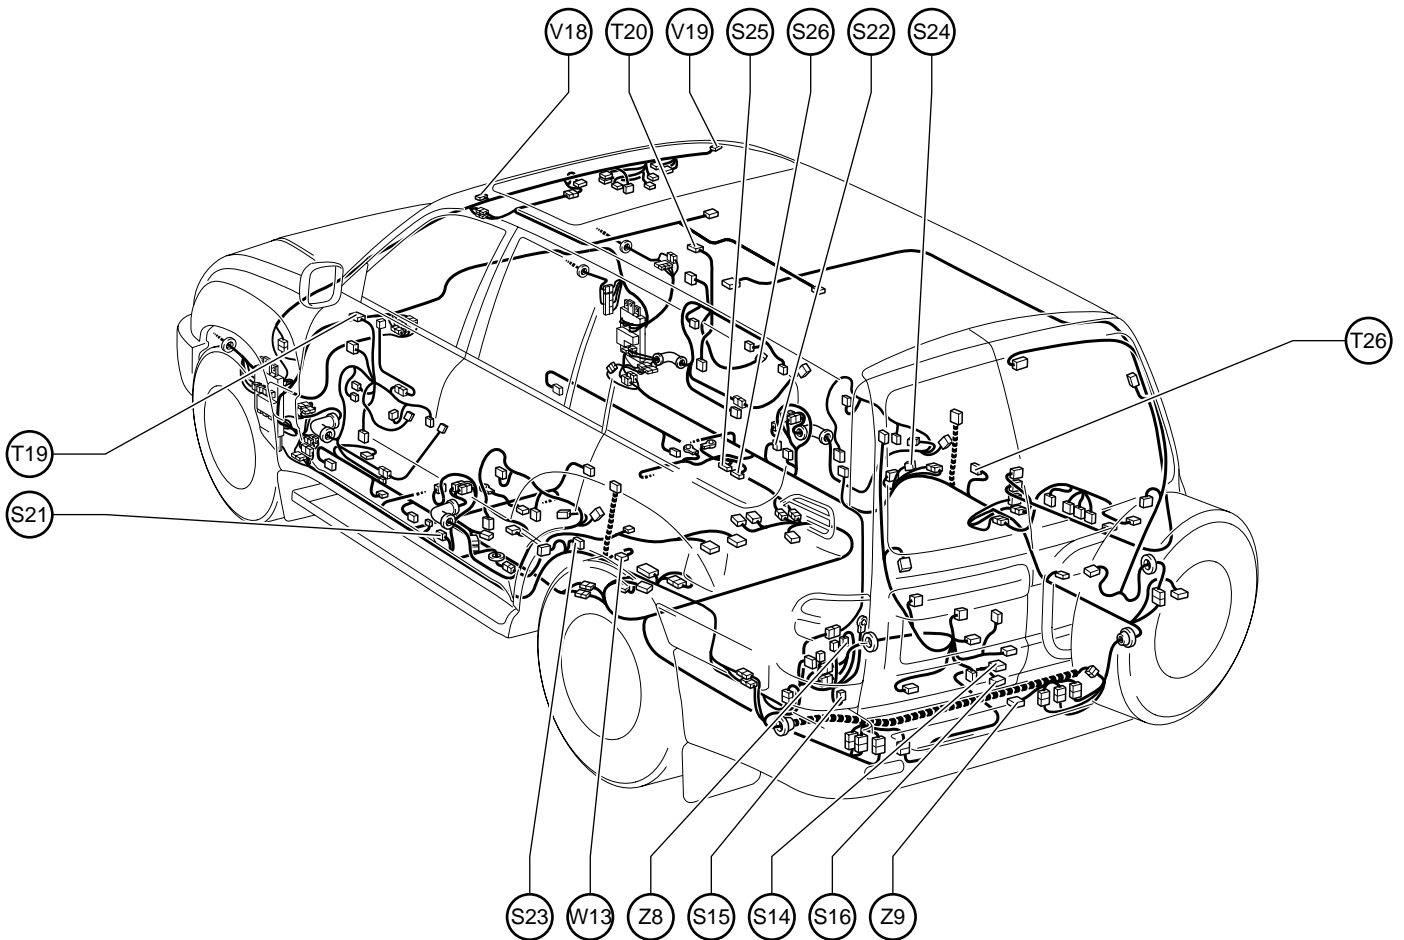

S14 Sub Fuel Pump  
 S15 Sub Fuel Pump Forcing Driving Relay  
 S16 Sub Fuel Sender  
 S21 Side Airbag Sensor Front LH  
 S22 Side Airbag Sensor Front RH  
 S23 Side Airbag Sensor Rear LH  
 S24 Side Airbag Sensor Rear RH  
 S25 Stereo Component Amplifier  
 S26 Stereo Component Amplifier

T19 Tweeter LH  
 T20 Tweeter RH  
 T26 Theft Deterrent Siren

V18 Vanity Light LH  
 V19 Vanity Light RH

W13 Woofer (Speaker)

Z 8 Option Connector (Microphone)  
 Z 9 Option Connector (Trailer Towing)