


Power source circuit (Body ECU)

CIRCUIT DESCRIPTION

This circuit supplies power to operate the Body ECU.

WIRING DIAGRAM


LHD Models:

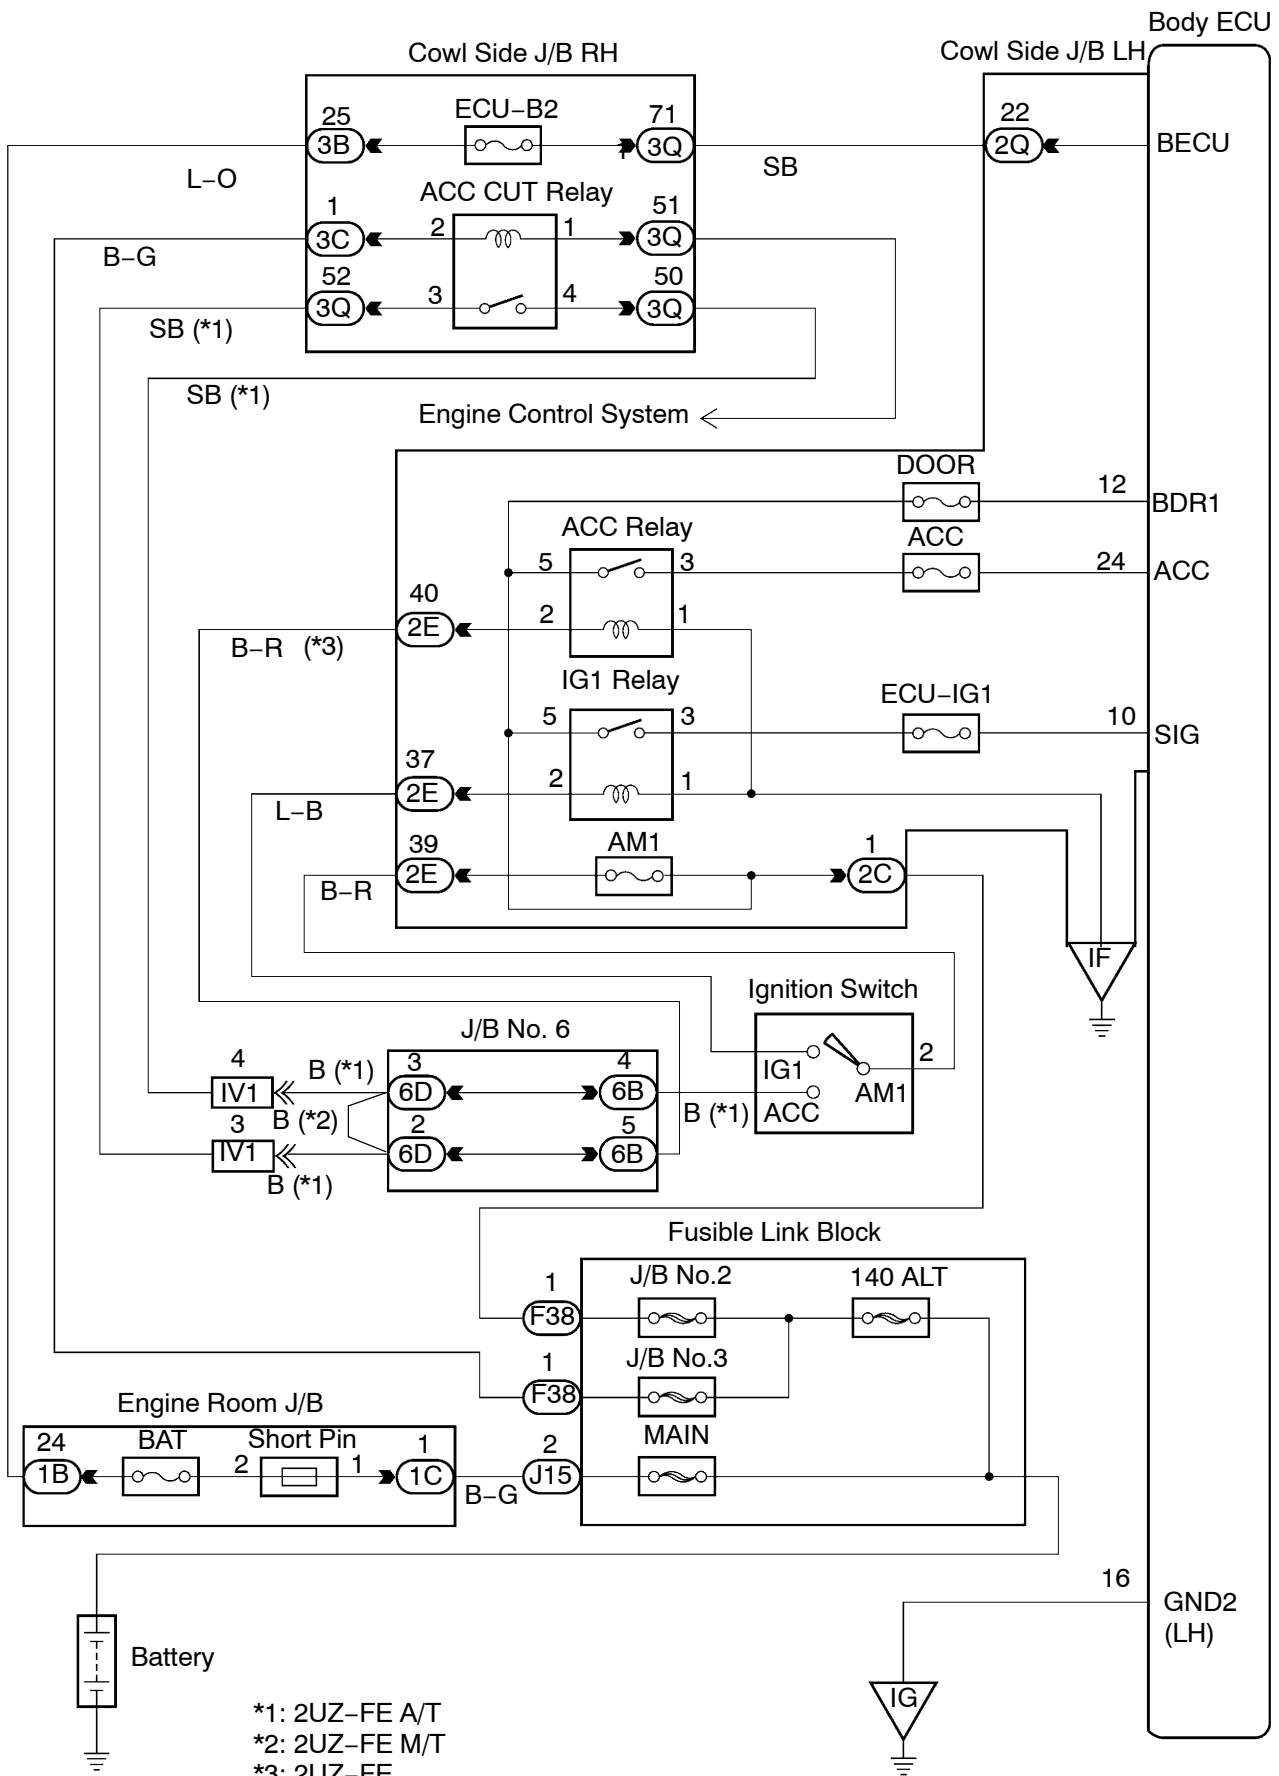


H

I26290

RHD Models:

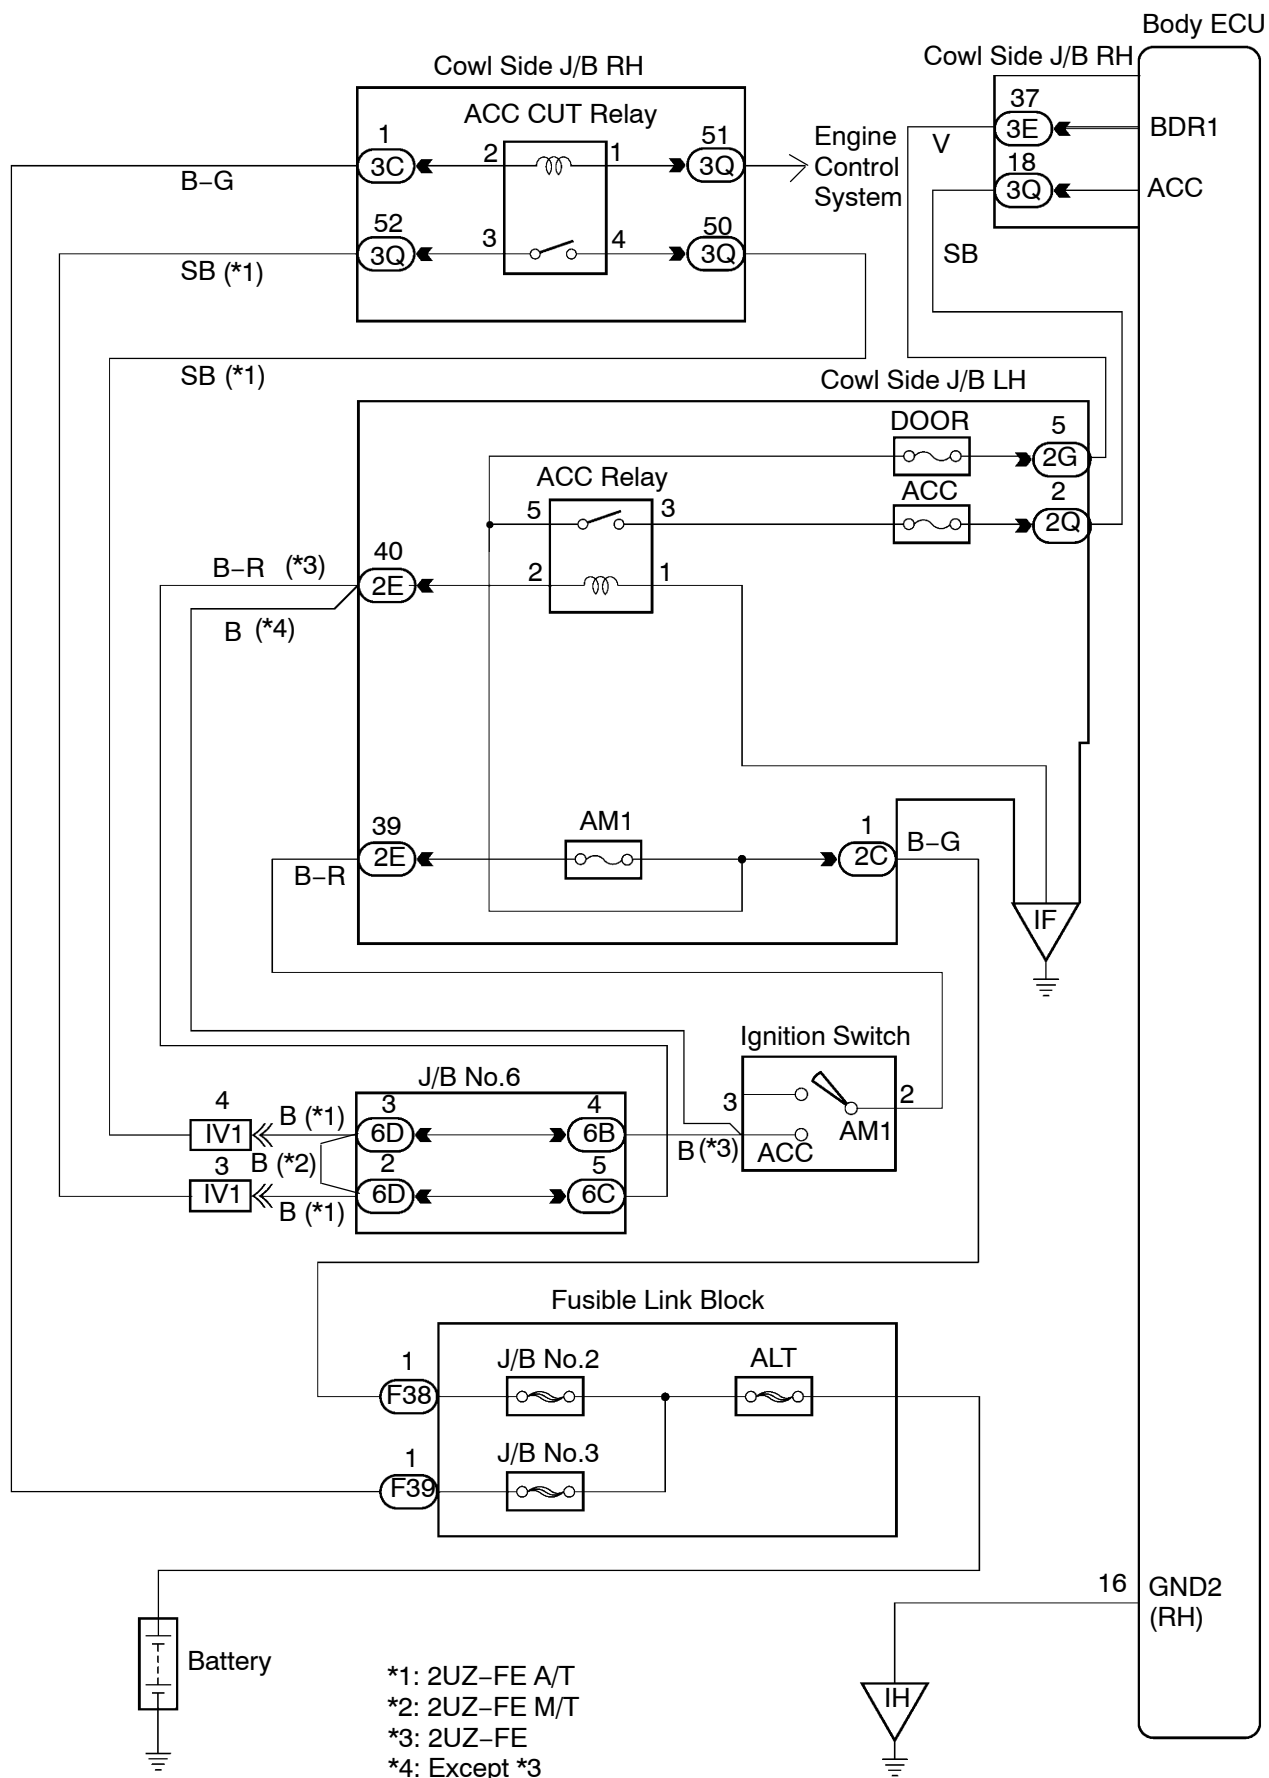

RHD Models:

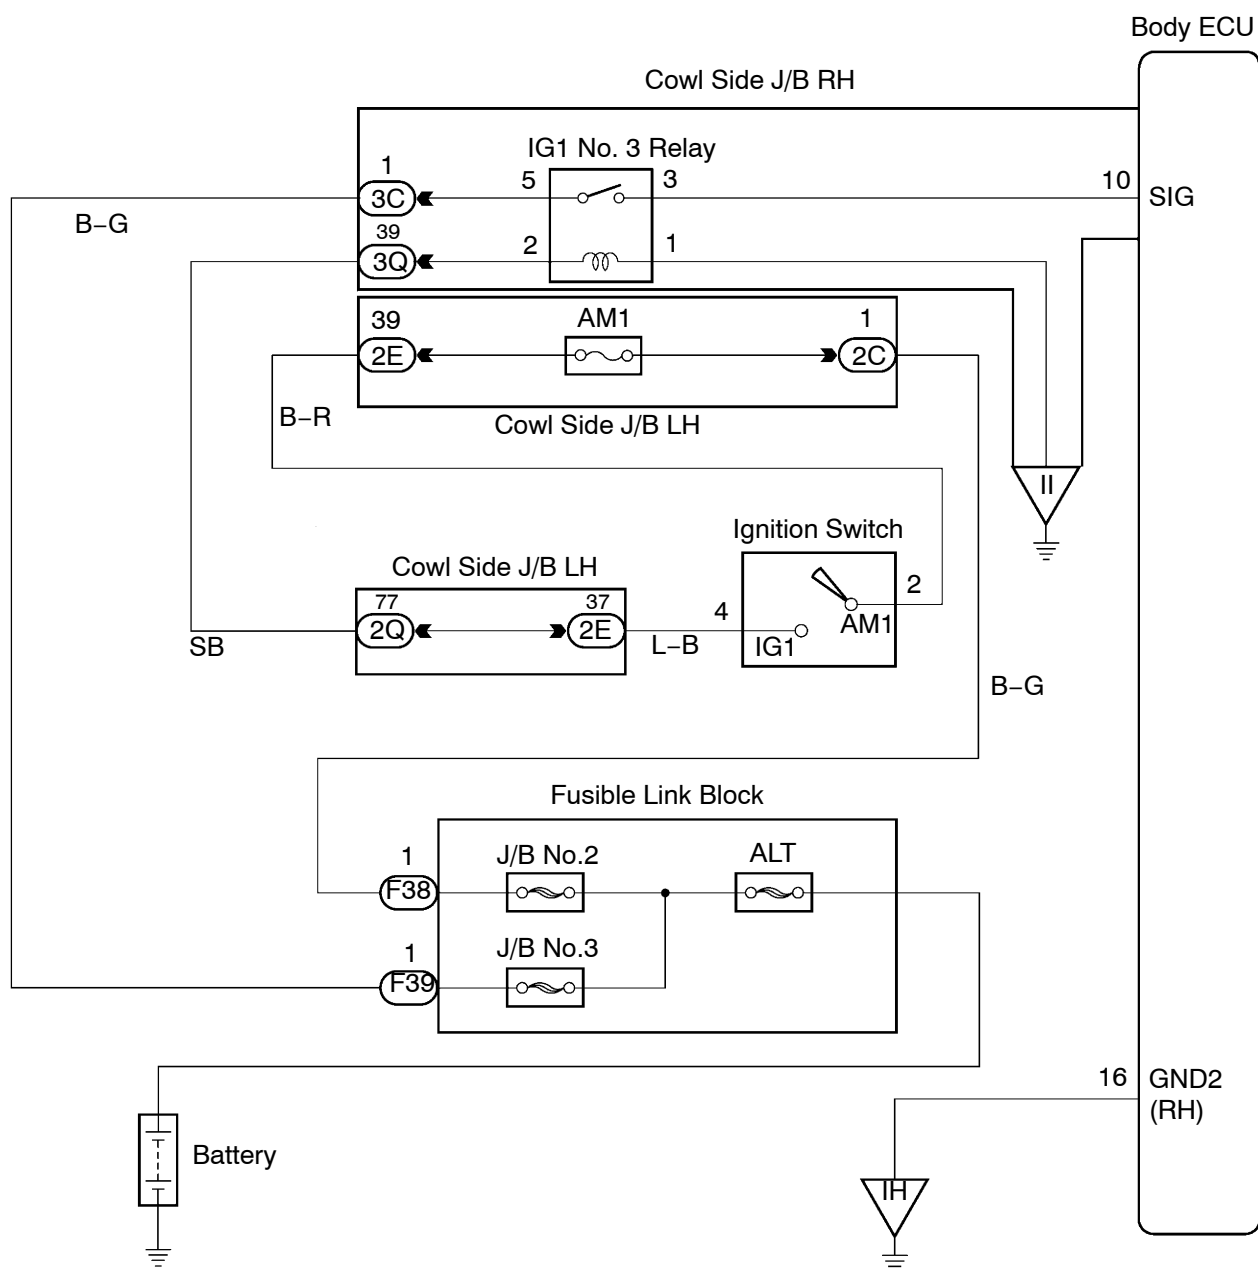

H

I26289

INSPECTION PROCEDURE

1 Check ECU-B2, DOOR fuse.

CHECK:

Check continuity of ECU-B2, DOOR fuse.

OK:

Continuity

NG

Replace faulty fuse.

OK

2 Check voltage between terminals BDR1, BECU and GND1, 2 of Body ECU connector.

PREPARATION:

(a) Turn the ignition switch OFF.

(b) Disconnect the Body ECU connector.

CHECK:

Measure the voltage between terminals BDR1, BECU and GND1, 2.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).

NG

3 Check wire harness and connector between Body ECU and body ground (See page IN-38).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).