


Wireless door lock control circuit

WIRING DIAGRAM

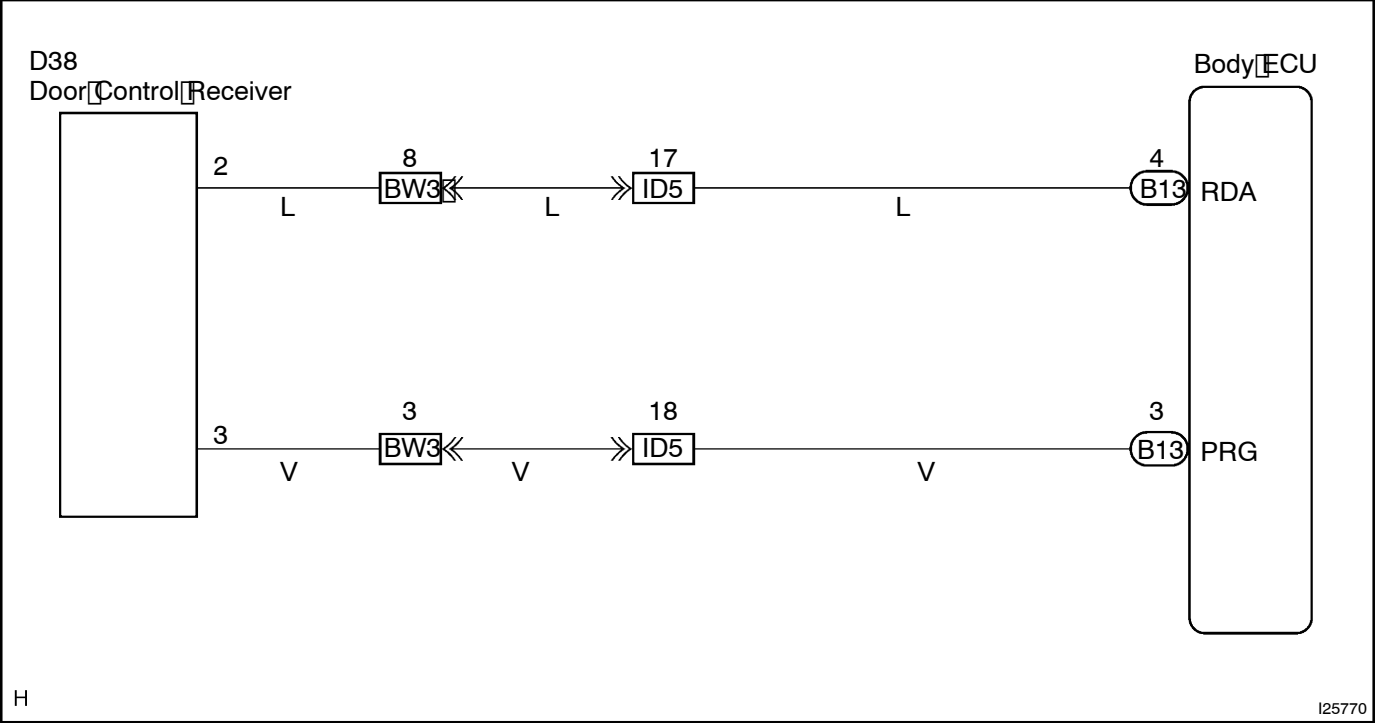

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

| | |
|---|--|
| 1 | Check door control receive using hand-held tester. |
|---|--|

PREPARATION:

Connect the hand-held tester to DLC3.

CHECK:

Check that the door control receiver operate in ACTIVE TEST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).

NG

2 Check the door control receiver (See page BE-65).

NG

Replace the door control receiver.

OK

3 Check wire harness and connector between wireless door lock ECU and Body ECU (IN-38).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).