

## CIRCUIT INSPECTION

<b>DTC</b>	<b>B1211</b>	<b>Driver door ECU communication stop</b>
------------	--------------	---

## CIRCUIT DESCRIPTION


This DTC is output when communication stops between the Power window master switch (Driver door ECU) and the Body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1211	No communication from driver door ECU for more than 10 seconds.	<ul style="list-style-type: none"><li>• Power window master switch (Driver door ECU)</li><li>• Wire harness</li></ul>


## WIRING DIAGRAM

## LHD Models:

## Double Lock ECU

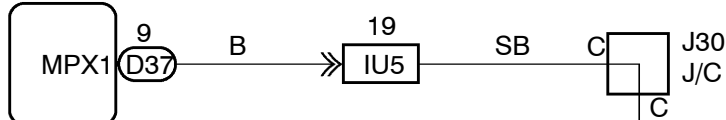

## Theft Deterrent ECU

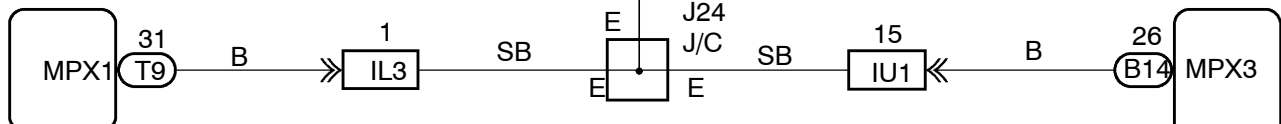


## P12

Power Window Switch Front RH




## P13

Power Window Switch Rear LH




## P14

Power Window Switch Rear RH




## P15


Power Window Master Switch



## Wiper Control ECU

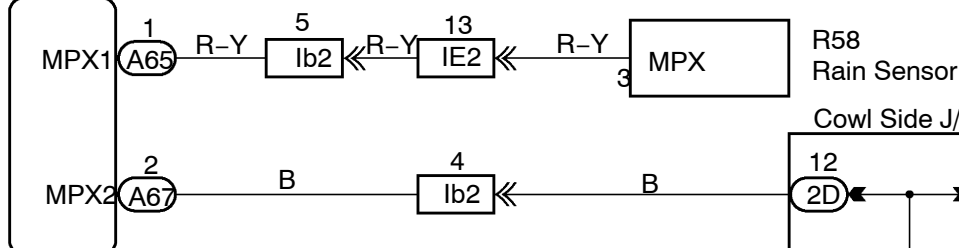


## Cowl Side J/B LH

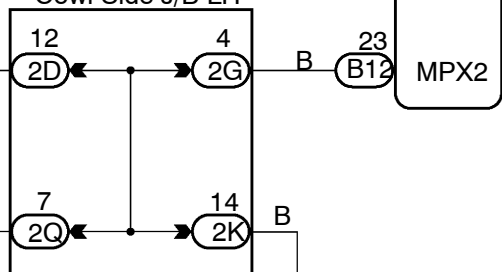


## Airbag Sensor Assembly


## Cowl Side J/B RH

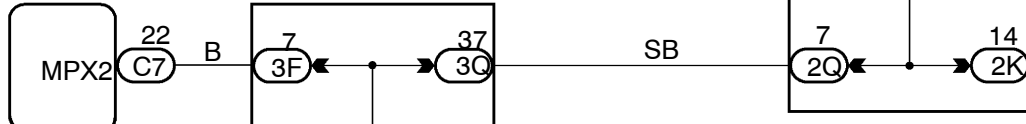

## Tilt and Telescopic ECU

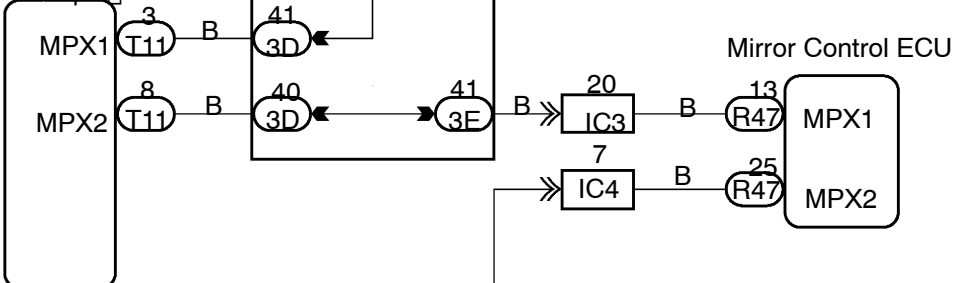


## Mirror Control ECU





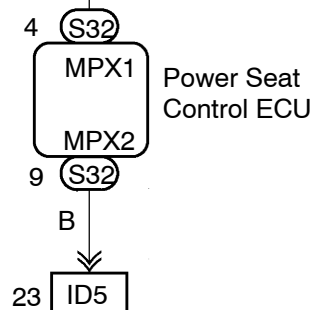


**RHD Models:**


Double Lock ECU

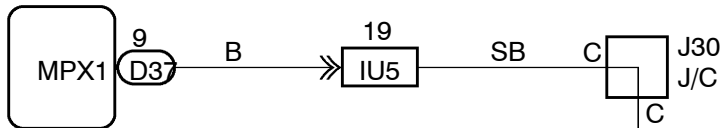


Theft Deterrent ECU

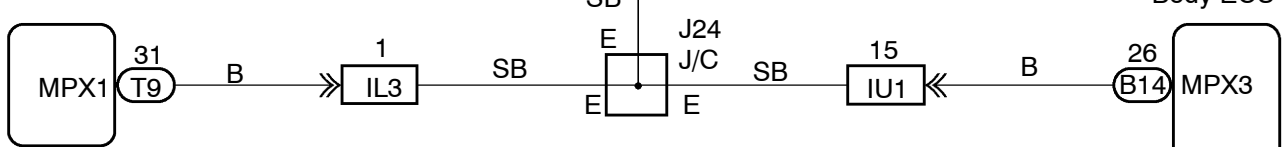P11  
Power Window Switch Front LHP13  
Power Window Switch Rear LHP14  
Power Window Switch Rear RHP15  
Power Window Master Switch


Wiper Control ECU

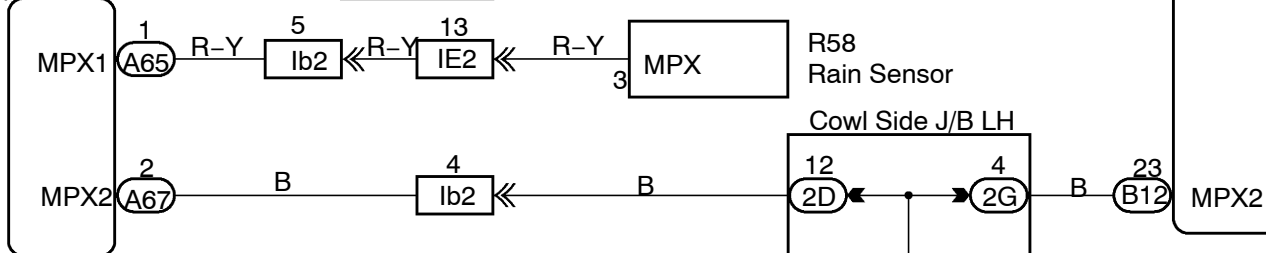

Airbag Sensor Assembly

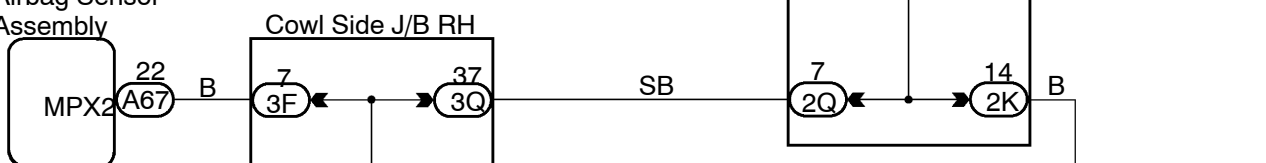

Tilt and Terescopic ECU

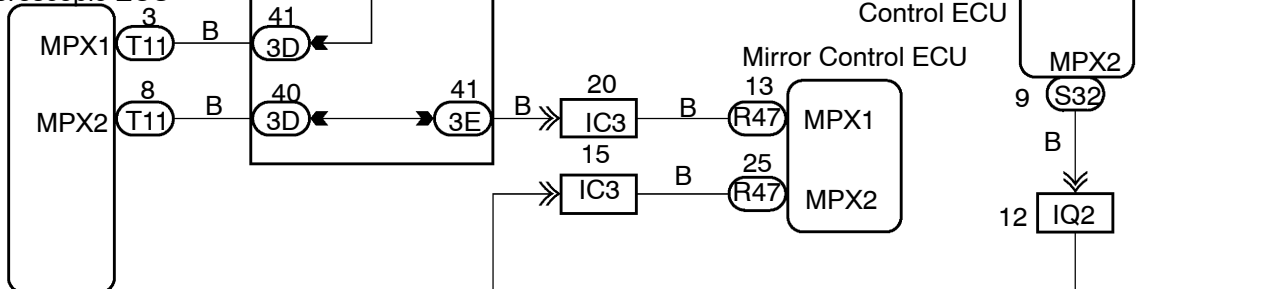

H

I26337

## INSPECTION PROCEDURE

## 1 Check Power window master switch (Driver door ECU).

**CHECK:**

Check if the Driver door window glass move up automatically.

**HINT:**

With this inspection, whether or not the Power window master switch functions normally can be diagnosed.

NG

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).

OK

## 2 Check wire harness.


**PREPARATION:**

Pull out the ECU connectors mentioned below.

Wire harness side connector of ECU	Terminal
Power window master switch (Driver door ECU) – Body ECU	MPX1 (P15-7) – MPX1 (B12-24)

**CHECK:**

Check continuity of the wire harness between the connectors.

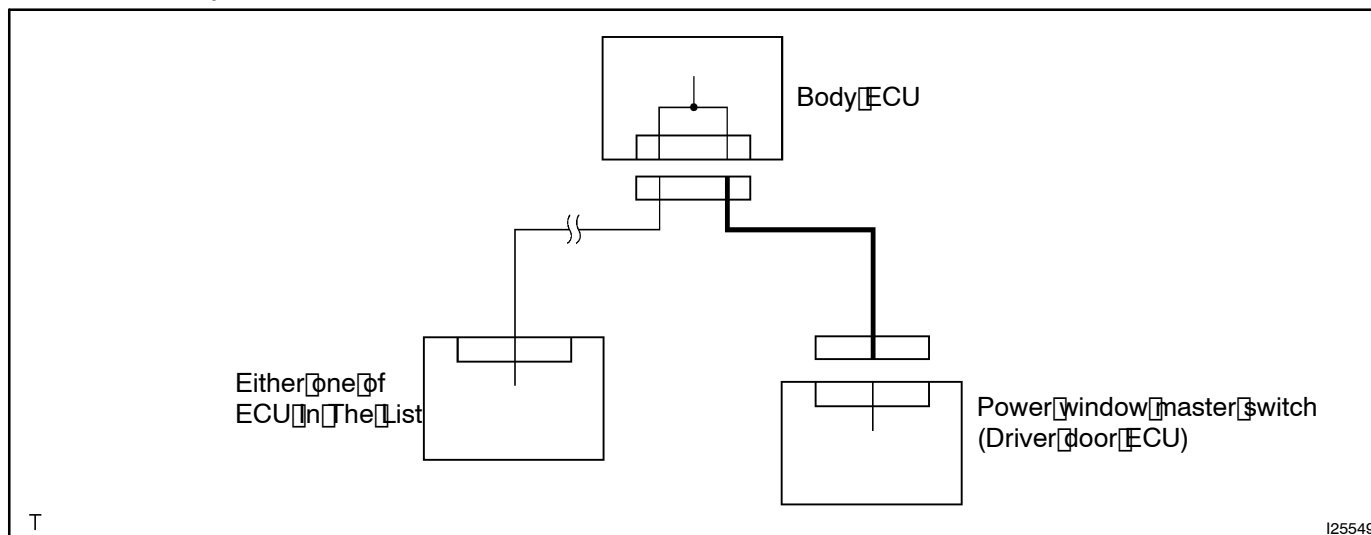**OK:**

**There is a continuity between the connectors.**

**HINT:**

If there is OPEN in any wire harness, please repair it.

**NG**

**Repair or replace wire harness.**

**OK**

**Replace Power window master switch (Driver door ECU).**