


## Position of Parts in Instrument Panel

[RHD]

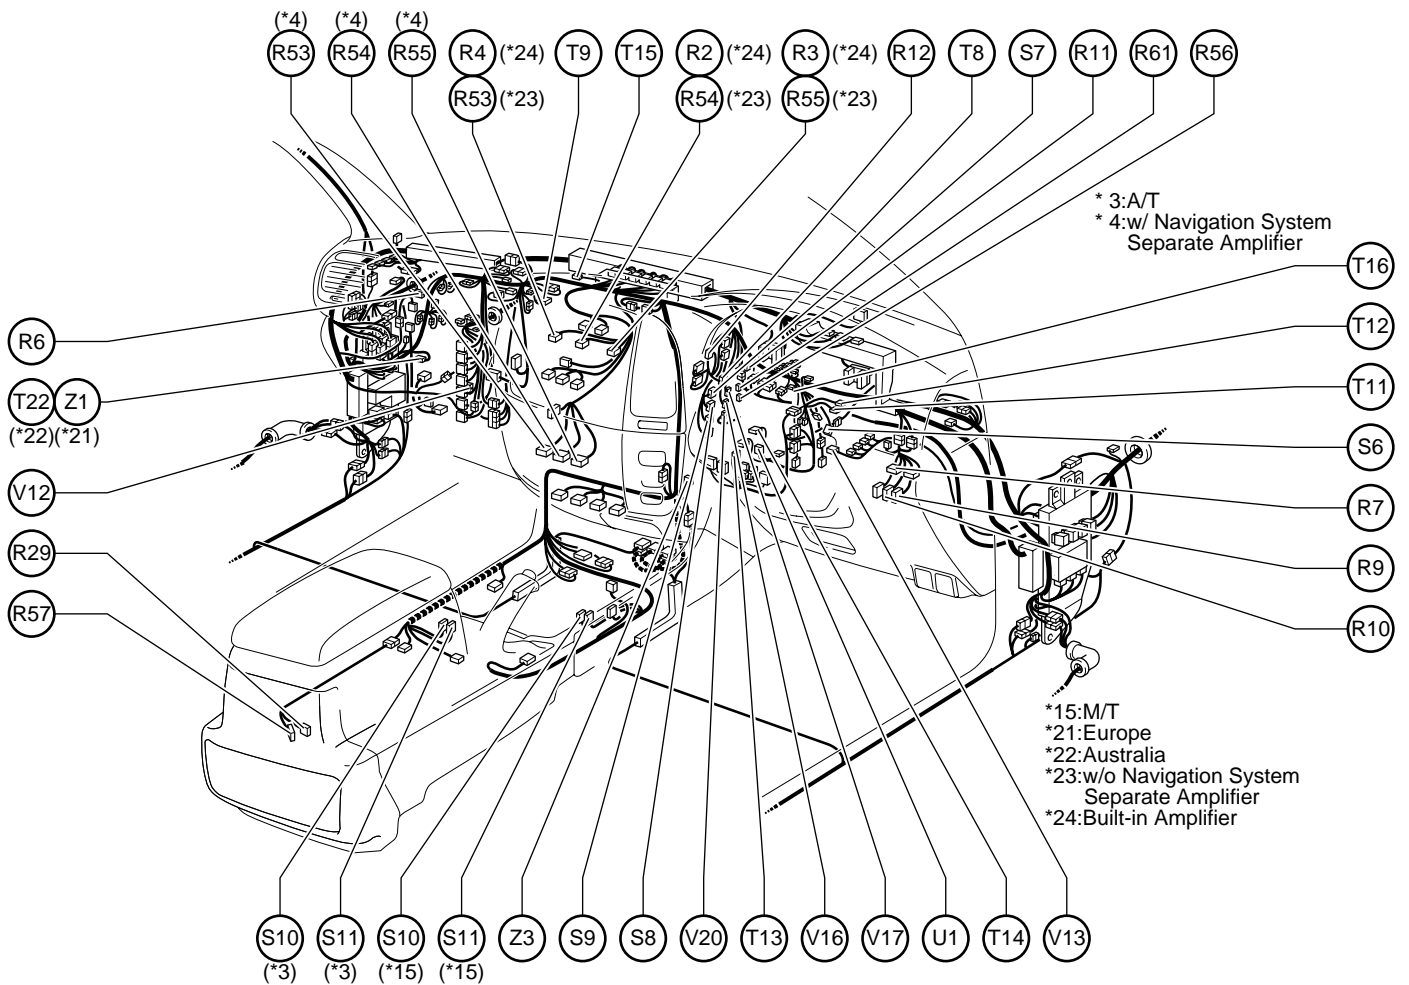

\* 3:A/T  
\* 4:w/ Navigation System  
Separate Amplifier

\*15:M/T  
\*21:Europe  
\*22:Australia  
\*23:w/o Navigation System  
Separate Amplifier  
\*24:Built-in Amplifier

R 2 Radio and Player  
R 3 Radio and Player  
R 4 Radio and Player  
R 6 Rear Diff. Lock Control ECU  
R 7 Rear Fog Light SW  
R 9 Remote Control Mirror SW  
R10 Remote Control Mirror SW  
R11 Rheostat  
R12 Room Temp. Sensor (Front)  
R29 Rear Heater Control SW  
R53 Radio and Player  
R54 Radio and Player  
R55 Radio and Player  
R56 Rear Diff. Lock Control SW  
R57 Rear Seat Audio Controller  
R61 Roll Sensing of Curtain Shield Airbags Cut Off SW

S 6 Stop Light SW  
S 7 Suspension Control ECU  
S 8 Suspension Control ECU  
S 9 Suspension Control ECU  
S10 Seat Heater SW (Driver's Seat)  
S11 Seat Heater SW (Front Passenger's Seat)

T 8 Telescopic Motor  
T 9 Theft Deterrent ECU  
T11 Tilt and Telescopic ECU  
T12 Tilt and Telescopic ECU  
T13 Tilt Motor  
T14 Ignition Key Cylinder Light  
Transponder Key Amplifier  
T15 Transponder Key Computer  
T16 Turn Signal Flasher  
T22 TVSS ECU

U 1 Unlock Warning SW

V12 Viscous Heater Amplifier  
V13 VSC Warning Buzzer  
V16 VGRS ECU  
V17 VGRS ECU  
V20 VGRS Actuator

Z 1 Option Connector (Glass Breakage Sensor)  
Z 3 Option Connector (Radar Sensor)