


DTC	RrDEF, M2	Air Inlet Damper Control Servomotor Circuit
-----	-----------	---

CIRCUIT DESCRIPTION

The air inlet damper control servomotor is controlled by the A/C amplifier and moves the air inlet damper to the desired position.

Blinking light	Detection item	Trouble Area
RrDEF M2	Air inlet damper position sensor value does not change even if A/C amplifier operated air inlet damper control servomotor.	<ul style="list-style-type: none">• Air inlet damper position sensor.• Harness or connector between air inlet damper control servomotor assembly and A/C amplifier.• A/C amplifier.


WIRING DIAGRAM

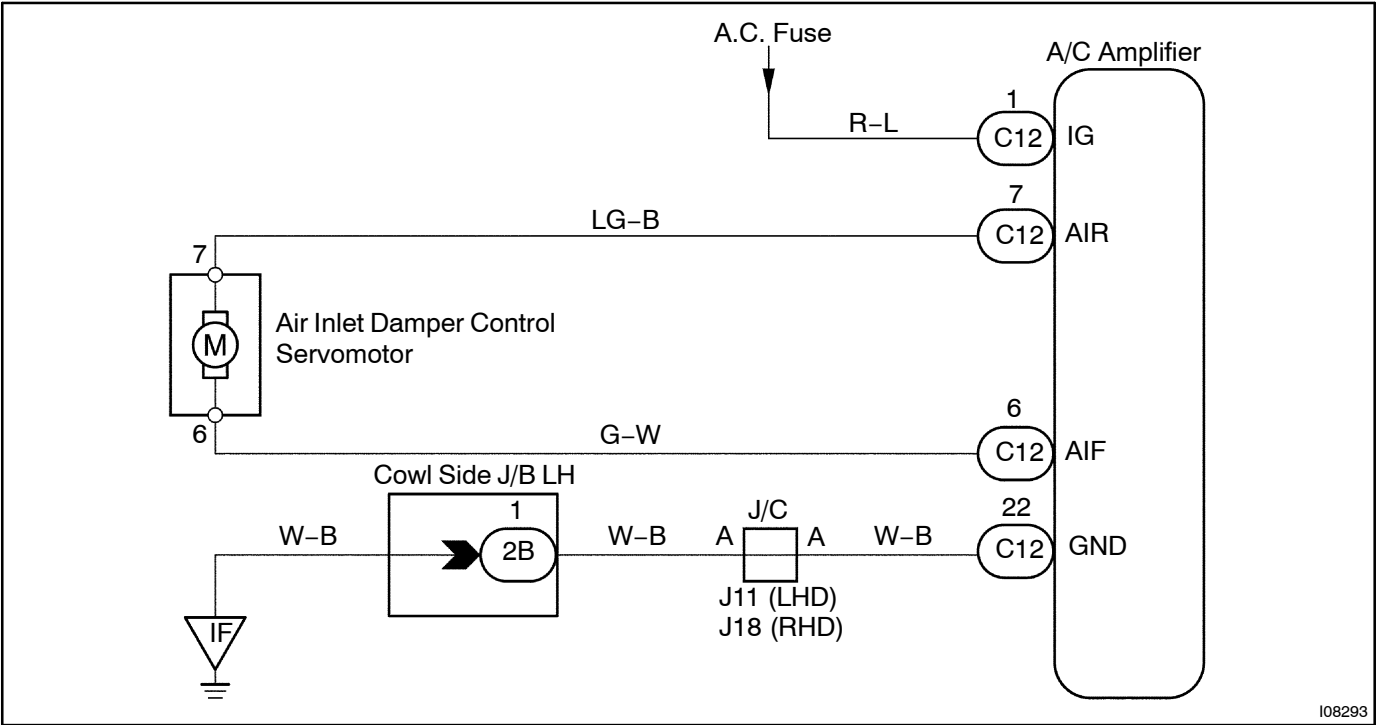

I08293

INSPECTION PROCEDURE

1 Check air inlet damper control servomotor.

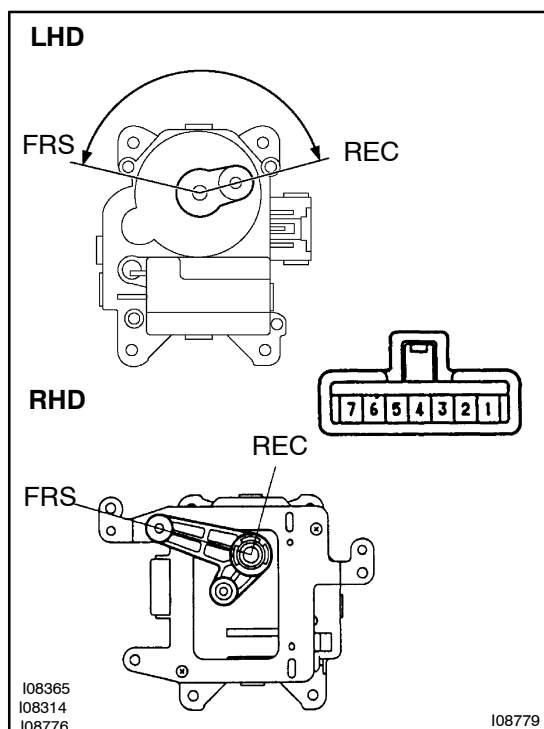**PREPARATION:**

Remove the air inlet damper control servomotor.

CHECK:

Connect positive (+) lead to terminal 7 and negative (-) lead to terminal 6.

OK:

The lever moves smoothly to REC position.

CHECK:

Connect positive (+) lead to terminal 6 and negative (-) lead to terminal 7.

OK:

The lever moves smoothly to FRS position.

NG

Replace air inlet damper control servomotor assembly.

OK

2 Check harness and connector between A/C amplifier and air inlet damper control servomotor (See page IN-35).

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.