


FUEL DAMPER REPLACEMENT

FU04X-01

1. DRAIN FUEL FILTER AND DAMPER (See page FU-1)

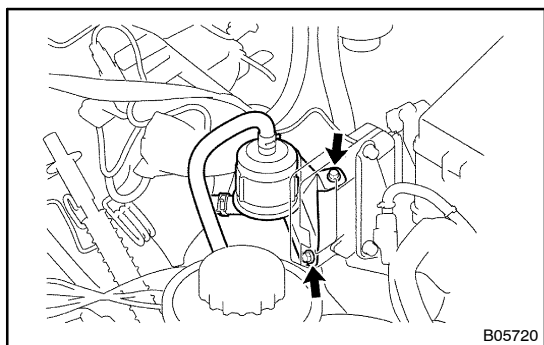

2. REPLACE FUEL DAMPER

- (a) Remove the fuel damper.
 - (1) Disconnect the 2 fuel hoses.
 - (2) Remove the 2 bolts and fuel damper.
- (b) Install the fuel damper.
 - (1) Install the fuel damper with the 2 bolts.
Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)
 - (2) Connect the 2 fuel hoses.

3. FILL FUEL FILTER AND DAMPER WITH FUEL (See page FU-1)