


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Engine Compartment

[LHD : 1HD-FTE]

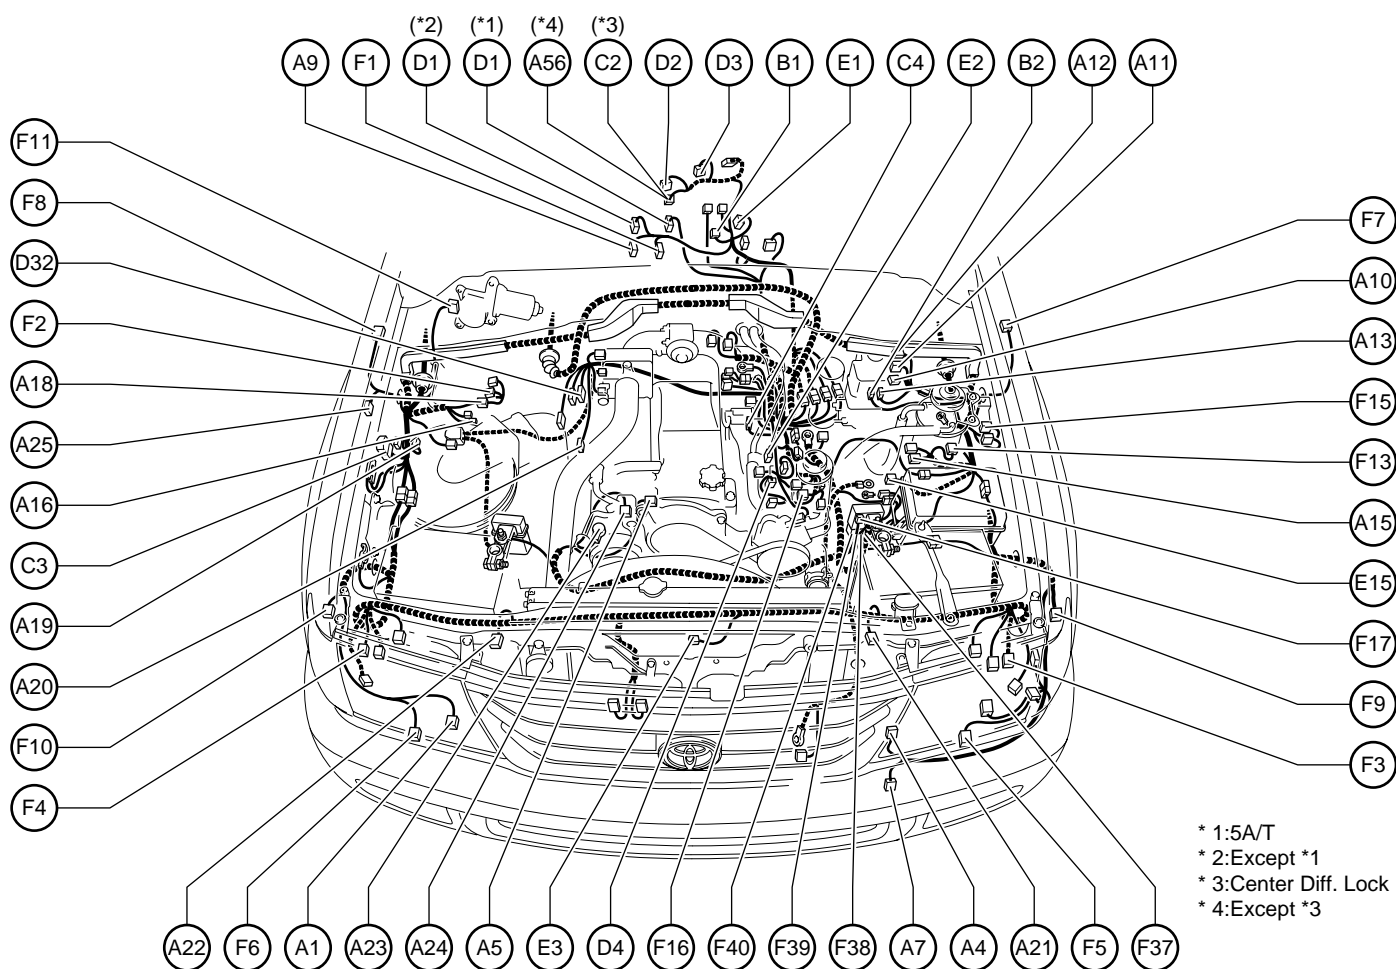

\* 1:5A/T  
 \* 2:Except \*1  
 \* 3:Center Diff. Lock  
 \* 4:Except \*3

A 1 A/C Ambient Temp. Sensor  
 A 4 Pressure SW  
 A 5 A/C Magnetic Clutch  
 A 7 A/C Magnetic Valve  
 A 9 A/T Oil Temp. Sensor  
 A10 ABS Actuator  
 A11 ABS Actuator  
 A12 ABS Actuator  
 A13 ABS Actuator  
 A15 ABS Speed Sensor Front LH  
 A16 ABS Speed Sensor Front RH  
 A18 AHC Pump Motor  
 A19 Air Cleaner Warning Sensor  
 A20 Air Flow Meter  
 A21 Airbag Sensor Front LH  
 A22 Airbag Sensor Front RH  
 A23 Alternator  
 A24 Alternator  
 A25 Auto Antenna Motor  
 A56 ADD Control Motor

B 1 Back-Up Light SW  
 B 2 Brake Fluid Level Warning SW

C 2 Center Diff. Lock Control Motor  
 C 3 Check Connector  
 C 4 Crankshaft Position Sensor

D 1 Detection SW (Center Diff. Lock)  
 D 2 Detection SW (Transfer L Position)  
 D 3 Detection SW (Transfer Neutral Position)  
 D 4 Diesel Engine Revolution Sensor  
 D32 Diesel Throttle Position SW

E 1 ECT Solenoid  
 E 2 EFI Water Temp. Sensor  
 E 3 Engine Hood Courtesy SW  
 E15 EDU

F 1 First Position SW  
 F 2 Fluid Pressure Sensor  
 F 3 Front Clearance Light LH  
 F 4 Front Clearance Light RH  
 F 5 Front Fog Light LH  
 F 6 Front Fog Light RH  
 F 7 Front Side Turn Signal Light LH  
 F 8 Front Side Turn Signal Light RH  
 F 9 Front Turn Signal Light LH  
 F10 Front Turn Signal Light RH  
 F11 Front Wiper Motor  
 F13 Fuel Heater SW  
 F15 Fuel Sediment SW  
 F16 Fuel Temp. Sensor  
 F17 Fusible Link Block  
 F37 Fusible Link Block  
 F38 Fusible Link Block  
 F39 Fusible Link Block  
 F40 Fusible Link Block