


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Body

[LHD : Swing Type]

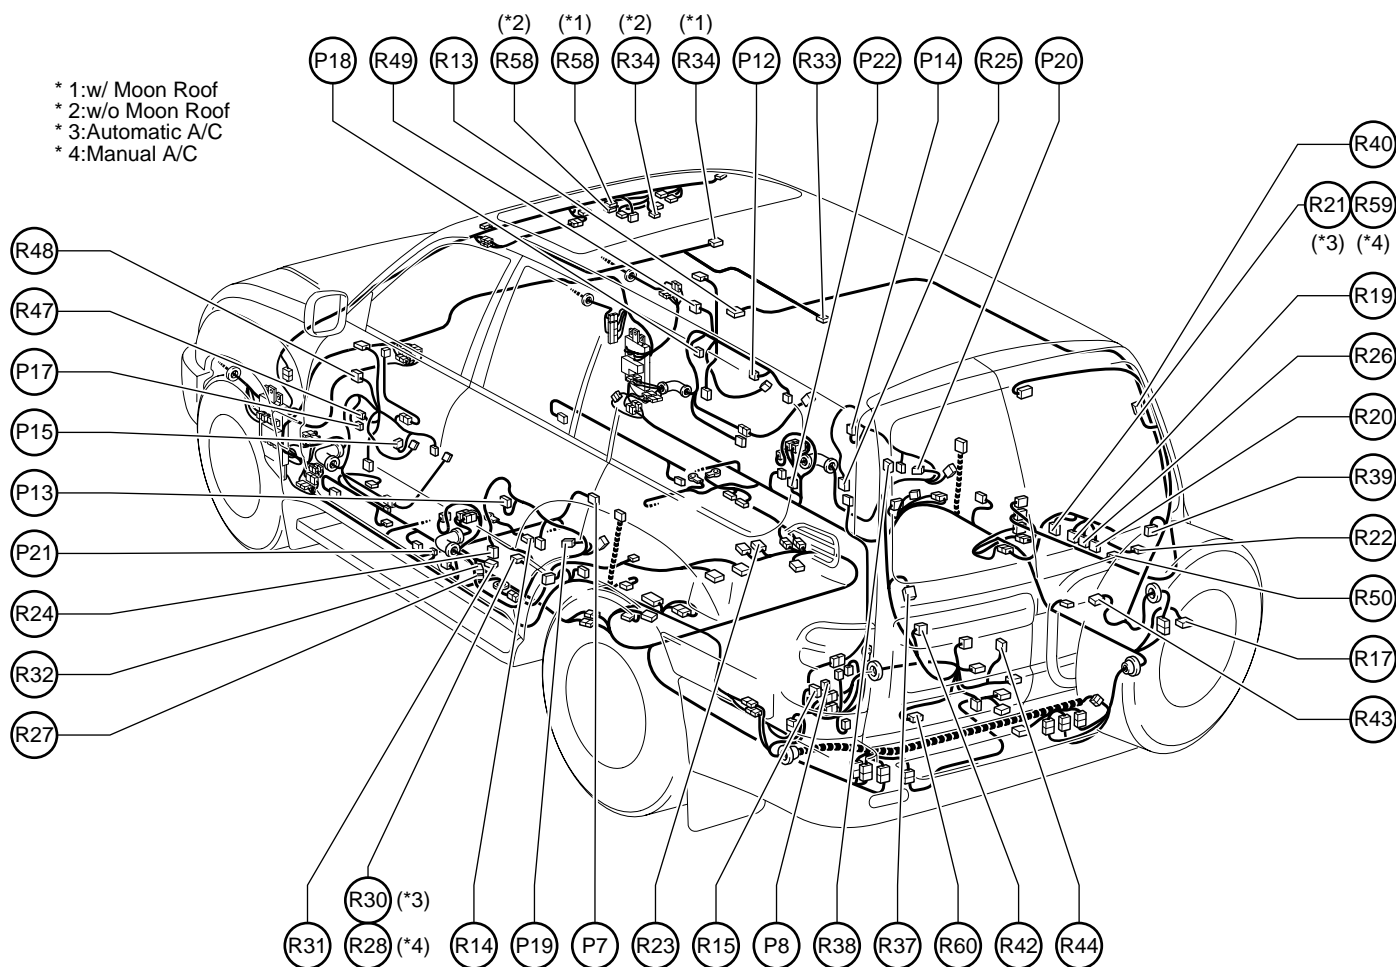

P 7 Parking Brake SW  
 P 8 Power Outlet (Luggage Compartment)  
 P12 Power Window Control SW Front RH  
 P13 Power Window Control SW Rear LH  
 P14 Power Window Control SW Rear RH  
 P15 Power Window Master SW  
 P17 Power Window Motor Front LH  
 P18 Power Window Motor Front RH  
 P19 Power Window Motor Rear LH  
 P20 Power Window Motor Rear RH  
 P21 Pretensioner LH  
 P22 Pretensioner RH

R13 Rear A/C Control SW  
 R14 Rear Air Mix Control Servo Motor  
 R15 Rear Combination Light LH  
 R17 Rear Combination Light RH  
 R19 Rear Cooler Blower Motor  
 R20 Rear Cooler Magnetic Valve  
 R21 Rear Cooler Power Transistor  
 R22 Rear Cooler Relay  
 R23 Rear Diff. Lock Motor  
 R24 Rear Door Speaker LH

R25 Rear Door Speaker RH  
 R26 Rear Evaporator Temp. Sensor  
 R27 Rear Heater Blower Motor  
 R28 Rear Heater Blower Resistor  
 R30 Rear Heater Power Transistor  
 R31 Rear Heater Relay  
 R32 Rear Inlet Air Temp. Sensor  
 R33 Rear Interior Light  
 R34 Rear Personal Light  
 R37 Rear Window Defogger LH  
 R38 Rear Window Defogger LH  
 R39 Rear Window Defogger RH  
 R40 Rear Window Defogger RH  
 R42 Rear Wiper Motor LH  
 R43 Rear Wiper Motor RH  
 R44 Rear Wiper Relay  
 R47 Remote Control Mirror ECU  
 R48 Remote Control Mirror LH  
 R49 Remote Control Mirror RH  
 R50 Room Temp. Sensor (Rear)  
 R58 Rain Sensor  
 R59 Rear Cooler Blower Resistor  
 R60 Rear Fog Light