

H 1 Headlight Beam Level Control Actuator LH  
H 2 Headlight Beam Level Control Actuator RH  
H 3 Headlight Cleaner Control Relay  
H 4 Headlight Cleaner Motor  
H 5 Headlight Control ECU LH  
H 6 Headlight Control ECU RH  
H 7 Headlight LH (High)  
H 8 Headlight RH (High)  
H 9 Headlight LH (Low)  
H 10 Headlight RH (Low)  
H 11 Heated Oxygen Sensor (Bank 1 Sensor 1)  
H 12 Heated Oxygen Sensor (Bank 1 Sensor 2)  
H 13 Heated Oxygen Sensor (Bank 2 Sensor 1)  
H 14 Heated Oxygen Sensor (Bank 2 Sensor 2)  
H 15 Height Control Sensor Front LH  
H 16 Height Control Sensor Front RH  
H 17 Horn LH  
H 18 Horn RH

I 1 Ignition Coil and Igniter No.1  
I 2 Ignition Coil and Igniter No.2  
I 3 Ignition Coil and Igniter No.3  
I 4 Ignition Coil and Igniter No.4  
I 5 Ignition Coil and Igniter No.5  
I 6 Ignition Coil and Igniter No.6  
I 7 Ignition Coil and Igniter No.7  
I 8 Ignition Coil and Igniter No.8  
I 10 Injector No.1  
I 11 Injector No.2  
I 12 Injector No.3  
I 13 Injector No.4  
I 14 Injector No.5  
I 15 Injector No.6  
I 16 Injector No.7  
I 17 Injector No.8

K 1 Knock Sensor (Bank 1)  
K 2 Knock Sensor (Bank 2)

M 3 Master Cylinder Pressure Sensor

N 1 A/T Indicator Light SW , Neutral Start SW  
N 2 Noise Filter (Ignition)  
N 6 Noise Filter (ABS)

O 3 Oil Level Sensor  
O 4 Oil Pressure Sender


S 1 Speed Sensor (Combination Meter)  
S 2 Speed Sensor (ECT)  
S 4 Starter  
S 5 Starter

T 1 Temp. Sensor (AHC)  
T 2 Theft Deterrent Horn  
T 23 Throttle Control Motor and Sensor  
T 25 Turbine Speed Sensor

V 3 Variable Resistor

- V 9 VSV (EVAP)
- W 2 Washer Motor
- W 7 Winch Main Relay
- W 8 Winch Main Relay
- W 9 Winch Main Relay
- W 10 Winch Motor and Magnetic SW
- W 11 Winch Motor and Magnetic SW

Position of Parts in Engine Compartment <LHD 2UZ-FE>

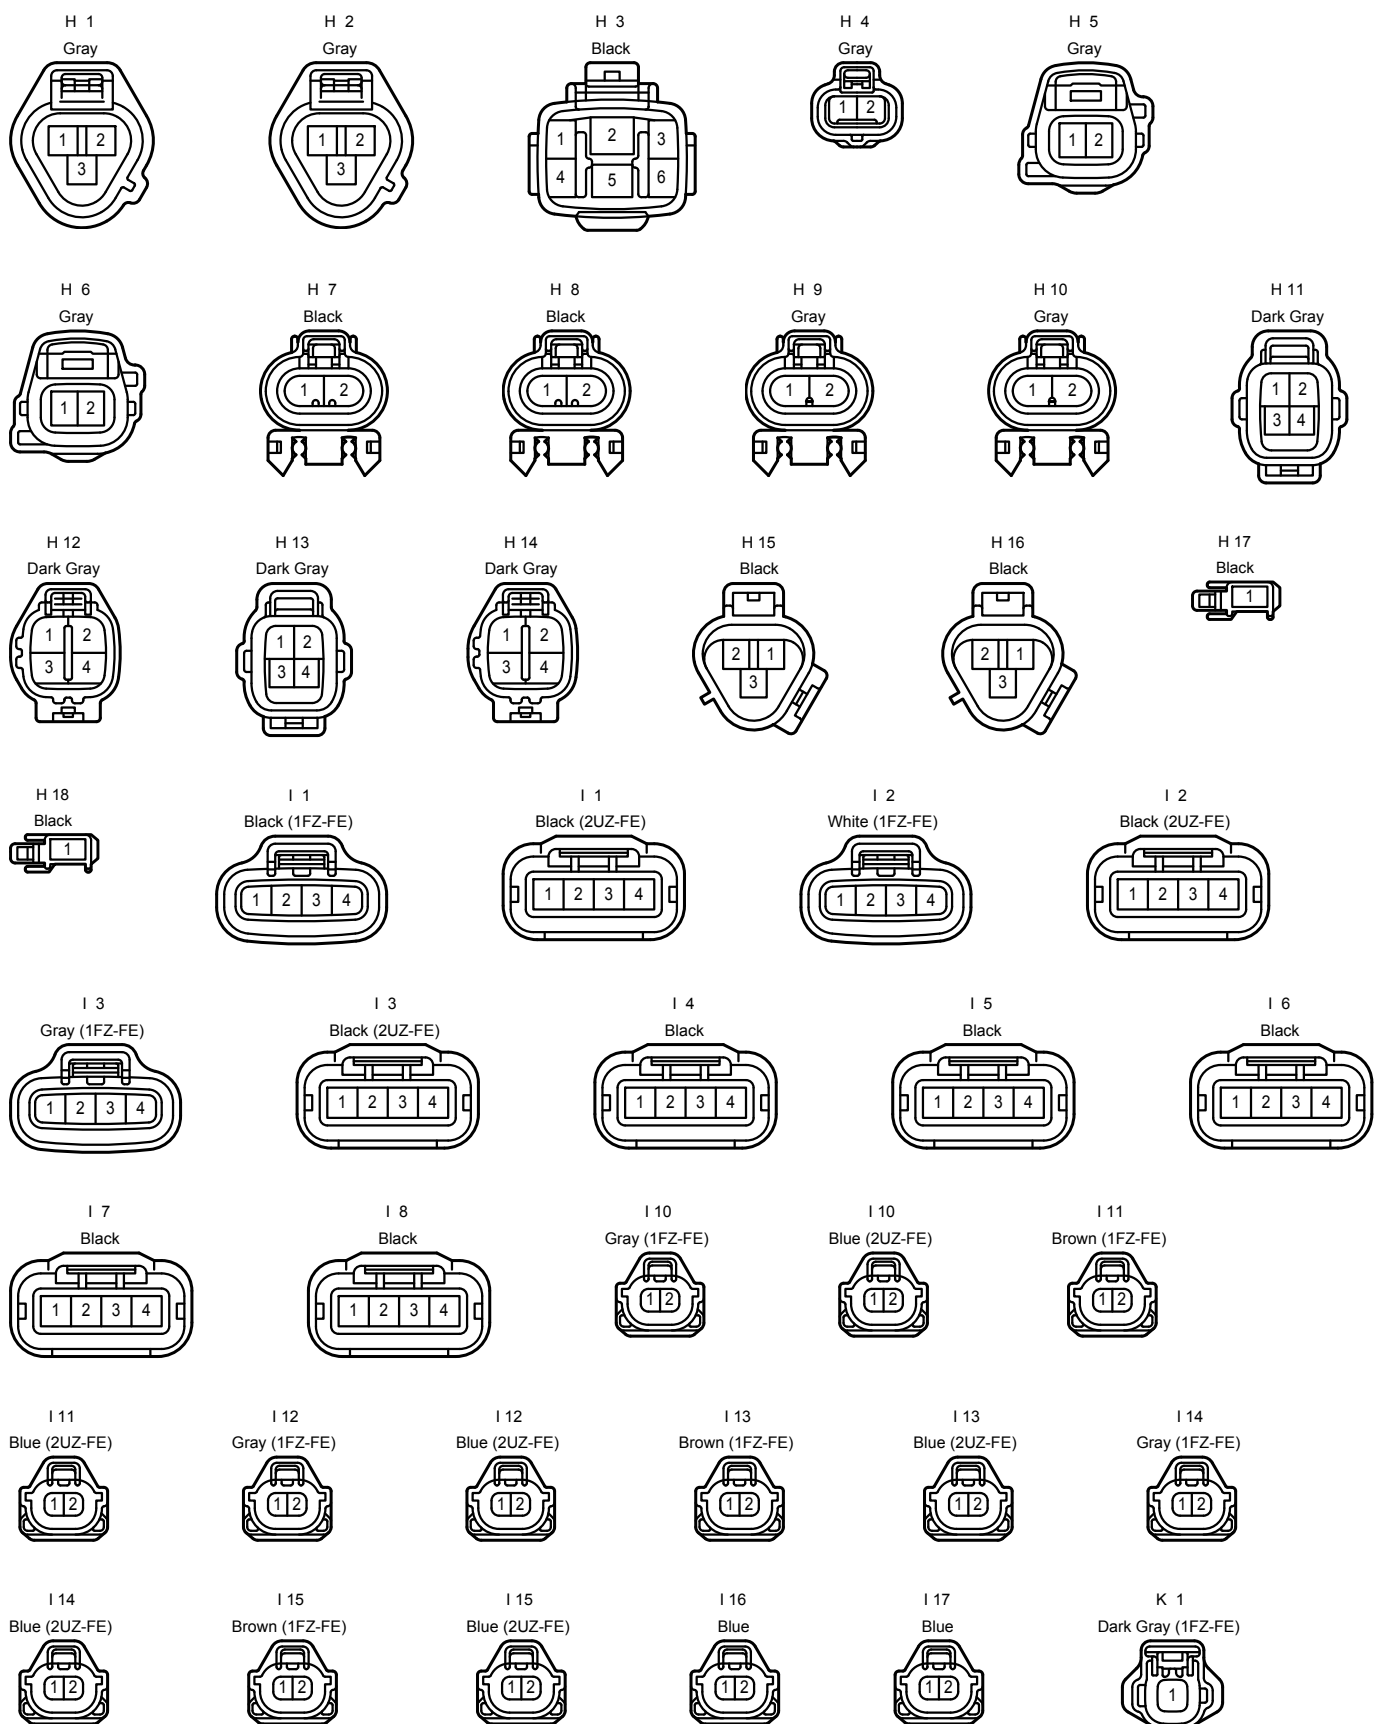

Position of Parts in Engine Compartment <LHD 2UZ-FE>

K 1  
Black (2UZ-FE)



K 2  
Dark Gray (1FZ-FE)



K 2  
Gray (2UZ-FE)

