


Driver seat buckle switch circuit

WIRING DIAGRAM


LHD Models w/ Driving Position Memory:

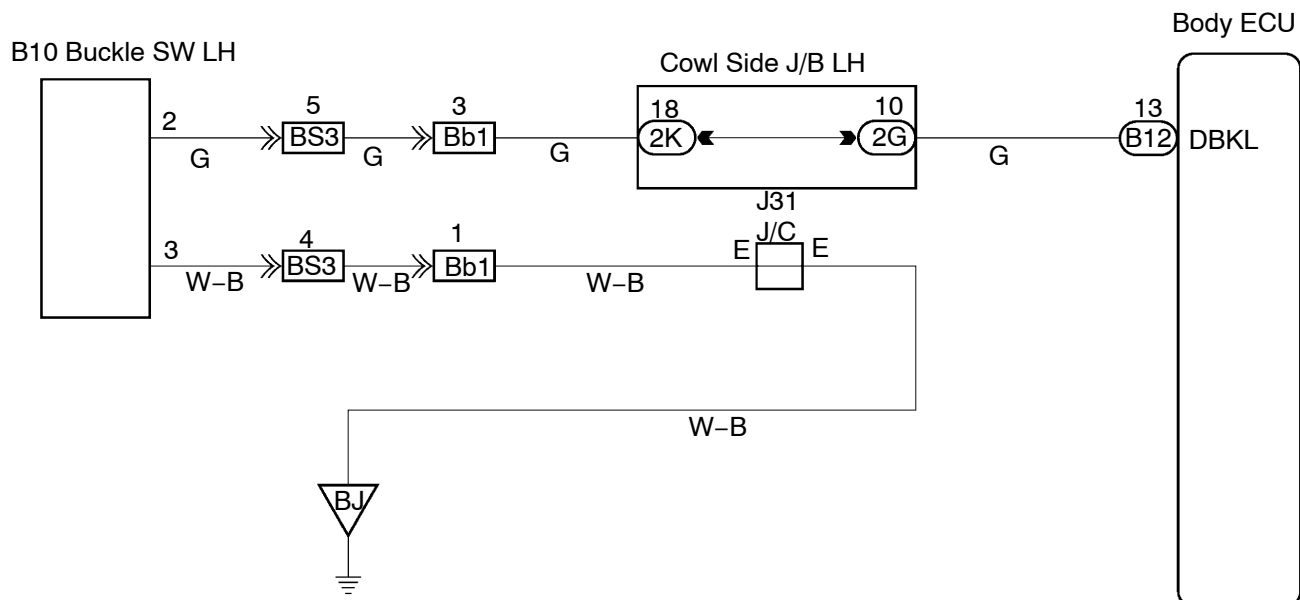

H

I26301

RHD Models w/ Driving Position Memory:

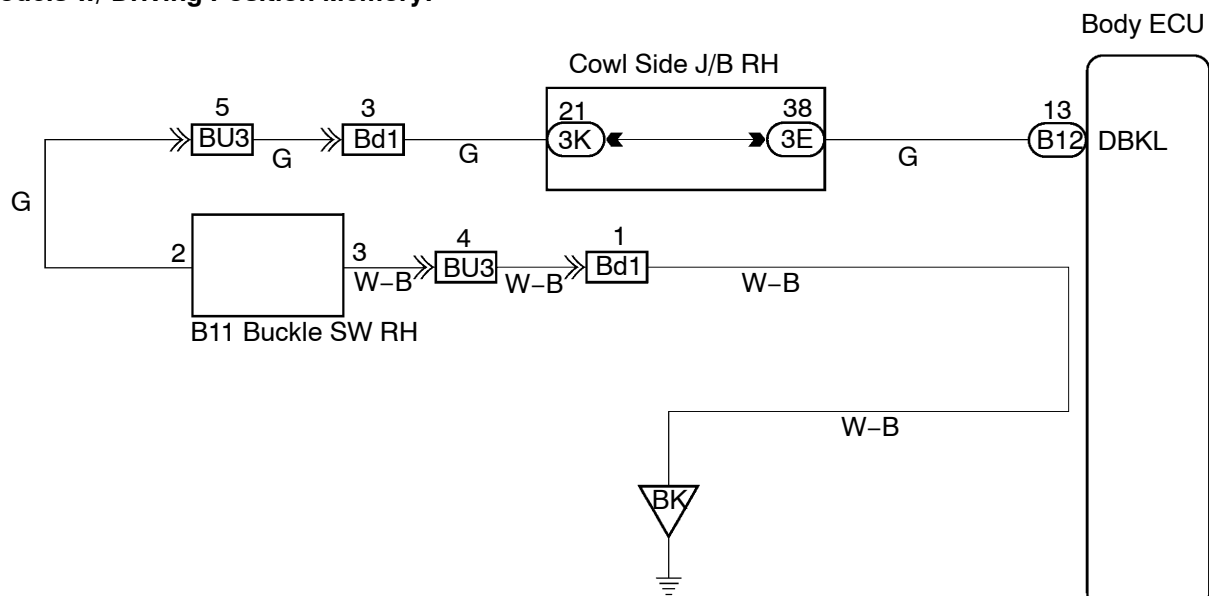

H

I26267

LHD Models w/o Driving Position Memory:



126303

RHD Models w/o Driving Position Memory:



126302

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Check driver seat buckle switch using hand-held tester.

PREPARATION:

Connect the hand-held tester to DLC3.

CHECK:

Check that the driver seat buckle switch operates in DATA LIST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2 Check driver seat buckle switch ([See page BE-41](#)).

NG

Replace the driver seat buckle switch.

OK

3 Check wire harness and connector between driver seat buckle switch and Body ECU ([See page IN-38](#)).

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).