


## Connector Joining Wire Harness and Wire Harness

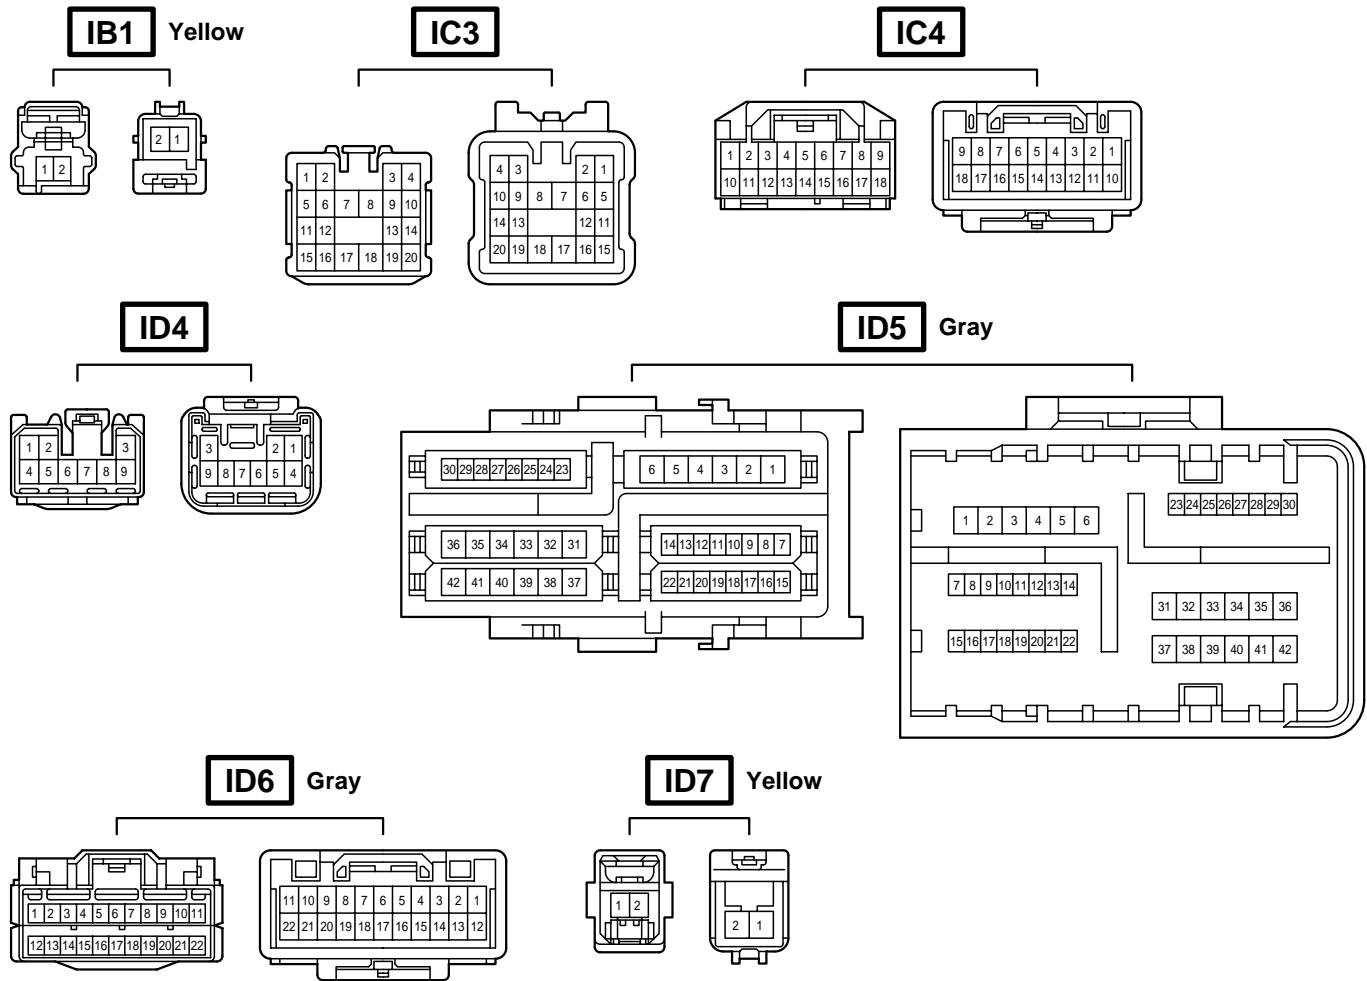

Code	Joining Wire Harness and Wire Harness (Connector Location)
IB1	Engine Room No.2 Wire and Dash Wire (Left Kick Panel)
IC3	Front Door LH Wire and Dash Wire (Left Kick Panel)
IC4	
ID4	Dash Wire and Floor No.1 Wire (Left Kick Panel)
ID5	
ID6	
ID7	