


## Position of Parts in Instrument Panel

[LHD]

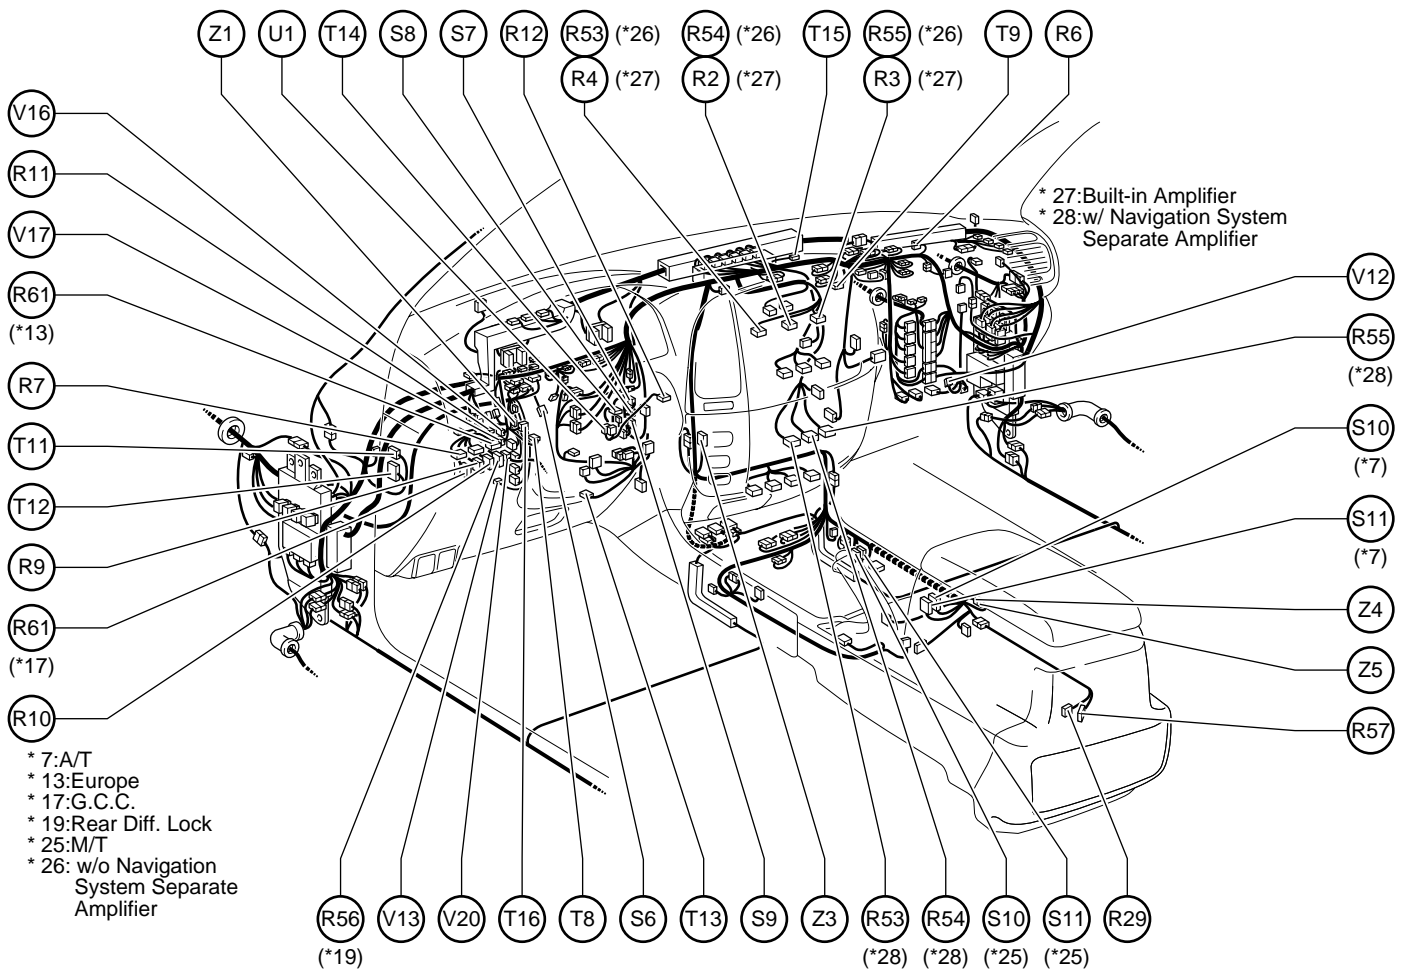

R 2 Radio and Player  
 R 3 Radio and Player  
 R 4 Radio and Player  
 R 6 Rear Diff. Lock Control ECU  
 R 7 Rear Fog Light SW  
 R 9 Remote Control Mirror SW  
 R10 Remote Control Mirror SW  
 R11 Rheostat  
 R12 Room Temp. Sensor (Front)  
 R29 Rear Heater Control SW  
 R53 Radio and Player  
 R54 Radio and Player  
 R55 Radio and Player  
 R56 Rear Diff. Lock Control SW  
 R57 Rear Seat Audio Controller  
 R61 Roll Sensing of Curtain Shield Airbags Cut Off SW

S 6 Stop Light SW  
 S 7 Suspension Control ECU  
 S 8 Suspension Control ECU  
 S 9 Suspension Control ECU  
 S10 Seat Heater SW (Driver's Seat)  
 S11 Seat Heater SW (Front Passenger's Seat)

T 8 Telescopic Motor  
 T 9 Theft Deterrent ECU  
 T11 Tilt and Telescopic ECU  
 T12 Tilt and Telescopic ECU  
 T13 Tilt Motor  
 T14 Ignition Key Cylinder Light  
       Transponder Key Amplifier  
 T15 Transponder Key Computer  
 T16 Turn Signal Flasher

U 1 Unlock Warning SW

V12 Viscous Heater Amplifier  
 V13 VSC Warning Buzzer  
 V16 VGRS ECU  
 V17 VGRS ECU  
 V20 VGRS Actuator

Z 1 Option Connector (Glass Breakage Sensor)  
 Z 3 Option Connector (Radar Sensor)  
 Z 4 Option Connector (Cellular Mobile Telephone)  
 Z 5 Option Connector (Cellular Mobile Telephone)