


Diagnosis Circuit

CIRCUIT DESCRIPTION

This circuit sends a signal to the ECU that DTC output is required.

WIRING DIAGRAM

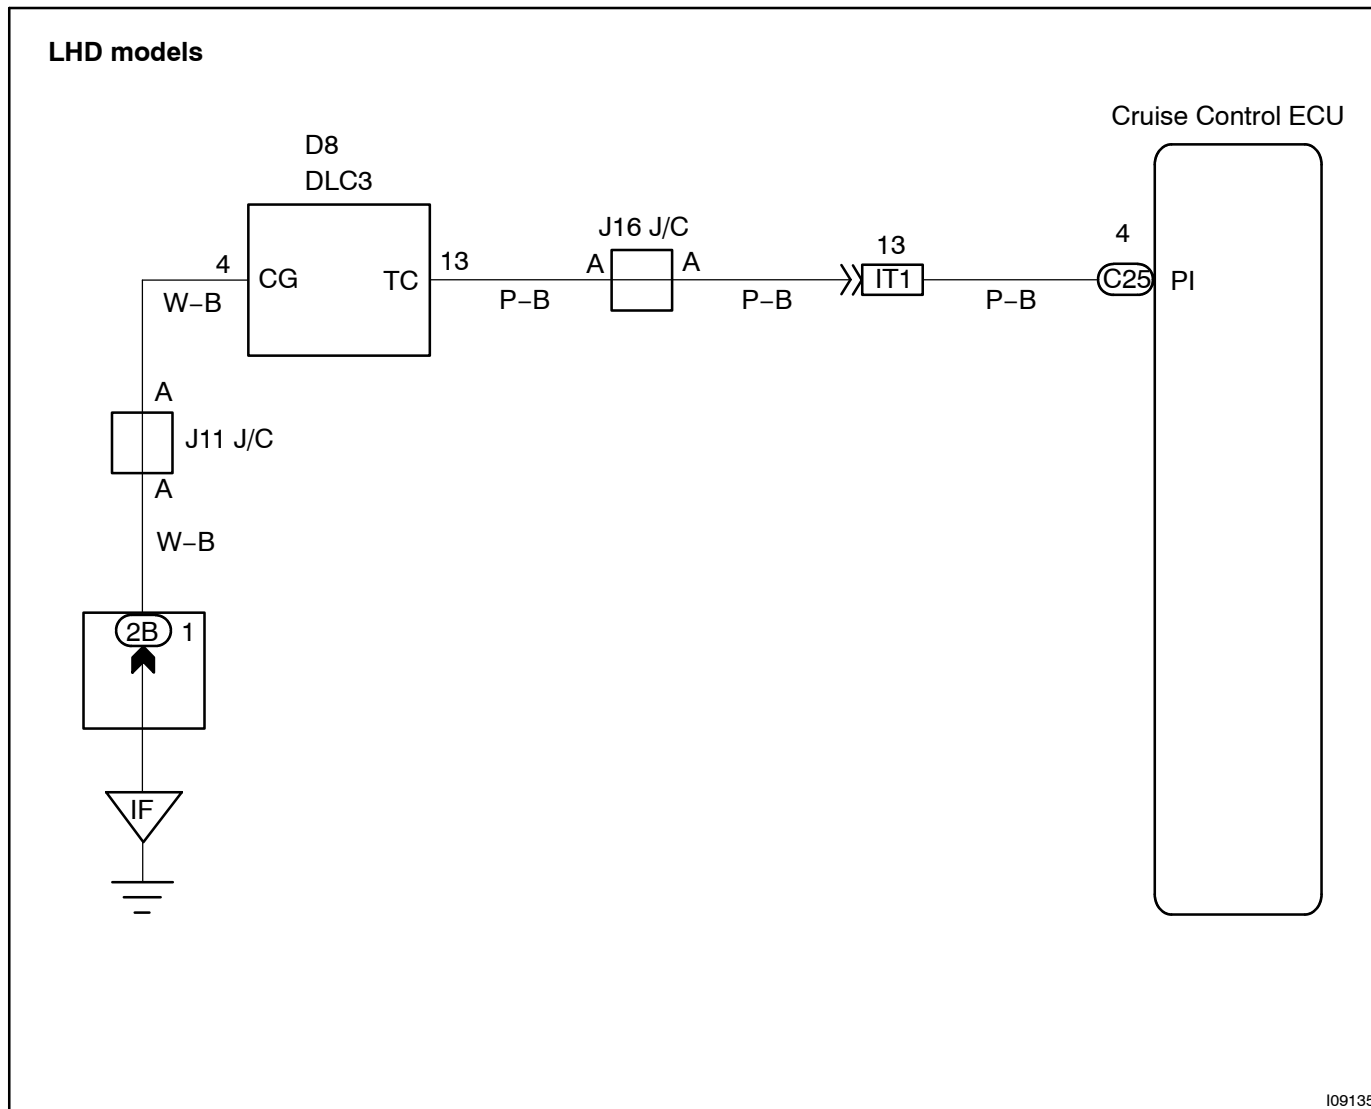

[illegible]

109136

1	Check voltage between terminals A/D and E ₁ of DLC3.
---	---



Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptom table (See page DI-682).

NG

2

Check harness and connector between cruise control ECU and DLC3, DLC3 and body ground (See page IN-35).

NG

Repair or replace harness or connector.

OK

Check and replace cruise control ECU (See page IN-35).